


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0460

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included):

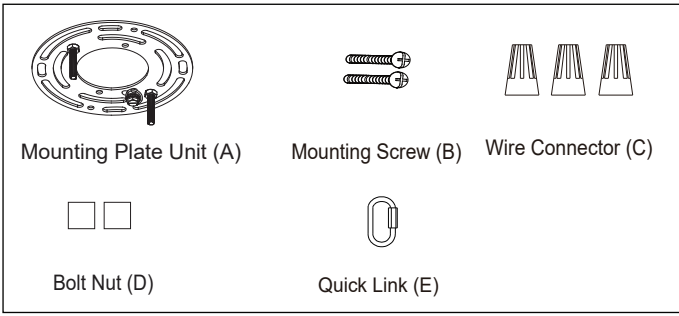

Installation Steps

Turn off the power at fuse or circuit box.

1. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).

Note: The depth of fixture mounting screws on the mounting plate unit may need to be adjusted to properly fit the fixture.

2. Rod Connections:

- a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
- b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
- c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 16-3/4" to 52-3/4". Use fewer rods if shorter length is desired.

3. Thread the fixture wires through the canopy kit, connect the loop and top loop with the quick link (E).


4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:


- Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
- Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
- Attach the fixture ground wire to the mounting plate unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.

5. Attach the canopy kit to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).

6. Attach the glass shade to the socket, then secure it with the socket ring.

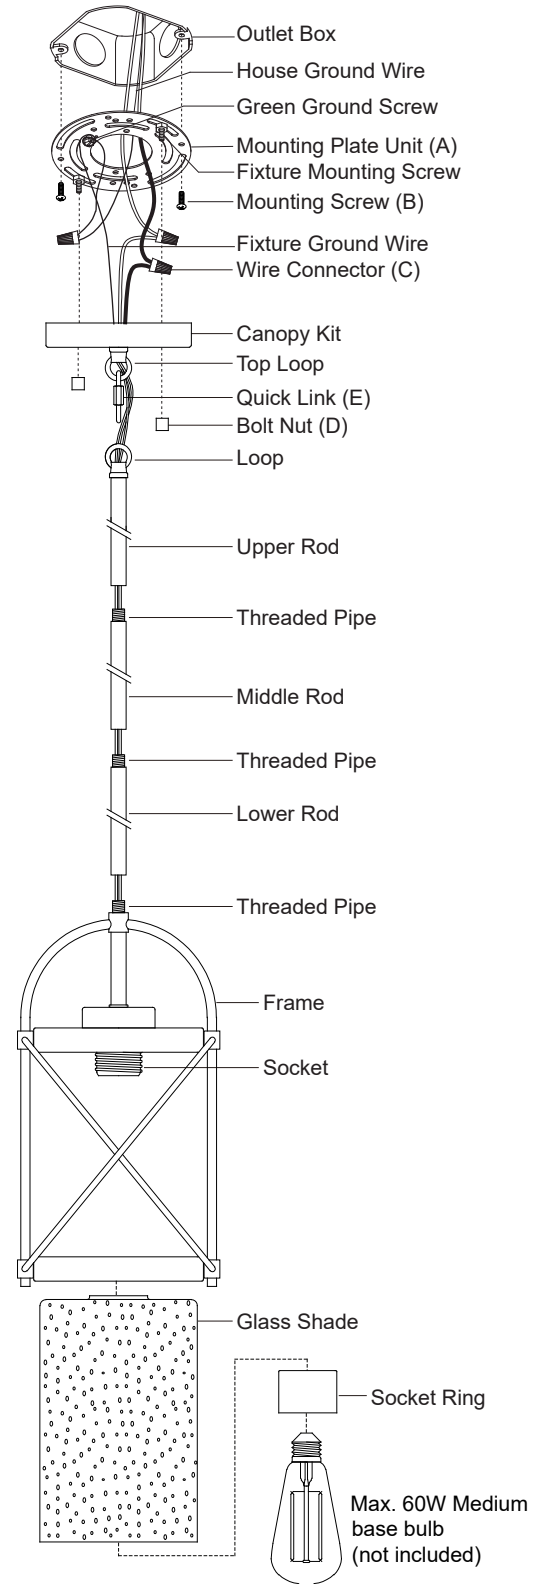

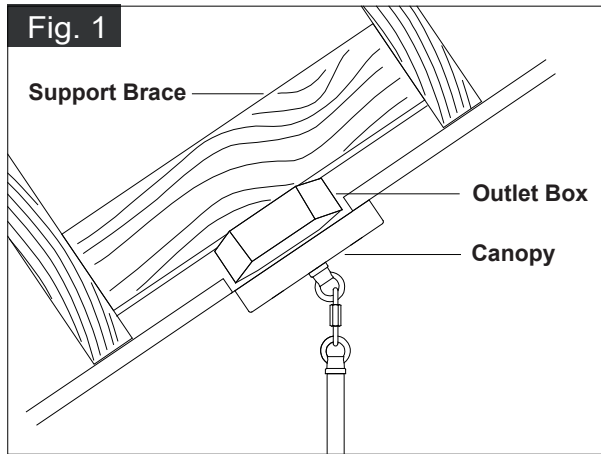



7. Install 1 X 60W Max. medium base bulb (not included).
See relamping label at socket area or packaging for maximum wattage allowed.

8. Angled mounting recommended for a vaulted or angled ceiling.
 (See Fig.1)

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

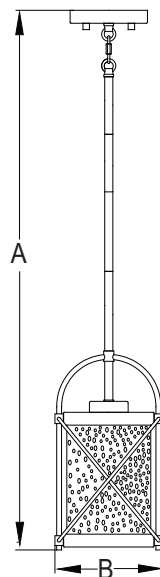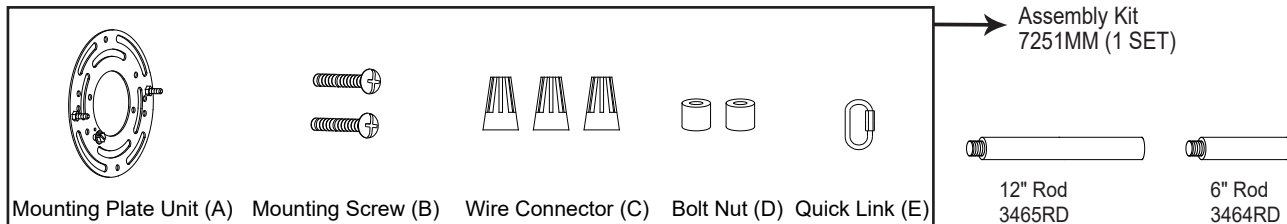

A: 16-3/4"~52-3/4"

B: 6-1/2"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com

1-800-482-9235