

Cuisinart® ClickSmart™ Nonstick Detachable Handle Cookware

GETTING STARTED

- **Wash Before First Use:** Do not submerge the handle. Wipe it clean with a damp cloth. Clean your cookware with warm, soapy water, rinse, and dry thoroughly.
- **Attach Handles Securely:** Ensure the detachable handle clicks **firmly** into place before lifting or moving cookware.
- **Heat Guidelines:** Use low to medium heat for most cooking. Avoid prolonged high heat to maintain nonstick performance.
- Handle should **not** be attached to cookware over a burner **for more than** 10 minutes.
- **Never** let flames spread past the bottom of the pan.
- **Don't Leave Unattended:** Overheating or boiling dry can cause damage to the cookware. If a pan boils dry, turn off the heat and let it cool naturally.
- Cookware body is oven safe up to **500°F**; silicone glass lids up to **350°F**.
- **Remove detachable handle before oven use. Handles are not oven safe.**
- Always use potholders – pans get hot.
- **Do not** use under broiler.
- Detachable Handle is only to be used with Cuisinart® ClickSmart™ Nonstick Detachable Handle Cookware.

CLEANING & CARE

- **The removable handle is not dishwasher safe.** Wipe it clean with a damp cloth.
- Allow cookware to cool before washing.
- Cookware is dishwasher safe, but **hand-washing is recommended** to preserve finish. Use warm, soapy water and a nonabrasive sponge.
- Storage lids are dishwasher safe – **top rack recommended**.
- Do not use steel wool or harsh pads.
- For stubborn residue, add 1 inch of water and 1 tablespoon of non-lemon dish soap. Simmer in water and mild detergent for 15 minutes, cool, then clean.

UTENSILS

- Silicone, nylon, or wood tools are recommended and help extend the lifespan of your cookware.
- Do not use sharp utensils like knives or forks on the nonstick surface.

COOKING TIPS

- **Induction:** Center the pan on the burner for best results.
- **Glass tops:** Lift, don't slide, to prevent scratches.
- **Gas burners:** Keep flames under the pan bottom only.

STORAGE

- Detach handles for compact storage.
- Use the included pan storage protectors when nesting to prevent scratches.

LIFETIME WARRANTY

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Cookware will be free from material defects in materials and workmanship under normal home use conditions throughout the original purchaser's lifetime, beginning on the date this ClickSmart™ Nonstick Detachable Handle Cookware was purchased in its original, sealed packaging, unless otherwise specified in this Lifetime Warranty. This Lifetime Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the ClickSmart™ Nonstick Detachable Handle Cookware from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Lifetime Warranty does NOT cover:

- Normal wear and tear;
- Any ClickSmart™ Nonstick Detachable Handle Cookware purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the ClickSmart™ Nonstick Detachable Handle Cookware after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the ClickSmart™ Nonstick Detachable Handle Cookware, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the ClickSmart™ Nonstick Detachable Handle Cookware, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with ClickSmart™ Nonstick Detachable Handle Cookware instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party may void this Lifetime Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart may void this Lifetime Warranty; and
- Any ClickSmart™ Nonstick Detachable Handle Cookware where the original ClickSmart™ Nonstick Detachable Handle Cookware identification markings (trademark or serial number) have been removed, altered, or obliterated from the ClickSmart™ Nonstick Detachable Handle Cookware.

It is recommended that you visit the website <https://www.cuisinart.com/register-yourproduct.html> for a fast, efficient way to complete your ClickSmart™ Nonstick Detachable Handle Cookware registration. However, ClickSmart™ Nonstick Detachable Handle Cookware registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Lifetime Warranty will be the date of manufacture.

HASSLE-FREE WARRANTY

If the ClickSmart™ Nonstick Detachable Handle Cookware that is the subject of this Lifetime Warranty fails during the warranty period for reasons covered by this Lifetime Warranty, Cuisinart will, at its option, repair the ClickSmart™ Nonstick Detachable Handle Cookware, replace the ClickSmart™ Nonstick Detachable Handle Cookware with another identical or reasonably equivalent ClickSmart™ Nonstick Detachable Handle Cookware, or if Cuisinart is unable to repair or replace the ClickSmart™ Nonstick Detachable Handle Cookware, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the ClickSmart™ Nonstick Detachable Handle Cookware. To obtain a return shipping label, visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the ClickSmart™ Nonstick Detachable Handle Cookware, Cuisinart will inspect the ClickSmart™ Nonstick Detachable Handle Cookware and, if required under this Lifetime Warranty, attempt to repair, replace, or refund the ClickSmart™ Nonstick Detachable Handle Cookware within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming ClickSmart™ Nonstick Detachable Handle Cookware is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the ClickSmart™ Nonstick Detachable Handle Cookware is serviced with the correct parts, and the ClickSmart™ Nonstick Detachable Handle Cookware is still under warranty.

CALIFORNIA RESIDENTS ONLY

The Lifetime Warranty period begins on the date the ClickSmart™ Nonstick Detachable Handle Cookware was delivered, which may be different than the date the ClickSmart™ Nonstick Detachable Handle Cookware was purchased. California residents also have the option of obtaining the benefits of this Lifetime Warranty by bringing the ClickSmart™ Nonstick Detachable Handle Cookware to (A) the store where it was purchased or (B) another retail store that sells Cuisinart ClickSmart™ Nonstick Detachable Handle Cookware of the same type. The retail store shall then, according to its preference, either repair the ClickSmart™ Nonstick Detachable Handle Cookware, refer the consumer to an independent repair facility, replace the ClickSmart™ Nonstick Detachable Handle Cookware with another identical or reasonably equivalent ClickSmart™ Nonstick Detachable Handle Cookware, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the ClickSmart™ Nonstick Detachable Handle Cookware. California residents may also, according to their preference, return nonconforming ClickSmart™ Nonstick Detachable Handle Cookware directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent ClickSmart™ Nonstick Detachable Handle Cookware by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming ClickSmart™ Nonstick Detachable Handle Cookware under warranty.

THIS LIFETIME WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIFETIME WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE CLICKSMART™ NONSTICK DETACHABLE HANDLE COOKWARE), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFETIME WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Lifetime Warranty is issued by:
Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190