

UNTITLED FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS:


- This fixture has been rated 14 Watt Compact Fluorescent standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- If the plug does not fit securely into outlet, do not force it contact a professional electrician.
- Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- The manufacturer and distributor accepts no liability for incorrect installation.
- Maximum Supply Current 1 A

WARNINGS

- All wires are connected; do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
- Do not connect electricity until the lamp is fully assembled.
- To reduce the risk of fire, electrical shock, or personal injury, always turn
 off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on or look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- Suitable for indoor use only.
- If the external flexible cable or cord of this luminaire is damage, it shall be exclusively replace by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.

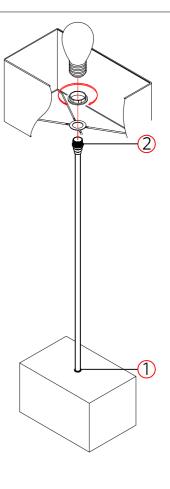

STEP #1:

Tilt the base and install the lower poles underneath by securing with hex nuts, plain washers and lock washers provided. please see sketch below.



- Remove the socket ring from the bulb socket
- Align and insert the shade spider ring into the bulb socket and fasten these with the socket ring.
- Insert the recommended bulb into the bulb socket as shown in sketch.
- Plug into proper electrical outlet and test the fixture.

