


ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0333 / H0334

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.

Hardware Package (included):

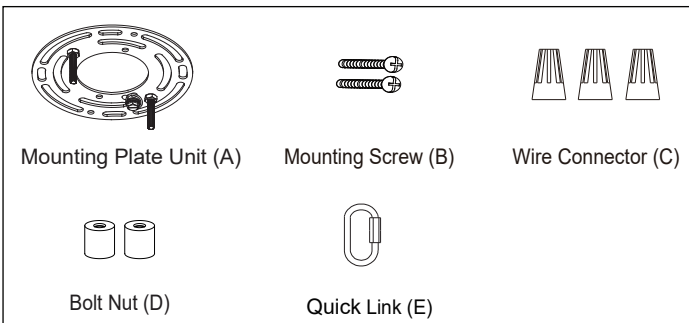

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the bolt nuts (D), remove the mounting plate unit (A) from the canopy kit, then attach it to the outlet box by using two mounting screws (B).
2. Thread the center rod to the fixture.
3. Rod Connections:
 - a. Thread the fixture wires through the lower rod, then secure the lower rod onto the center rod using the threaded pipe.
 - b. Thread the fixture wires through the middle rods and then secure the middle rods onto the lower rod using the threaded pipe.
 - c. Thread the fixture wires through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.


Note: Length adjustable from 21" to 51". Use fewer rods if shorter length is desired.

4. Thread the fixture wires through the loop and the canopy kit, then secure the loop onto the upper rod, connect the loop and canopy kit with a quick link (E).

5. Pull out the source wires from the outlet box, make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated (marked) wire from the fixture to the black (hot) wire from the power source.
 - Connect the ribbed-coated (unmarked) wire from the fixture to the white (neutral) wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw, then connect the fixture ground wire to the house ground wire with a wire connector (C).


Carefully put all of the wires back into the outlet box.

6. Attach the canopy kit to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).

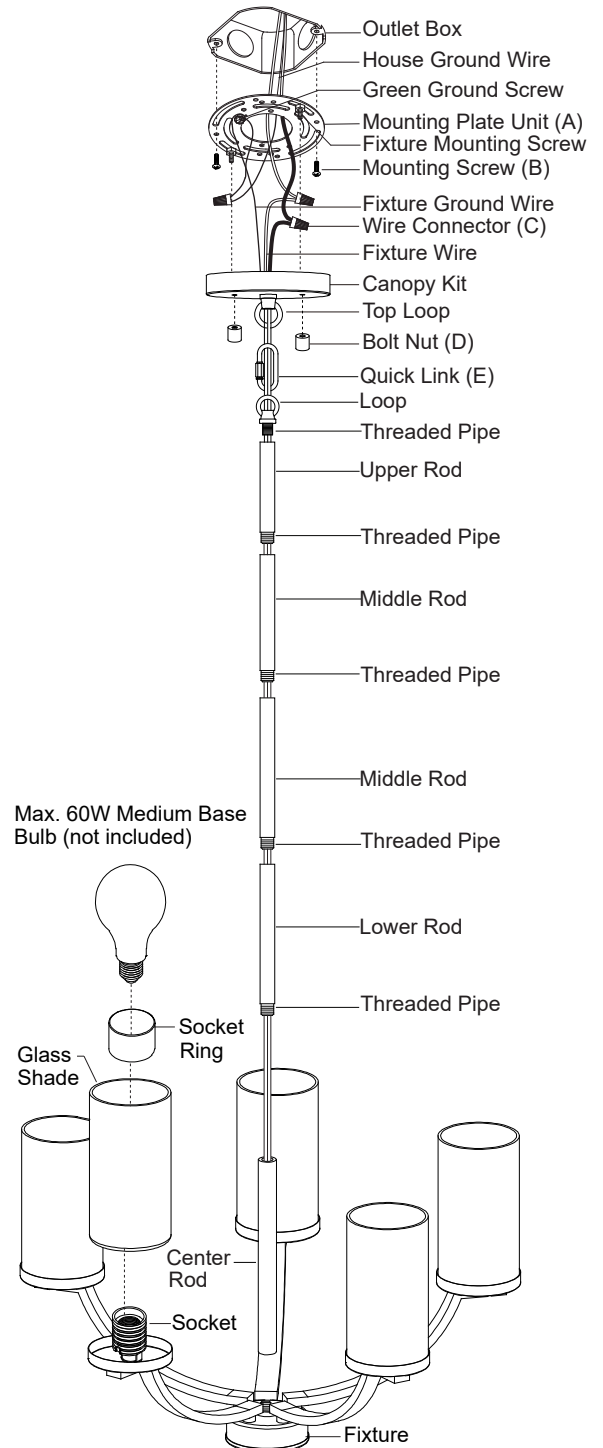


7. Attach the glass shades to the sockets by using the socket rings.
8. Install 5 x 60W Max. medium base bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.
9. Angled mounting recommended for a vaulted or angled ceiling.
(See Fig.1)

Turn on the power at fuse or circuit box.

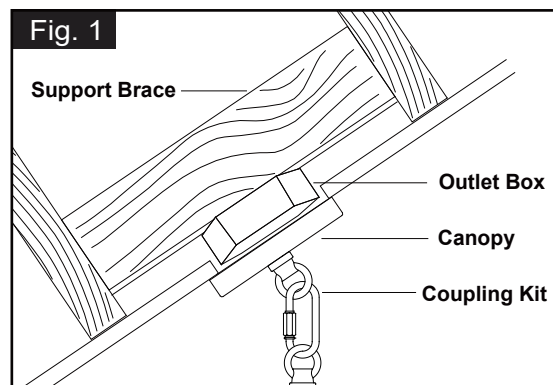

The following parts are available for reorder if damaged or missing.

Spare Parts List:

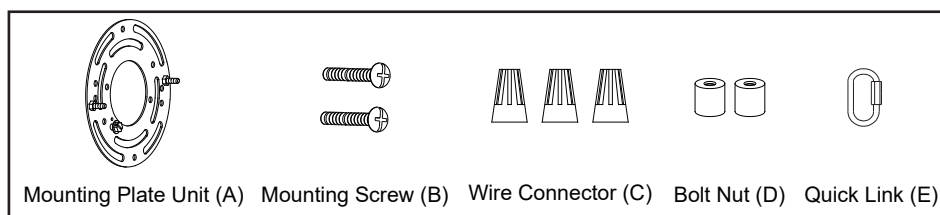


Assembly Kit
7207MM (1 SET) for H0333
7208MM (1 SET) for H0334

6" Rod
3458RD for H0333
3456RD for H0334

12" Rod
3459RD for H0333
3457RD for H0334

Glass Shade
10600CG

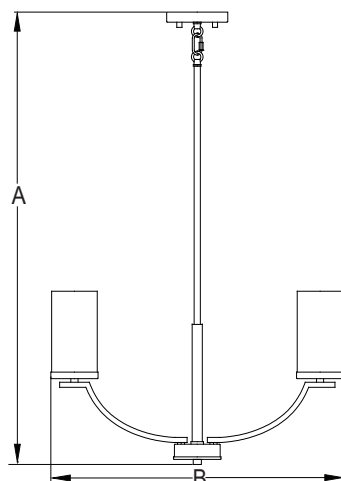

A: 21" ~ 51"

B: 22-3/4"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
1-800-482-9235