


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0437

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instruction.


Hardware Package (included):

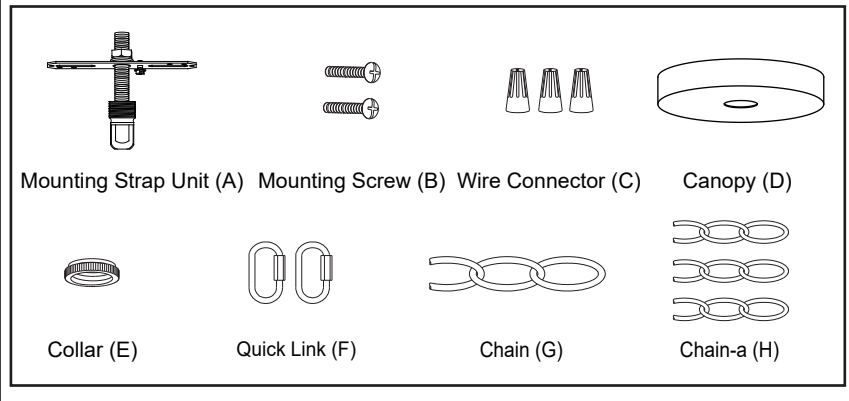

Installation Steps

Turn off the power at fuse or circuit box.

1. Attach the mounting strap unit (A) to the outlet box by using two mounting screws (B).
2. Secure the socket assembly onto the rod by using the threaded pipe, then secure the rod onto the loop by using the threaded pipe.
3. Adjust the length of the chain (G) you needed, then weave the fixture wire and the fixture ground wire through the chain (G), collar (E) and canopy (D).
4. Connect one end of the chain (G) with the loop by using a quick link (F).
5. Connect the other end of the chain (G) with the top loop by using another quick link (F).
6. Pull out the source wires from the outlet box. Make wire connections with wire connectors (C):
 - Connect the smooth wire (marked) from fixture to the black wire from power source.
 - Connect the ridged wire(unmarked) from fixture to the white wire from power source.
 - Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).Carefully tuck wires back into the outlet box.
7. Attach the canopy (D) to the mounting strap unit (A) by inserting the top loop, then secure it with the collar (E).
8. Take one end of a chain-a (H) onto the hook of the loop. Repeat with the other two chains-a (H).

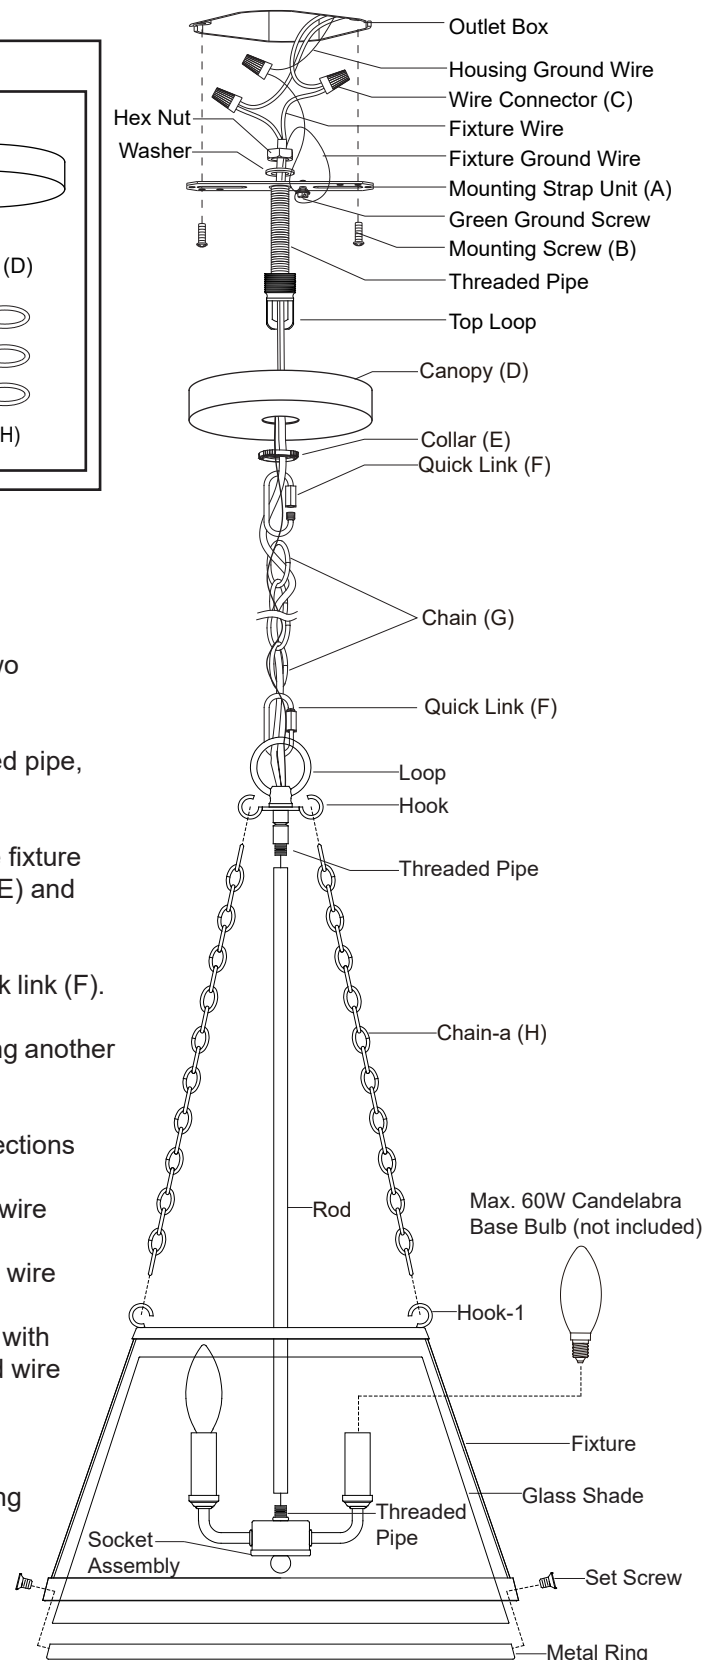

9. Unscrew the three set screws. Remove the metal ring from the fixture, then install the glass shade and secure it with metal ring and three set screws.



10. Attach the other end of the chains-a (H) to the hooks-1 of the fixture.

11. Install 3 x 60W Max. candelabra base bulbs (not included).

See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

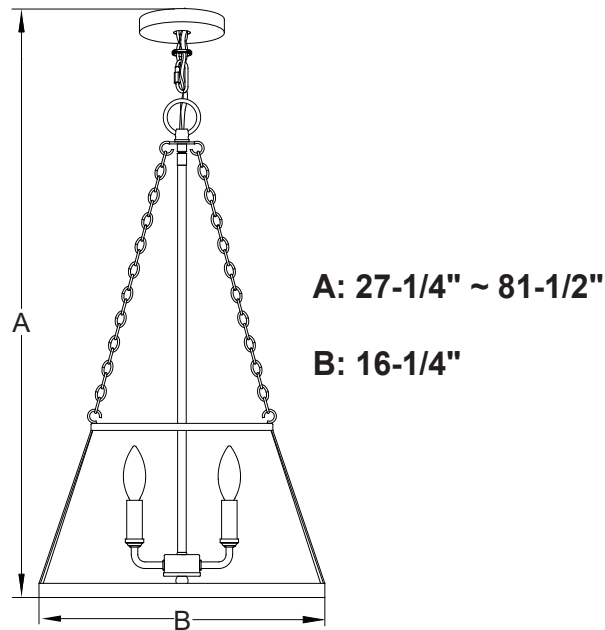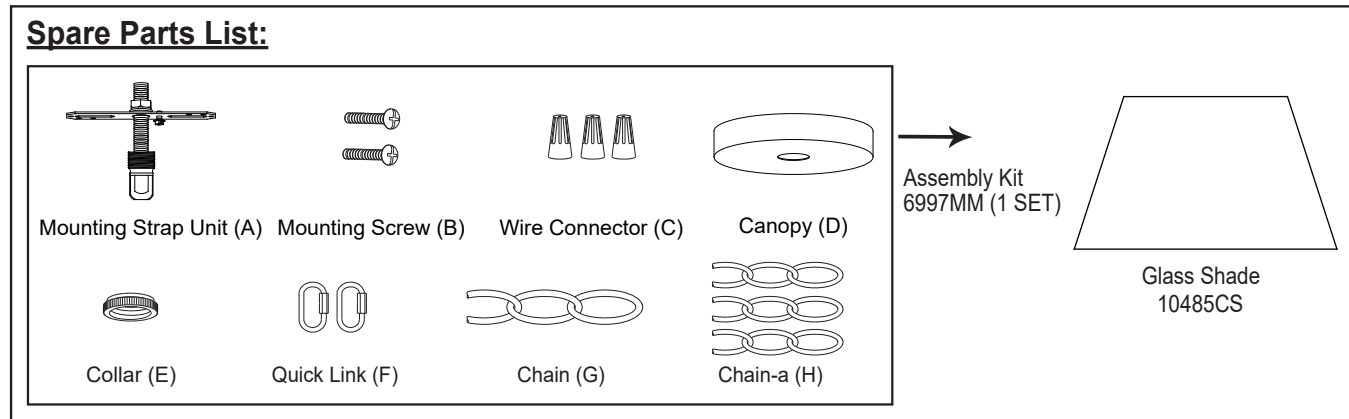

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com

1-800-482-9235

 **VAXCEL**

250324