

PRCP2

PrimeChime Plus 2®

Product Description

The PrimeChime Plus 2® continues to define what a modern doorbell should be. The latest version offers Melody Selection with five different, user selected, ring tones and five different volume levels using a simple single button, voice guided, interface. The PRCP2 combines both line voltage and low voltage into a single unit and offers a paintable, screwless faceplate for simple installation and a seamless look. Separate, selectable, ring tones for front and rear doors allows you to keep track of exactly which door to answer. NICOR's lighted button makes your doorbell easily visible to visitors at all times of day, welcoming them to your home and the improved compatibility with most video doorbell buttons improves security and peace of mind.

Construction

- ABS Housing
- Combines line voltage and low voltage in a single unit
- Screwless ABS Faceplate
- Two-wire pigtail for line voltage input
- Multiple poke-in connectors for low voltage output for front and back doorbells
- Selection push button and indicator light behind face plate

Electrical

- Integrated transformer
- Input: 120VAC/60Hz
- Output: 20VAC
- Digital control board with speaker
- Five selectable chime tones : Ding Dong, Westminster, 3 note, 5 note, and 7 note
- Five selectable chime tone volumes
- Voice guided setup during selection

Finish

- Matte White
- Faceplate is field paintable

Installation

- Installs quickly into a standard two-gang dual-voltage wall box
- Includes two lighted rectangle doorbell buttons
- Compatible with many popular video doorbell buttons
(see compatibility list and/or test for compatibility before installation)
- Daisy chain two PrimeChime Plus 2® units (max 200ft total wire length)*
- Doorbell buttons connect with 18ga-22ga solid wire (max 100ft distance)
- For installations where higher power surge may be possible, NICOR recommends installing additional surge protection at the electrical distribution panels

**each chime requires individual 120VAC input*

Warranty

- 1 year limited system warranty standard
- Warranty does not cover product failure due to an overvoltage event (power surge)

Project

Catalog

Type

Date



PRCP2
Electronic Door Chime
Ring Tone Selectable
Volume Selectable
Video Doorbell Compatible



PRCP2

PrimeChime Plus 2®

Ordering

Ordering Information

Example: PRCP2

Series

PRCP2	_(Blank)
	EB (ecobee adapter kit)
	RG (ring adapter kit)

Accessories

PRCP2BUTTONDBBK	Lighted Decorative Button - Black	PRCP2BUTTONSBAB	Lighted Stucco Button - Antique Brass
PRCP2BUTTONDBCO	Lighted Decorative Button - Copper	PRCP2BUTTONSBBZ	Lighted Stucco Button - Architectural Bronze
PRCP2BUTTONDBNK	Lighted Decorative Button - Nickel	PRCP2BUTTONSBPB	Lighted Stucco Button - Polished Brass
PRCP2BUTTONDBWH	Lighted Decorative Button - White	PRCP2BUTTONSBNK	Lighted Stucco Button - Nickel
		PRCP2BUTTONSBWH	Lighted Stucco Button - White
PRCP2STROBE	Remote Wired Visual Strobe Light		
PRCP2EBADAPT1WH	Adapter for ecobee compatibility		

Specifications and dimensions subject to change without notice.



PRCP2

PrimeChime Plus 2®


Compatibility

Compatible Video Doorbells			
<i>Not a complete list. Call NICOR or test for compatibility before installation.</i>			
Manufacturer	Model	Power Type	Notes
ALC	SightHD Video Doorbell (AWF71D)	Wired	
Alarm.com	VDB770	Wired	2
Amcrest	Video Doorbell (AD110)	Wired	
Arlo	Essential Video Doorbell Wire-free AVD2001 Wireless	Battery	3
Arlo	AVD1001	Wired	
Arlo	AVD4001	Wired	
blink	Video Doorbell (BDM00200U)	Battery	3
ecobee	Smart Doorbell Camera	Wired	5
Eufy	Video Doorbell 2K	Battery	1, 3
Eufy	Video Doorbell 2K	Wired	1
Eufy	Video Doorbell E340	Wired	
Feit	Video Doorbell	Wired	
Google	Nest Doorbell	Battery	3
Google	Nest Doorbell	Wired	
Loxex	B451AJ-Z	Battery	3
Loxex	B451AJ-Z	Wired	
Residio	FIRST ALERT Pro	VX1 HD (CAMW-WDB)	Wired
remo+	RemoBell S		
Ring	Video Doorbell 2	Battery	2, 3, 6
Ring	Video Doorbell 3	Battery	2, 3, 6
Ring	Video Doorbell 3 Plus	Battery	2, 3, 6
Ring	Video Doorbell 4	Battery	2, 3, 6
Ring	Video Doorbell Pro	Wired	2, 6
Ring	Video Doorbell Pro2	Wired	2, 6
Simplisafe	Video Doorbell Pro	Wired	
Skybell	Trim II	Wired	
tapo	D225 Smart Video Doorbell	Battery or Wired	3
Wyze	Video Doorbell v2	Wired	

Notes:

- * To ensure proper operation of the PRCP2, no more than one video doorbells should be attached (Front Door or Back Door)
 - * Have account user name and password and wifi code on hand during setup.
 - * Make sure both chime firmware and App software are fully updated before installation.
 - * Make sure the video doorbell is fully charged prior to installation. Low battery levels may cause abnormal performance
 - * A "power" or "diode" kit should not be installed. The NICOR unit is designed to provide the proper voltage for compatible video doorbells.
- 1) Sync doorbell and chime before installation of the PRCP2.
 - 2) Set to mechanical doorbell setting
 - 3) Have battery fully charged before installation
 - 4) Make sure both chime firmware and App software are fully updated before installation.
 - 5) Must use the the NICOR ecobee adapter - PRCP2EBADAPT1WH
 - 6) Adjust the "Ring tone length" in the App to 2 seconds to avoid multiple chime cycles (see Ring instructions for details).

Dimensions

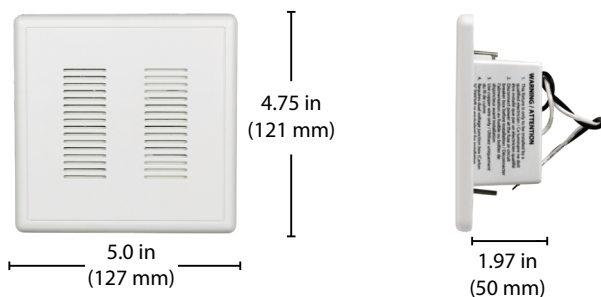

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.