


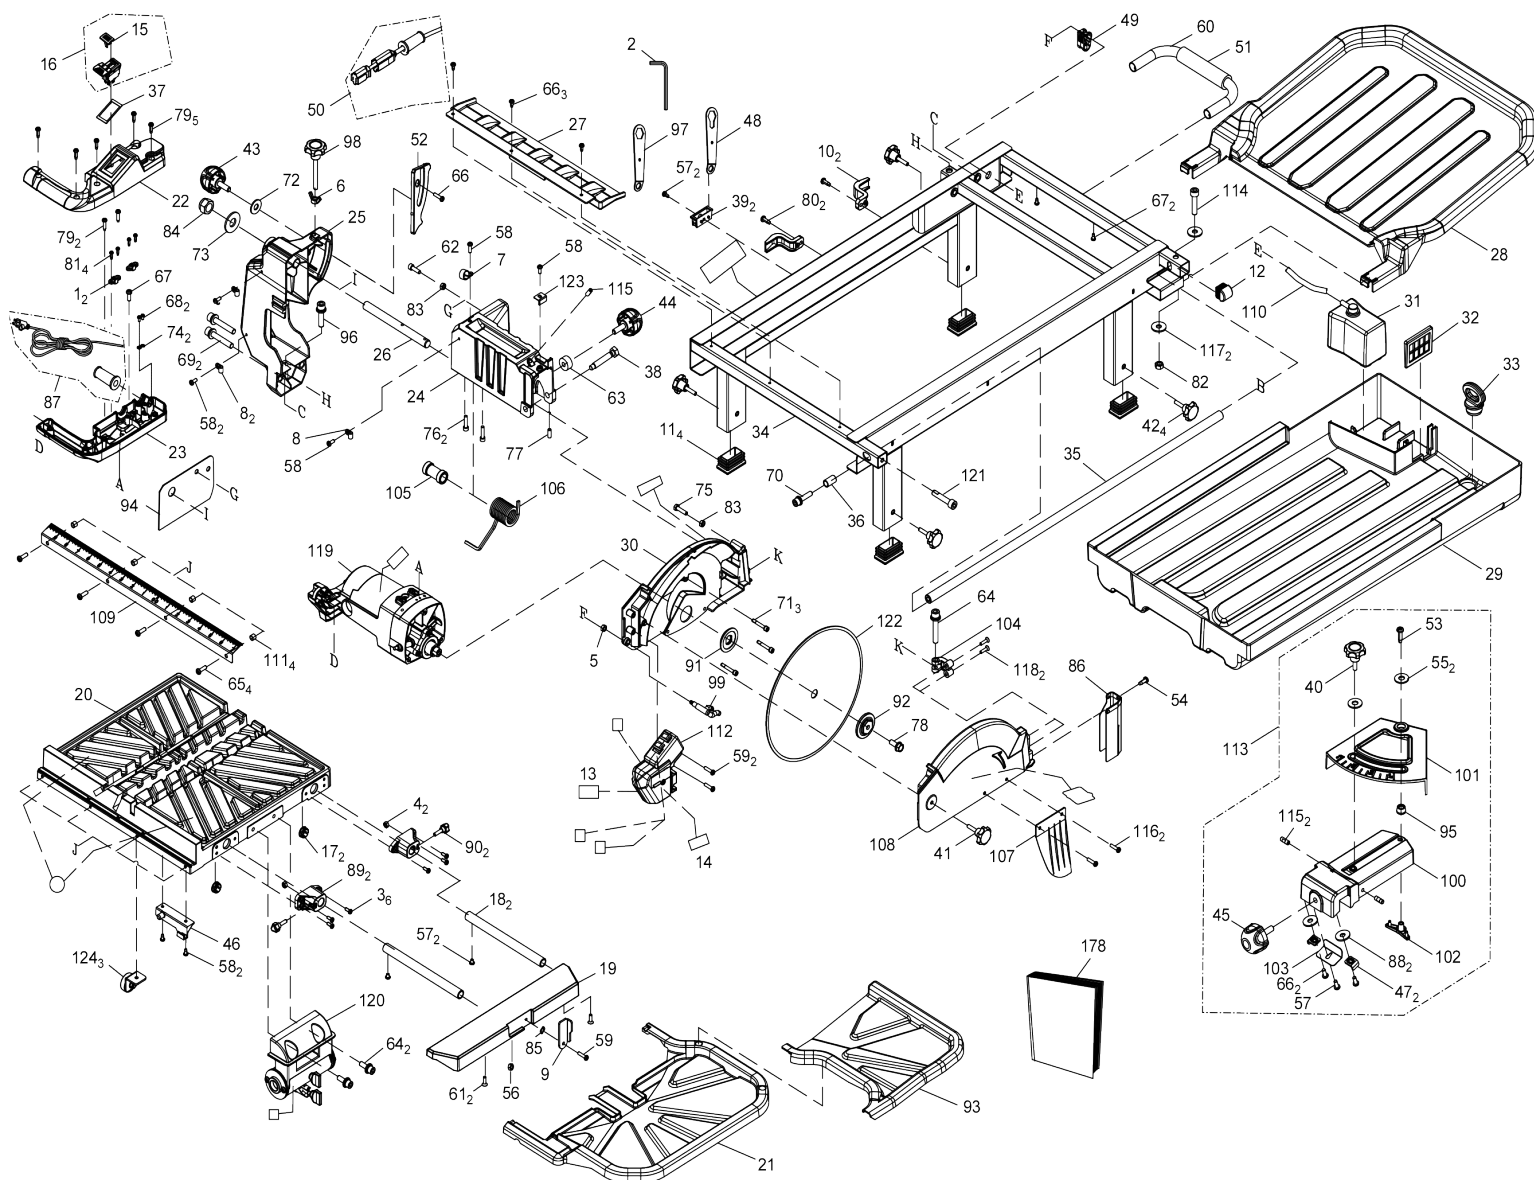

900 XT PRO TILE SAW

61900Q



Replacement Parts List

Item #	Description
61900Q-1	Cord Clamp
61900Q-2	Hex Wrench
61900Q-3	CR. RE. Pan Head Screw

Item #	Description
61900Q-4	Hex. Nut
61900Q-5	Hex. Nut
61900Q-6	Wing Nut

Replacement Parts List

Item #	Description
61900Q-7	Cable Clamp
61900Q-8	Cable Clamp
61900Q-9	Right Plate
61900Q-10	Power Cord Clamp
61900Q-11	End Cap
61900Q-12	Rubber Foot Bush
61900Q-13	Laser Warning Label
61900Q-14	Laser Warning Label
61900Q-15	Switch Key
61900Q-16	Rocker Switch
61900Q-17	Bush
61900Q-18	Upper Tube
61900Q-19	Extension Table
61900Q-20	Table
61900Q-21	Side Water Tray
61900Q-22	Upper Handle
61900Q-23	Lower Handle
61900Q-24	Arm
61900Q-25	Arm
61900Q-26	Center Shaft
61900Q-27	Plate
61900Q-28	Rear Water Tray
61900Q-29	Water Tank
61900Q-30	Left Blade Guard
61900Q-31	Pump
61900Q-32	Inlet Filter
61900Q-33	Rubber Bush
61900Q-34	Base Frame
61900Q-35	Slide Bar
61900Q-36	Sleeve
61900Q-37	Water Proof

Item #	Description
61900Q-38	Special Bolt
61900Q-39	Wrench Set
61900Q-40	Knob
61900Q-41	Knob
61900Q-42	Knob
61900Q-43	Clamp Handle
61900Q-44	Clamp Handle
61900Q-45	Clamp Handle
61900Q-46	Block
61900Q-47	Pointer
61900Q-48	Wrench
61900Q-49	Controller
61900Q-50	Power Cable Assembly
61900Q-51	Foam
61900Q-52	Safe Cover
61900Q-53	CR. RE. Pan Hd. Tapping Screw
61900Q-54	CR. RE. Round Washer Head Screw
61900Q-55	Flat Washer
61900Q-56	Nut Chuck
61900Q-57	CR. RE. Pan Head Screw
61900Q-58	CR. RE. Pan Head Screw
61900Q-59	CR. RE. Pan Head Screw
61900Q-60	Movement Handle
61900Q-61	CR. RE. Count Head Screw
61900Q-62	Hex. Soc. Head Cap Bolt
61900Q-63	Collar
61900Q-64	Hex. Soc. Head Cap Screw
61900Q-65	CR. RE. Pan Head Screw
61900Q-66	CR. RE. Pan Head Screw
61900Q-67	CR. RE. Pan Head Screw
61900Q-68	CR. RE. Pan Head Screw

Replacement Parts List

Item #	Description
61900Q-69	Hex. Soc. Head Cap Screw
61900Q-70	Hex. Soc. Head Cap Screw
61900Q-71	Hex. Soc. Head Cap Screw
61900Q-72	Flat Washer
61900Q-73	Flat Washer
61900Q-74	External Tooth Lock Washer
61900Q-75	Hex. Head Bolt
61900Q-76	Hex. Soc. Head Cap Bolt
61900Q-77	Hex. Soc. Set Screw
61900Q-78	Hex Washer HD Bolt
61900Q-79	CR. RE. Pan Head Tapping Screw
61900Q-80	CR. RE. Pan Head Tapping Screw
61900Q-81	CR. RE. Pan Head Tapping Screw
61900Q-82	Hex. Nut
61900Q-83	Hex. Nut
61900Q-84	Nut Chuck
61900Q-85	Wave Washer
61900Q-86	Plate
61900Q-87	Power Cable Assembly
61900Q-88	Flat Washer
61900Q-89	Location Seat
61900Q-90	Knob
61900Q-91	Arbor Collar
61900Q-92	Arbor Collar
61900Q-93	Water Tray
61900Q-94	Rotation Slide Plate
61900Q-95	Pivot Bar
61900Q-96	Hex. Soc. Head Cap Screw
61900Q-97	Wrench

Item #	Description
61900Q-98	Knob
61900Q-99	Spray Connector
61900Q-100	Width Body
61900Q-101	Miter Gauge
61900Q-102	Slider
61900Q-103	Follower Plate
61900Q-104	Pivot-Support
61900Q-105	Spring Sleeve
61900Q-106	Torsion Spring
61900Q-107	Plate
61900Q-108	Blade Guard
61900Q-109	Scale
61900Q-110	Hose
61900Q-111	Bush
61900Q-112	Laser Assembly
61900Q-113	Rip/Angle Guide (Assembled)
61900Q-114	Hex. Soc. Head Cap Bolt
61900Q-115	Hex. Soc. Set Screw
61900Q-116	CR. RE. Pan Head Screw & Washer
61900Q-117	Flat Washer
61900Q-118	CR. RE. Count Head Screw
61900Q-119	Motor Assembly
61900Q-120	Slide Base Assembly
61900Q-121	Hex. Soc. Head Cap Bolt
61900Q-122	Blade
61900Q-123	Pointer
61900Q-124	Rolling Wheel Assembly
61900Q-178	Instruction Manual