

DVD RDS AV RECEIVER
RÉCEPTEUR A/V RDS DVD
RADIO AV RDS CON DVD

AVH-W4400NEX

Quick start guide
Guide de démarrage rapide
Guía de inicio rápido



English

This guide is intended to guide you through the basic functions of this unit.
For details, please refer to the Operation manual stored on the website.
<http://www.pioneerelectronics.com/PUSA/Car>



Français

Ce guide est destiné à vous guider dans les fonctions de base de cet appareil.
Pour les détails, veuillez vous reporter au Mode d'emploi disponible sur le site Web.
<http://www.pioneerelectronics.com/PUSA/Car>



Español


Esta guía tiene como fin explicar las funciones básicas de esta unidad.
Para obtener más información, consulte el manual de operaciones que se encuentra en el sitio web.
<http://www.pioneerelectronics.com/PUSA/Car>



Notepad / Bloc-notes / Bloc de notas

Selecting the source

: Touch
 : Touch and slide

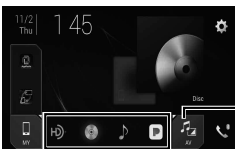

Display the AV source selection screen



Select a source



Display the source list




Select a source

Setting the clock



1 Switch to clock adjustment display

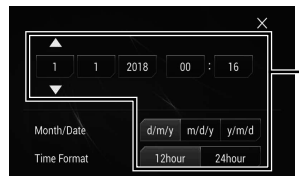

2 Adjust the clock

Tuner operation

Select a band



Tune into the next station if pressed. Start seek tuning if long pressed.

Select a preset station

1 Display preset channels

2 Select a preset channel



Store the strongest broadcast frequencies

Moving images operation

Stop playback

Move ahead one frame

Start the search function

Display the menu

Fast forward and reverse

Pause and start playback

Display the hidden touch panel key

Change the playback point

Operating DVD menu

Select the desired menu item

Stop playback

Move ahead one frame

Start the search function

Display the menu

Fast forward and reverse

Pause and start playback

Display the hidden touch panel key

Change the playback point

Operating DVD menu

Select the desired menu item

Moving images operation

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Scroll the list

Scroll the list title or category name

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Scroll the list

Scroll the list title or category name

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Scroll the list

Scroll the list title or category name

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Audio operation

Switch between media file types

Display a list of track titles/file names to select songs

Display the hidden touch panel key

Change the playback point

Pause and start playback

Set the functions for playing audio

Select a folder

Search for a music by category

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Scroll the list

Scroll the list title or category name

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Scroll the list

Scroll the list title or category name

Display the playlist screen

1 Display the playlist screen

2 Select a category

Select a list title that you want to play

Bluetooth telephone operation

Display the Bluetooth connection menu

Display the preset dial screen

Switch to the phone book mode

Switch to the call history list

Switch the mode to enter the phone number directly

Turn private mode on and off

Adjust the other party's listening volume

Accept an incoming call

End a call

Display the Bluetooth connection menu

Display the preset dial screen

Switch to the phone book mode

Switch to the call history list

Switch the mode to enter the phone number directly

Turn private mode on and off

Adjust the other party's listening volume

Accept an incoming call

End a call

Display the Bluetooth connection menu

Display the preset dial screen

Switch to the phone book mode

Switch to the call history list

Switch the mode to enter the phone number directly

What's What

1 LCD screen

2 VOL (+/-) button

3 button

4 button

5 button

6 button

7 button

8 button

9 RESET button


10 SD card slot

11 Auto EQ microphone input jack


12 Disc-loading slot

Sélection de la source


: Toucher : Toucher et glisser

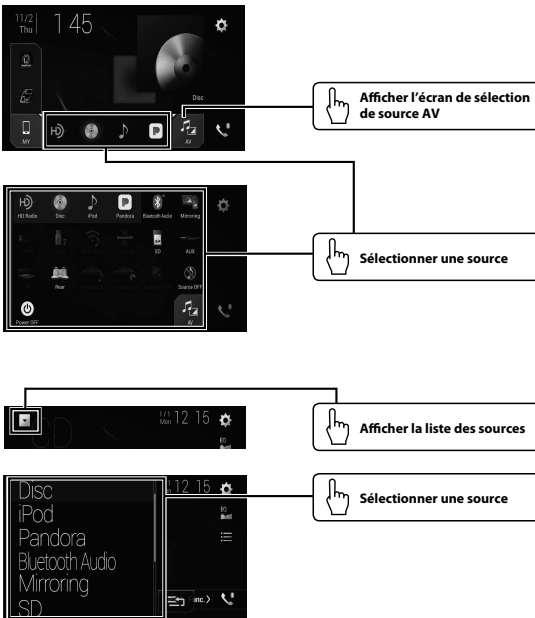


Réglage de l'horloge

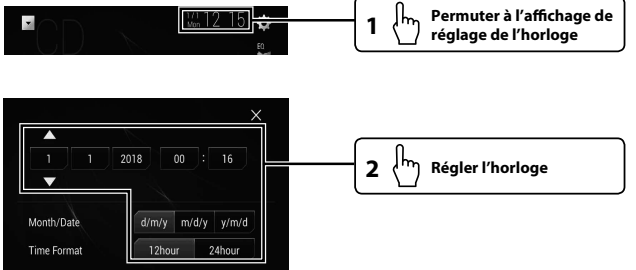


Utilisation du syntoniseur

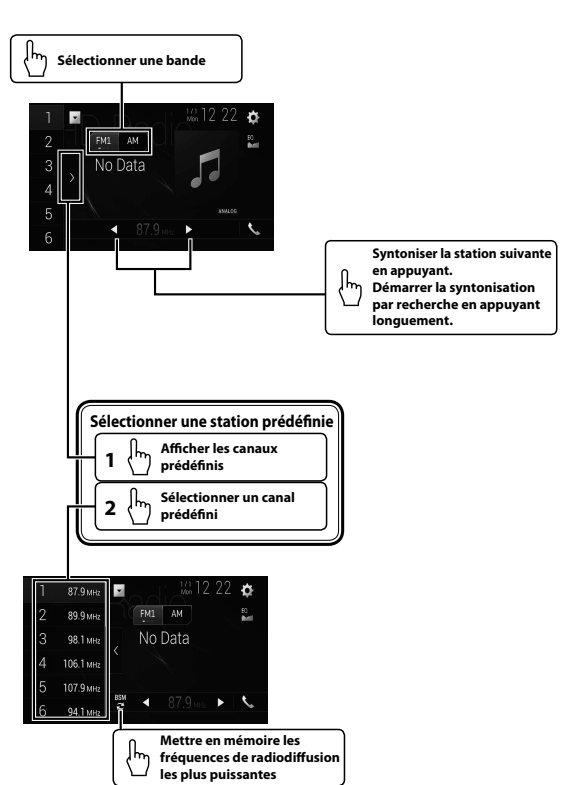


Utilisation des images en mouvement

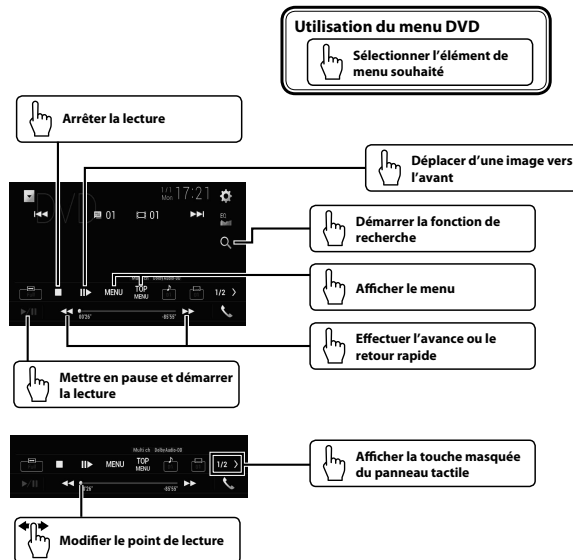


Utilisation des images en mouvement

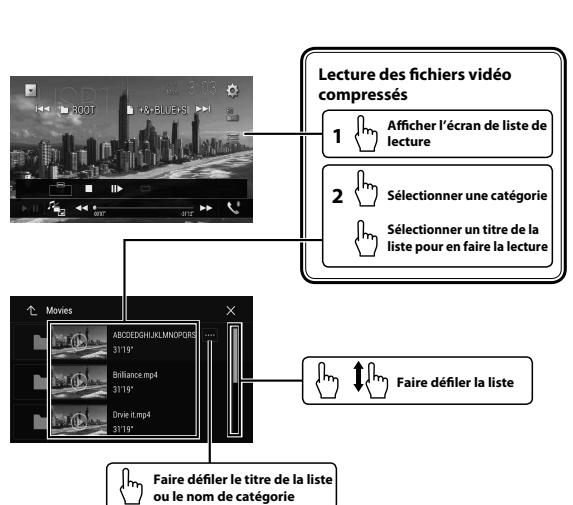


Utilisation des fonctions audio

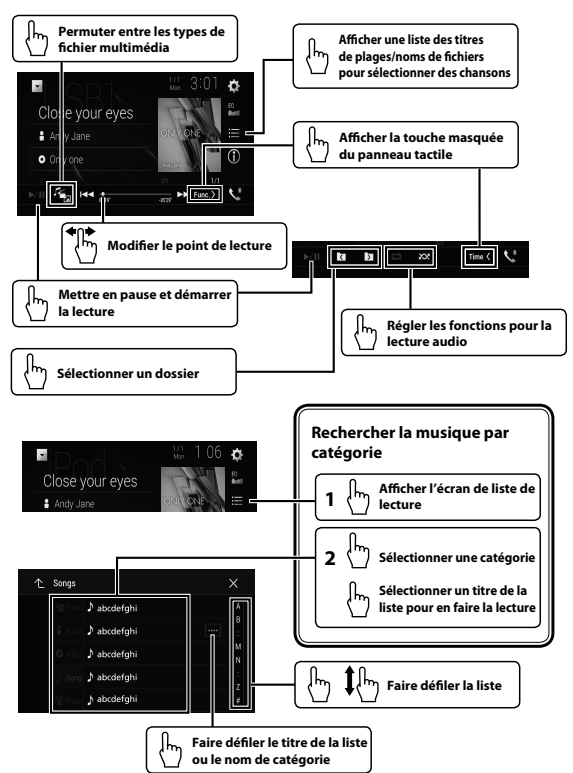





Utilisation d'un téléphone Bluetooth

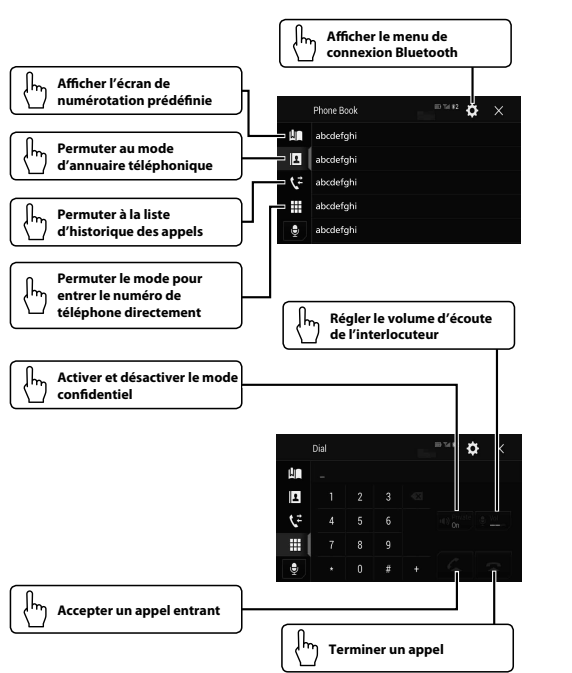



Description de l'appareil

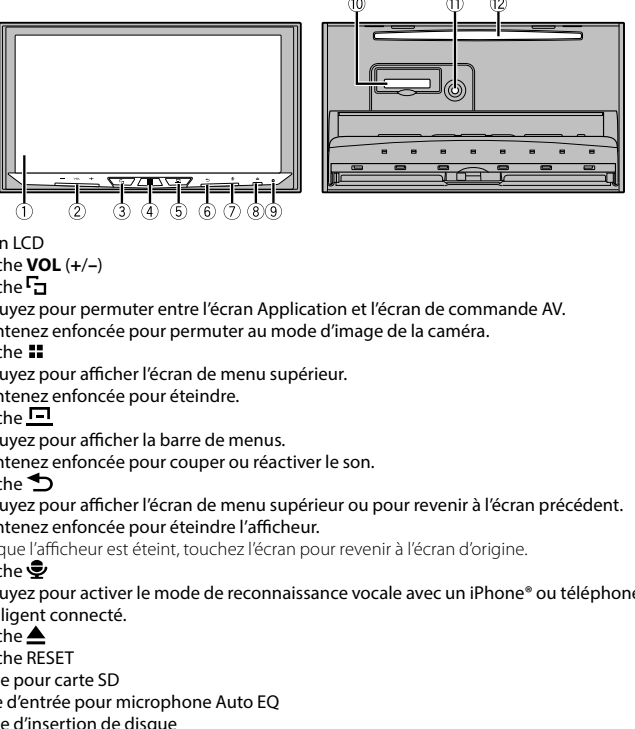


Seleccionar la fuente

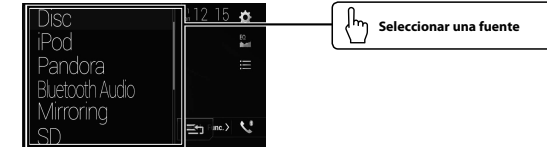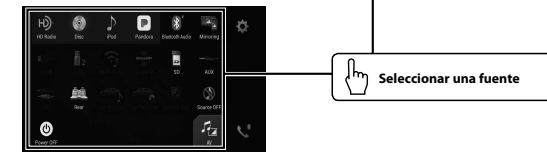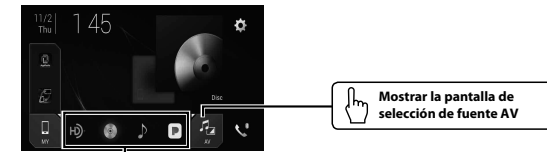 



Configurar el reloj

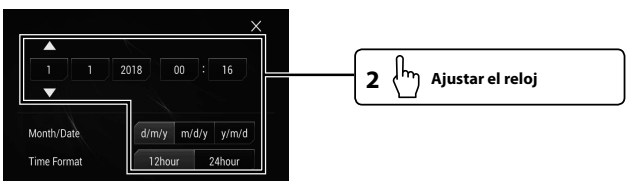 



so del sintonizador

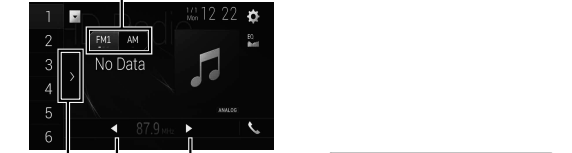



Uso de imágenes en movimiento

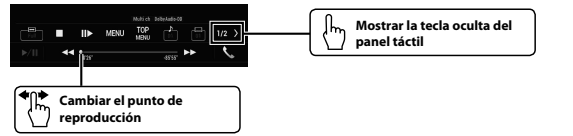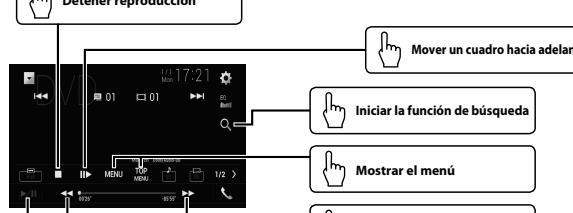


Uso de imágenes en movimiento

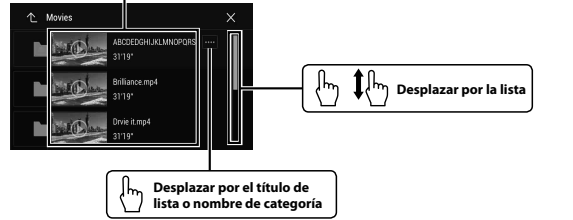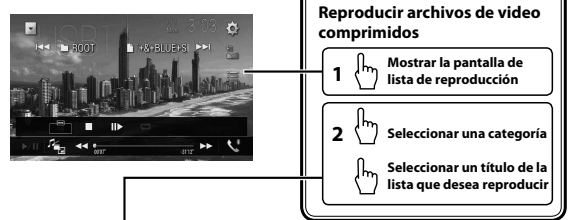


Uso de audio

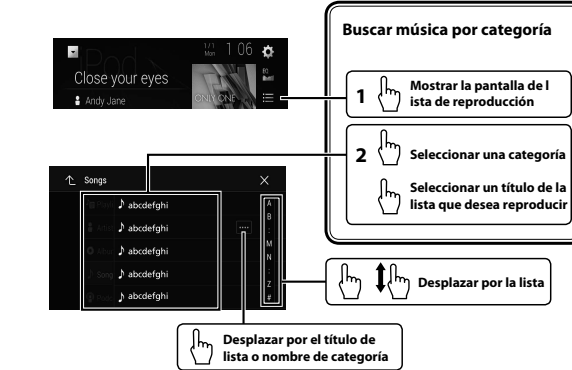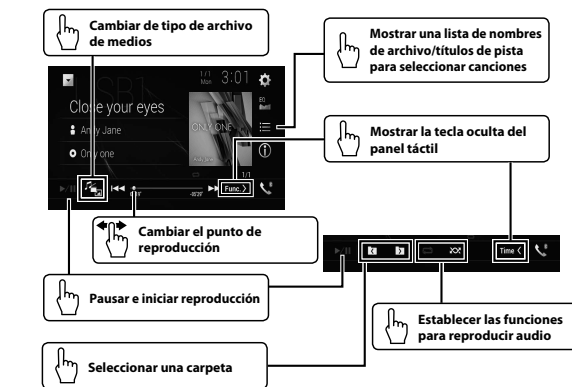

Uso de teléfono Bluetooth

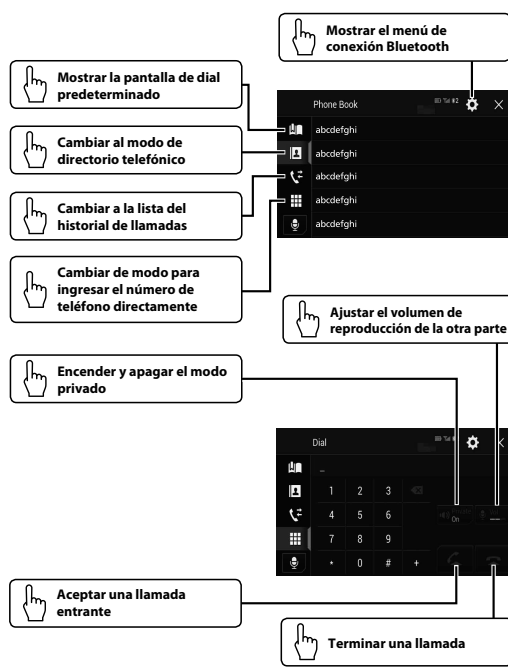

Qué es que

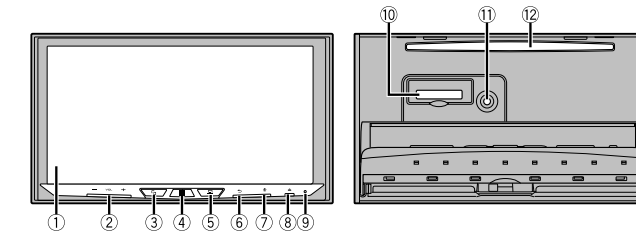

- 1 Pantalla LCD
- 2 Botón **VOL** (+/-)
- 3 Botón 
Pulsar para cambiar entre la pantalla de Aplicación y la pantalla de uso de AV.
Mantener pulsado para cambiar al modo de vista de cámara.
- 4 Botón 
Pulsar para mostrar la pantalla del menú superior.
Mantener pulsado para apagar.
- 5 Botón 
Pulsar para mostrar la barra de menú.
Mantener pulsado para silenciar o activar el sonido.
- 6 Botón 
Pulsar para mostrar la pantalla del menú superior o para regresar a la pantalla anterior.
Mantener pulsado para apagar la pantalla.
- ☐ Cuando la pantalla está apagada, tocar la pantalla para regresar a la pantalla original.
- 7 Botón 
Pulse para activar el modo de reconocimiento de voz con un iPhone® o teléfono inteligente conectado.
- 8 Botón 
- 9 Botón RESET
- 10 Ranura para tarjeta SD
- 11 Toma de entrada del micrófono Auto EQ
- 12 Ranura de carga de discos