

Print Server

Installation Guide

This guide contains installation instructions for the following operating systems:

1. [Windows 10](#)
2. [Windows 8/8.1](#)
3. [Windows Vista/7](#)

In Windows 10, to add a printer to your computer, you need to create a print server port.

Before you create the print server port, you need to configure your print server for the network.

For more information about how to configure your print server, refer to the following FAQ: <https://www.startech.com/faq/print-servers-pm1115u2-alternate-setup>.

To create a print server port, complete the following:

1. Press the **Windows** key.
2. Click **Settings > Devices > Bluetooth > Printers > Mouse > Add a printer > The printer that I want isn't listed**.
3. Select the **Add a local printer or network printer with manual settings** check box, and click **Next**.
4. Select **Create a new port**.
5. Change the type of port to **Standard TCP/IP Port**, and click **Next**.
6. In the **Hostname or IP address** field, enter the IP address of the print server, and click **Next**.
7. Click **Custom > Settings > LPR**.
8. Under **LPR Settings**, enter a **Queue Name**. The queue name can be any set of numbers or letters.
9. Click **OK > Next**.
10. Select a driver from the list, and click **Next**.
11. Click **Next** until you are asked if you want to print a test page. To confirm that the printer was successfully added, send a test page to your printer.

In Windows 8 and Windows 8.1, to add a printer to your computer, you need to create a print server port.

Before you create the print server port, you need to configure your print server for the network.

For more information about how to configure your print server, refer to the following FAQ: <https://www.startech.com/faq/print-servers-pm1115u2-alternate-setup>.

To create a print server port, complete the following:

1. Press the **Windows** key.
2. Click **Control Panel > Hardware and Sound > Devices and Printers > Add a printer > The printer that I want isn't listed**.
3. Select the **Add a local printer or network printer with manual settings** check box, and click **Next**.
4. Select **Create a new port**.
5. Change the type of port to **Standard TCP/IP Port**, and click **Next**.
6. In the **Hostname or IP address** field, enter the IP address of the print server, and click **Next**.
7. Click **Custom > Settings > LPR**.
8. Under **LPR Settings**, enter a **Queue Name**. The queue name can be any set of numbers or letters.
9. Click **OK > Next**.
10. Select a driver from the list, and click **Next**.
11. Click **Next** until you are asked if you want to print a test page. To confirm that the printer was successfully added, send a test page to your printer.

Print Server

Installation for Windows

Install Guide

In Windows Vista and Windows 7, to add a printer to your computer, you need to create a print server port.

Before you create the print server port, you need to configure your print server for the network.

For more information about how to configure your print server, refer to the following FAQ: <https://www.startech.com/faq/print-servers-pm1115u2-alternate-setup>.

To create a print server port, complete the following: