

[Sunix UL7512EQ] Parallel Card

Installation Guide

This guide contains installation instructions for the following operating systems:

1. [Windows](#)

Before you install the driver, make sure that your operating system is current (for example, the most recent service pack is installed).

To install the driver:

1. Right-click the zip folder that you downloaded, click **Extract All**, and complete the instructions.
2. In the list of extracted files, right-click the **Setup.exe** file and click **Run as Administrator**.

Note: If the **Run as Administrator** option is not available, you might be trying to run the installer from within the zipped file. Complete the instructions in step 1 to extract the files.

3. Complete the instructions to install the device drivers, and restart your computer when prompted to.
4. Your computer will automatically complete the driver installation and your device should be ready to use.