

[Realtek RTL8812AE] Windows Wireless Network Card Installation Guide

This guide contains installation instructions for the following operating systems:

1. [Windows](#)

Prior to installing this device, ensure that your operating system is up to date (for example, you have installed the most recent service pack).

To install the driver:

1. Once the download is complete, right-click the zip folder that you downloaded, select **Extract All**, and follow the on-screen instructions.
2. Select the appropriate folder for your operating system.
3. Right-click **Setup.exe**.
4. Click **Run as Administrator**.

Note: If the **Run as Administrator** option is not available, you might be attempting to run the installer from within the zipped file. Extract the files using the instructions in Step 1.

5. Follow the on-screen prompts to install the device drivers and restart the computer when prompted.
6. Your computer will automatically complete the driver installation and your device should be ready to use.