

# [Ralink] Network Adapter

## Installation Guide

---

This guide contains installation instructions for the following operating systems:

1. [Windows](#)

# [Ralink] Network Adapter

## Installation for Windows

### Install Guide

Prior to installing this device, ensure that your operating system is up to date (for example, you have installed the most recent service pack).

#### To install the driver:

1. Right-click the zip folder that you downloaded, select **Extract All**, and follow the on-screen instructions.
2. Right-click **Setup.exe**.
3. Click **Run as Administrator**.

**Note:** If the **Run as Administrator** option is not available, you might be attempting to run the installer from within the zipped file. Extract the files using the instructions in Step 1.

4. During the installation, you will be prompted to install only the drivers or also the Ralink WLAN Utility software. If you wish to use the built-in Windows utility to set up your wireless connection, only install the drivers. If you do not wish to use the built-in Windows Utility (Zero Configuration Utility), install the Ralink WLAN Utility software.

**Note:** You can switch to using the Windows Utility at any time.

5. Restart the computer when prompted.
6. Your computer will automatically complete the driver installation and your device should be ready to use.