



- 1, Make sure the PC and print server in the same network and powered on.
- 2, Open the file "USB Server".



- 3, Once the print server is located, right click and select "Server Configurations"

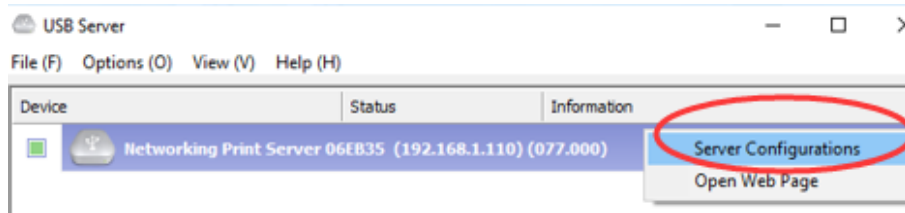


- 4, Click "Update Firmware" button.

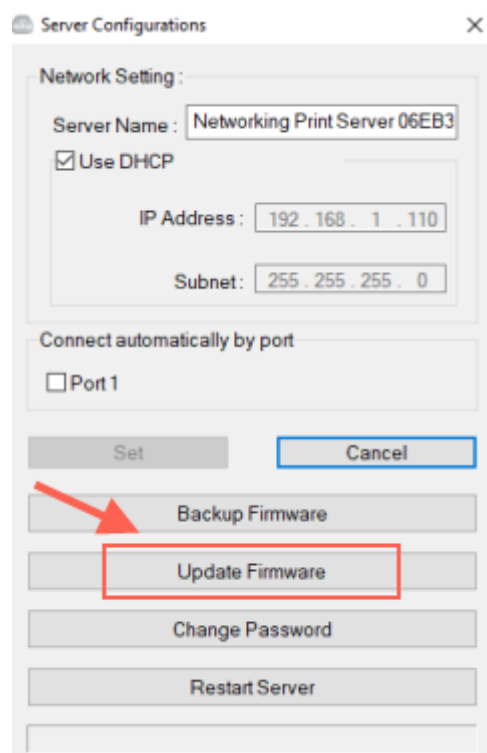

- 5, Choose the file named "FW_72P11_2.077_GUI.bin"

CreateShortcut	2018/11/30 17:27	应用程序	236 KB
DCPDLL.dll	2018/11/30 17:27	应用程序扩展	252 KB
ESTLogDLL.dll	2018/11/30 17:27	应用程序扩展	88 KB
FW_72P11_2.077_GUI.bin	2018/11/30 17:27	BIN 文件	513 KB
Print server client upgrade manual	2018/11/30 17:28	DOCX 文档	73 KB
PSMDLL.dll	2018/11/30 17:27	应用程序扩展	492 KB
UNTPDLL.dll	2018/11/30 17:27	应用程序扩展	112 KB
USB Server	2018/11/30 17:27	应用程序	1,916 KB

6, Wait for update to complete.

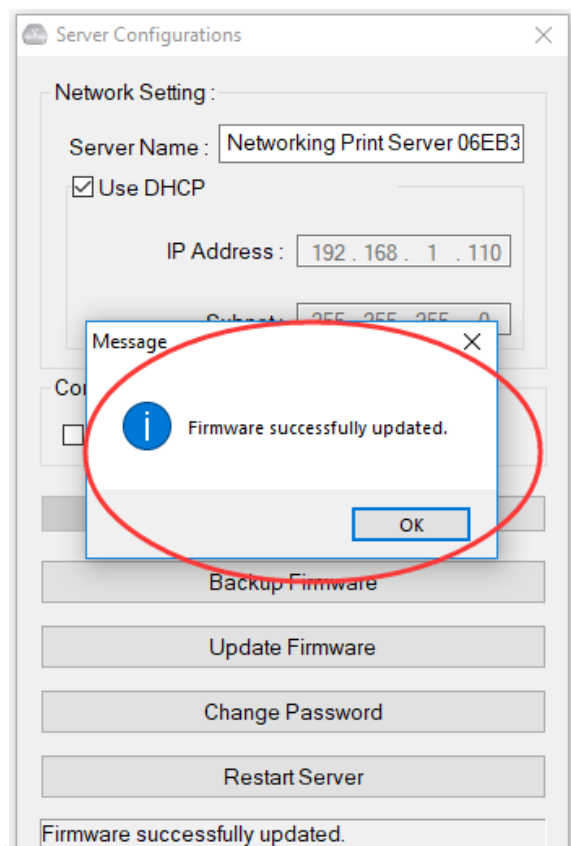

7, Power cycle the print server.