

PM1115U2 Ethernet to USB Print Server

FAQs

This document contains some helpful FAQs should you run into any issues:

1. What is this devices default static IP address?
2. How do I access the web interface of my print server?

What is this devices default static IP address?

FAQ

This device has Dynamic Host Configuration Protocol (DHCP) enabled by default, and will be assigned an IP address by your router when connected to your network.

You can determine the IP address of the unit in one of the following ways:

- Use the Windows Network Printer Wizard to determine the IP address.

View the router's DHCP table to determine the IP address. The print server should be listed with a MAC address starting with 80:3F:5D.

How do I access the web interface of my print server?

FAQ

To determine the IP address of the PM1115U2, do one of the following:

- Use the Windows Network Printer Wizard to determine the IP address.
- View the router's DHCP table to determine the IP address. The print server should be listed with a MAC address starting with 80:3F:5D.

To access the print server web interface, complete the following:

1. Make sure that the computer is on the same network as the PM1115U2.
2. In an Internet browser, enter the IP address of the PM1115U2.
3. Click **Login**.