

[ASIX AX88772C] USB Ethernet

Adapter Installation Guide

This guide contains installation instructions for the following operating systems:

1. [Windows \(EXE\)](#)
2. Windows (INF)

USB Ethernet Adapter

Installation for Windows (EXE)

Install Guide

Prior to installing this device, ensure that your operating system is up to date (for example, you have installed the most recent service pack).

To install the driver:

1. Right-click the zip folder that you downloaded, select **Extract All**, and follow the on-screen instructions.
2. Right-click **Setup.exe**.
3. Click **Run as Administrator**.

Note: If the **Run as Administrator** option is not available, you might be attempting to run the installer from within the zipped file. Extract the files using the instructions in Step 1.

4. Follow the on-screen prompts to install the device drivers and restart the computer when prompted.
5. Your computer will automatically complete the driver installation and your device should be ready to use.

USB Ethernet Adapter

Installation for Windows (INF)

Install Guide

Before you install the device, make sure that your operating system is current (for example, the most recent service pack is installed).

To install the driver:

Right-click the zip folder that you downloaded, click **Extract All**, and complete the instructions.

Press the **Windows** key + **R**, type **devmgmt.msc**, and press **Enter** to open the Device Manager.

Right-click **AX88179**, which will have a "!" or "?" next to it to indicate a driver issue.

Click **Update Driver**.

Click **Browse my computer for driver software**.

Select the **Let me pick from a list of device drivers on my computer** option.

On the **Select your device's type from the list below** screen, click **Show All Devices**, and click **Next**.

Note: The **Select your device's type from the list below** screen does not appear on all systems. If you do not see this screen, skip this step.

Select the **Have Disk** option.

Browse to the **AX88179\Windows\your_operating_system\Manual Drivers** folder and open the **32-bit** or the **64-bit** folder, depending on your system type.

Note: To view your system type, click **Start**. Right-click **Computer**, and then click **Properties**.

Click the **Ax88179_178a** file. Click **OK**, and then click **Next**.