

[Silicon Image] eSATA Controller

Installation Guide

This guide contains installation instructions for the following operating systems:

1. [Windows](#)

Before you install the device, make sure that your operating system is current (for example, the most recent service pack is installed).

To install the driver:

1. Right-click the zip folder that you downloaded, click **Extract All**, and complete the instructions.
 2. Press the **Windows** key + **R**, type **devmgmt.msc**, and press **Enter** to open the Device Manager.
 3. Right-click **SCSI and RAID Controllers**, which will have a "!" or "?" next to it to indicate a driver issue.
 4. Click **Update Driver**.
 5. Click **Browse my computer for driver software**.
 6. Select the **Let me pick from a list of device drivers on my computer** option.
 7. On the **Select your device's type from the list below** screen, click **Show All Devices**, and click **Next**.
- Note:** The **Select your device's type from the list below** screen does not appear on all systems. If you do not see this screen, skip this step.
8. Select the **Have Disk** option.
 9. Browse to the extracted folder from Step 2.
 10. Open the **Windows** folder.
 11. Open the **Manual Drivers** folder.
 12. Open the folders as appropriate for your system type and hardware.

[Silicon Image] eSATA Controller

Installation for Windows

Install Guide

Note: To view your system type, click **Start**. Right-click **Computer**, and then click **Properties**.

13. Click the **SI3132.inf** file. Click **OK**, and then click **Next**. Additional device listings will appear in Device Manager.

14. . Complete steps 3 to 10 for each of the new device listings.