

Aimpoint®

Acro P-2™ User manual



1 PRESENTATION

Aimpoint® red dot sights are designed for the "two eyes open" method which greatly enhances situational awareness and target acquisition. Thanks to the optical design the red dot follows the movement of the user's eye while remaining fixed on target, eliminating any need for centering.


1.1 Technical specification

Optical system

Magnification	1X
---------------	----

Eye relief	Unlimited
------------	-----------

Clear aperture	
----------------	--

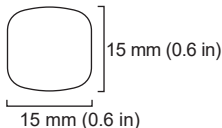

Dot size	2.5 MOA ¹ / 3.5 MOA
----------	--------------------------------

NVD ² compatible	Yes
-----------------------------	-----

Optical coating	Anti-reflex (AR) coating
-----------------	--------------------------

Adjustments	1 click = 2 cm at 100 m = = 0.7 in at 100 yds
-------------	--

Adjustment range (windage and elevation)	±1 m at 100 m ±1 yds at 100 yds
---	------------------------------------

Dot intensity settings	10 settings manually adjusted with push-buttons. Setting 1-4 for use with NVD and setting 5-10 for use in daylight.
------------------------	---

Dot color	Red
-----------	-----

Signature	No forward optical signature from the dot beyond 10 meters
-----------	--

Power source

Battery type	CR2032 (3.0 V) Lithium
--------------	------------------------

Battery life ³	50,000 h at daylight setting 6.
---------------------------	---------------------------------

Size (L × W × H)


Sight	47 mm × 33 mm × 31 mm (1.9 in × 1.3 in × 1.2 in)
-------	---

Weight

Sight (incl. battery)	61 g (2.2 oz)
-----------------------	---------------

Height of optical axis

Sight with integrated mount

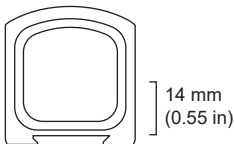

Materials

Sight housing	High strength aluminum, black to dark gray, non-glare finish
---------------	--

Environmental specification

Temperature range (operation)	-45 °C to +71 °C (-50 °F to +160 °F)
Temperature range (storage)	-51 °C to +71 °C (-60 °F to +160 °F)
Submersible	35 m / 115 ft

1 MOA: Minute Of Angle, 1 MOA \approx 30 mm at 100 m or \approx 1" at 100 yds

2 NVD: Night Vision Device

3 Battery life: Values valid at room temperature for a quality battery

1.2 Overview

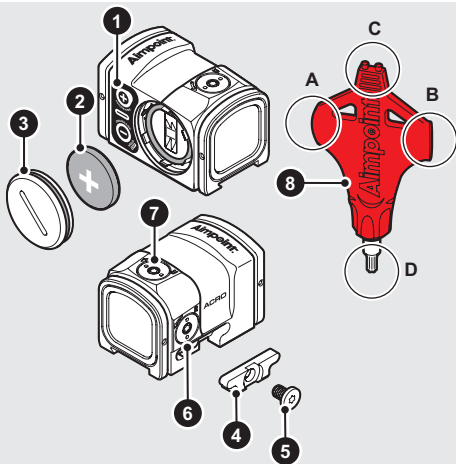


Fig. 1 Overview

- | | |
|-------------------------|------------------------------|
| 1 Push-buttons | 6 Windage adjustment screw |
| 2 Battery (CR2032) | 7 Elevation adjustment screw |
| 3 Battery cap | 8 Aimpoint tool (ABCD) |
| 4 Locking bar | |
| 5 Screw for locking bar | |

2 OPERATION

⚠ WARNING

Ensure the weapon is not loaded and the safety selector is in the "safe" position before attempting to install, remove or perform maintenance.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Your device is powered by button or coin cell batteries such as CR2032 with a nominal voltage of 3 volts. Please carefully read the separate instruction manual for each battery-powered device.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above +60°C / +140°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

2.1 Install or replace battery

- a Unscrew and remove the battery cap (3) using the flat side of the Aimpoint tool (8B) .
- b If replacing battery, remove depleted battery from the battery compartment by carefully pressing down on an edge as shown in Fig 2.

▲ CAUTION

Take care not to damage the battery compartment. Do not use sharp tools (e.g. a knife) to remove the battery.

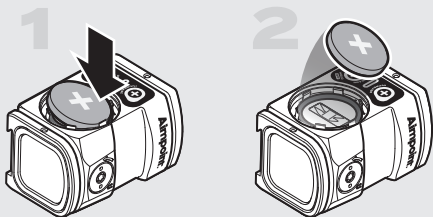


Fig. 2 Remove battery

- c Insert battery (2) with the positive end (+) toward the battery cap (3) as seen in Fig. 1.

▲ CAUTION

Check that the o-ring on the battery cap (3) is in position and in good condition to ensure there is no water leakage into the battery compartment.

- d Tighten the battery cap (3) with the Aimpoint tool (8B).
When resistance is encountered, proceed to tighten until the battery cap (3) is fully tightened.

▲ NOTE




For long term storage of the sight, remove the battery.

2.2 Turn ON / OFF and adjust red dot intensity

- Press  or  to turn the sight **ON**.

▲ NOTE

The sight will always turn **ON** at setting 7 of 10.

- Hold  to turn the sight **OFF**.
- Press  or  to adjust red dot intensity.

▲ NOTE

Intensity setting 1 - 4 are intended for use with NVD and intensity setting 5 - 10 for use in daylight.

2.3 Install the sight

To install the sight to an interface compatible with the integrated mount shown in Fig. 1, follow the described procedure:

- a Loosen the screw (5) using the Torx T10 of the Aimpoint tool (8D) and clamp the locking bar (4) around the dovetail interface.
- b With the recoil stop positioned in a recess, push the sight forward (toward muzzle) and tighten the screw (5).
- c Tighten the screw (5) until a light resistance is encountered. Proceed with another 1/4 to 1/2 turn until fully tightened (MAX. 3 Nm / 2.2 ft·lb).
- d Retighten the screw (5) after initial firing to ensure the sight is securely fastened.

▲ CAUTION

Do not overtighten.

2.4 Zeroing

▲ CAUTION

Do not continue to adjust windage and elevation screws (6) (7) if you encounter resistance.

- a Adjust the intensity to a comfortable setting for the red dot to contrast clearly against the target.
- b Use the Torx T10 of the Aimpoint tool (8D) to turn the adjustment screws (6) (7).

- c Windage adjustments (see Fig. 3):
- Turn windage adjustment screw (6) counterclockwise to move point of impact to the right (R).
 - Turn windage screw (6) clockwise to move point of impact to the left.
- d Elevation adjustments (see Fig. 4):
- Turn elevation adjustment screw (7) counterclockwise to move point of impact up (U).
 - Turn elevation adjustment screw (7) clockwise to move point of impact down.
- e Confirm zeroing by firing at least three shots at a zeroing target. Check points of impact to confirm accuracy and repeat zeroing procedure if required.
- f Ensure the sight is securely installed on the weapon and retighten the screw for the locking bar (5) if necessary.

▲ NOTE

Each click of the adjustment screws (6) (7) corresponds to approximately 2 cm movement of point of impact at 100 m or 0.7 in at 100 yds.

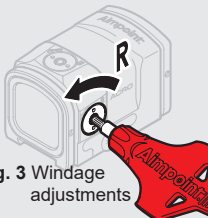


Fig. 3 Windage adjustments



Fig. 4 Elevation adjustments

3 MAINTENANCE

- Extreme heat (moist or dry): no special procedures required.
- Extreme cold: extreme cold might shorten battery life.
- Salt air: no special procedures required.
- Sea spray, water, mud and snow: ensure the battery cap (3) is tightened before exposing the sight to sea spray, mud, snow or before submerging the sight in water. Clean lenses with lens paper/cloth and wipe the sight dry as soon as possible after exposure to water, sea spray, mud or snow.
- Dust storms and sand storms: no special procedures required.
- High altitudes: no special procedures required.

▲ NOTE

If used with a mount with a Quick Release (QR) lever mechanism, put a small amount of weapon oil on moving parts / surfaces in contact with each other periodically, e.g. when performing preventive maintenance on the weapon. Always follow instruction from mount manufacturer.

▲ CAUTION

CAUTION: If used with a mount with a Quick Release (QR) lever mechanism: after mounting to rail, always check that lever stays locked if you try to open it without manipulating the release mechanism.



▲ CAUTION

Never clean the lenses with fingers. Use lens paper/cloth. If lens paper/cloth is not available:

- To clear away debris (sand, grass etc.): blow away the dirt or rinse with clear water.
- To clean lenses: fog the lenses or rinse with clear water and clean them with a soft piece of cloth.

4 TROUBLESHOOTING

The red dot does not appear or has disappeared

Make sure contact surfaces in the battery compartment are clean and verify that a working battery (CR2032) is installed correctly according to 2.1. If the sight is malfunctioning, notify local dealer/armourer.

The sight is impossible to zero

If an adjustment screw (6) or (7) is at its limit, check the alignment of mount and barrel. If point of impact is moving, check if the sight is securely installed on the weapon and check weapon rail (or carry handle) stability.

Aimpoint AB

Jägershillgatan 15
SE- 213 75 Malmö, Sweden
Phone: +46 (0)40 671 50 20
Fax: +46 (0)40 21 92 38
e-mail: info@aimpoint.se

Aimpoint Inc.

7309 Gateway Court
Manassas, VA 20109, USA
Phone: +1 703-263-9795
Fax: +1 703-263-9463
e-mail: info@aimpoint.com

WWW.AIMPOINT.COM

© 2021, 2025 Aimpoint AB. [16445-4]

