


OPERATION INSTRUCTIONS CONT.

TAPE MEASURE OPERATION:

1. The measuring tape reel can be drawn out to measure lengths of up to 8 ft. (250 cm).
2. Press the tape measure lock release (6) to automatically reel in the tape.

Note: The tape measure is auto locking and will not retract back into the reel unless the lock release button (6) is pressed.

Note: When reeling in the tape measure, feed it in slowly to avoid cuts or injuries.

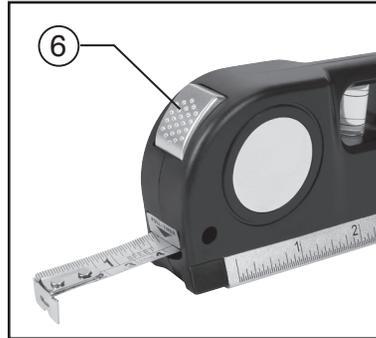

1 YEAR WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use. PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.

© Copyright 2019 WILMAR CORPORATION, P.O. Box 88259 Tukwila, WA 98138

4-IN-1 LASER PRO MEASURING TOOL

Item Number W5706

OWNER'S MANUAL



NOTE: The laser line is not self-leveling.

▲ WARNING!

READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

▲ DANGER!

LASER RADIATION-DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. AVOID DIRECT EYE EXPOSURE. THIS ITEM IS NOT FOR CHILDREN UNDER 14. MISUSE OF THE DEVICE CAN RESULT IN PERMANENT EYE DAMAGE.

PT
Performance Tool


Performance Tool®

TOOL FEATURES

Measures, levels and projects a laser line with 3 different patterns and is ideal where a straight line or accurate measurement is needed.

Note: Class IIIA laser product, less than 3.5mW power output and accuracy to +/-2 mm at 10 m and 25 m. Not suitable for outdoor use and laser may need a simple adjustment to plumb level before first use.

- | | |
|-------------------------------|--------------------------------|
| 1. Laser Head | 7. Vertical Bubble Level |
| 2. Laser Power Switch | 8. Horizontal Bubble Level |
| 3. Battery Compartment | 9. 45° Bubble Level |
| 4. SAE Ruled Straight Edge | 10. Metric Ruled Straight Edge |
| 5. 8 ft. (2.5 m) Tape Measure | |
| 6. Tape Measure Lock Release | |

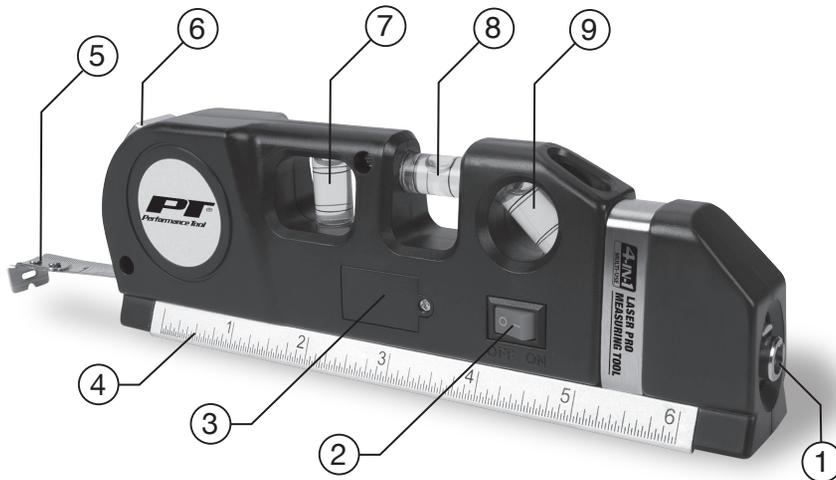

TECHNICAL SPECIFICATIONS:

Weight 8 oz.
 Dimensions 7.3 X 1.1 X 2.5 in.
 Batteries 3 LR44 Alkaline batteries included
 Laser Class IIIA, >3.5mW Power output
 Accuracy +/-2 mm at 10 m and 25 m

Technical specifications are subject to change without notice.

▲ WARNING: Read and understand this entire instruction manual before attempting to assemble, install, operate or maintain this product. Failure to comply with the instructions may result in serious personal injury and/or property damage!

SAFETY PRECAUTIONS

▲ WARNING: Laser radiation - avoid direct eye exposure! This item is not for children under 14. Misuse of the device can result in permanent eye damage.

Note: Class IIIA laser product, less than 3.5mW power output and accuracy to +/-2 mm at 10 m and 25 m. Not suitable for outdoor use and laser may need a simple adjustment to plumb level before first use. Handle with care and don't drop from heights to avoid damaging the glass indicators.

BATTERY INSTALLATION

1. Locate the battery compartment (3) near the power switch (2).
 2. Remove securing screw with a PH0 Phillips head screw driver.
 3. Open compartment and insert 3 new LR44 / AG13 button cell batteries paying attention to polarity.
- Note:** Negative contact is indicated inside compartment and positive side of battery goes towards spring.
4. Replace battery cover and turn screw until snug. Overtightening may cause damage to door or strip screw.

OPERATION INSTRUCTIONS

LASER CALIBRATION:

1. Before putting into use verify the true accuracy of the horizontal laser line. **Fig. 1**
2. Place the 4-in-1 Laser Pro onto a level surface.
3. Adjust the laser head (1) to the cross setting (Fig. 1) and project laser onto a wall approx. 5 - 10 ft. away.
4. Use a ruler to verify the left and right sides of the laser line are equal distances from the floor. This step verifies accuracy of the horizontal line.
5. If needed the angle of the projected laser line can be adjusted by turning the head of the laser (1) using a straight edge or large screwdriver (Fig 2).

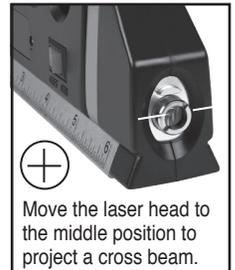



Fig. 2

Note: Be careful not to scratch or damage the laser lens during the laser adjustment process.


LASER OPERATION:

1. Point laser towards the intended surface and away from your or other's eyes.
2. Turn laser power switch (2) from O to I to power "ON".
3. Adjust Laser Head (1) to the preferred pattern by moving the head to the top, middle or bottom position as shown below.


Note: The laser will stay on until you turn power switch (2) to the off position.

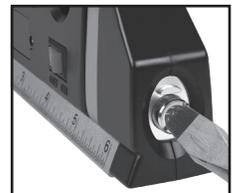

Move laser head to the top position to project a horizontal line.

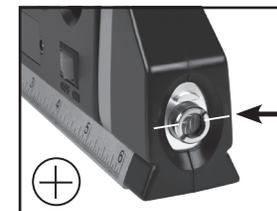

Move laser head to the middle position to project a cross beam.

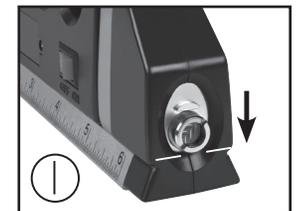

Move laser head to the bottom position to project a vertical line.