

13' WOODEN CURVED HAMMOCK STAND WSN-WHS13

Save these instructions for future reference.
This package includes a hammock stand only!

SCAN FOR
HAMMOCK SAFETY TIPS













<https://tiny.cc/hammock-safety>

400
pounds
181.4 kg

Weight Capacity

WARNING: Failure to read and follow instructions and safety warnings could result in serious injury or damage to property.

NO.	PARTS	QTY.
A	 Upright Beam	2
B	 Base Beam (L/R)	2
C	 Leg	2
D	 M10x140mm Bolt	4
E	 M10x230mm Bolt	4
F	 70mm Eye Bolt	2
G	 Washer	18
H	 Lock Nut	10
I	 Carabiner	4
J	 Chain	2




Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



2-PERSON
ASSEMBLY
RECOMMENDED


INCLUDED TOOLS



Back Nut Tap Spanner with Pivot Pin
(x2)



RECOMMENDED TOOLS (not included)



Rubber Mallet

WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.

ASSEMBLY

! Carefully read all assembly steps, care instructions, and safety information before using this product. !


Save these instructions for future reference.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.


When choosing a location for your hammock stand, select a smooth, level surface.

Do not install on dangerous terrain or objects such as slopes, on rocks, or in bodies of water.


! IMPORTANT TIPS !

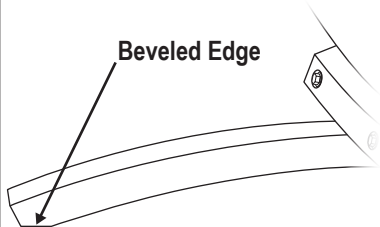


Identify the beveled edge on Leg (C); the beveled edge must face inward toward the center of the hammock stand.

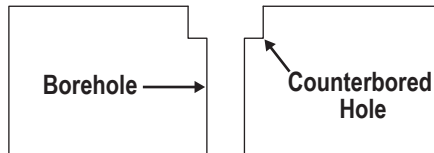

When applicable, Counterbored holes must be installed on the outside edge(s); hardware will be recessed inside the holes. This is especially important for Base Beams (B).

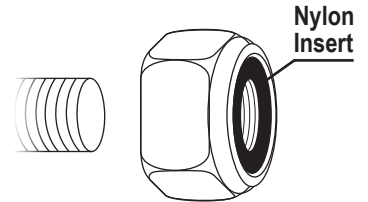

When installing lock nuts, make sure the raised center portion faces out; the flat surface goes on first. Hand-tighten until you feel resistance, which is caused by the nylon insert.

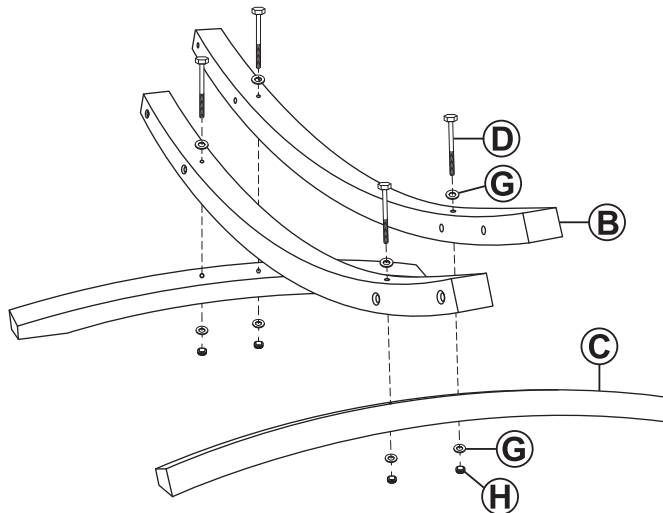


STEP 1

B: 2 C: 2 D: 4 G: 8 H: 4

- Place two Base Beams (B) onto two Legs (C) and loosely fasten using four M10x140mm Bolts (D), eight Washers (G), and four Lock Nuts (H), as shown.

Do not fully tighten hardware until Step 2 is complete!

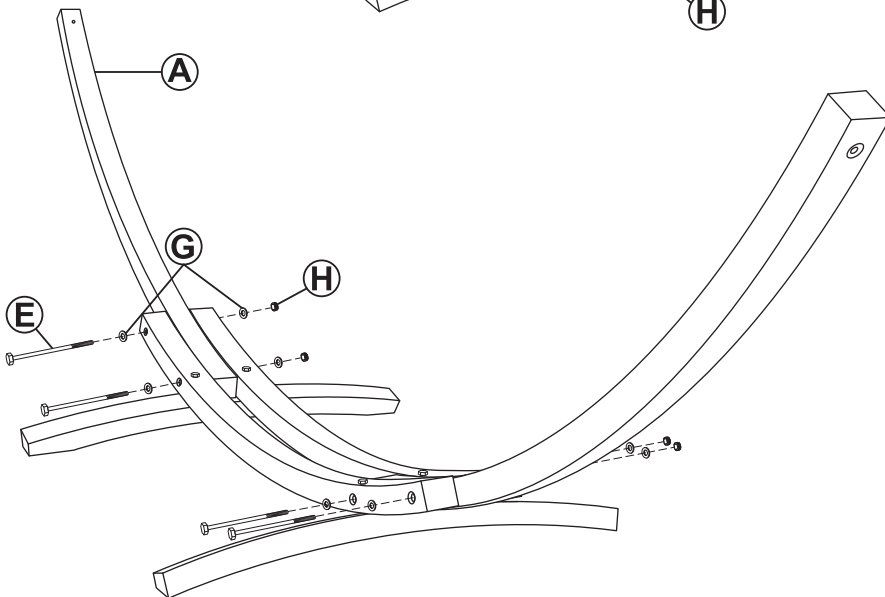


STEP 2

A: 2 E: 4 G: 8 H: 4

- Align the boreholes on the bottom Upright Beam (A) with the boreholes in the base beams.
- Loosely secure each upright beam using two M10x230mm Bolts (E), four Washers (G), and two Lock Nuts (H), as shown.

Fully tighten all lock nuts shown in Step 1 and Step 2 using the included Back Nut Tap Spanners with Pivot Pins.

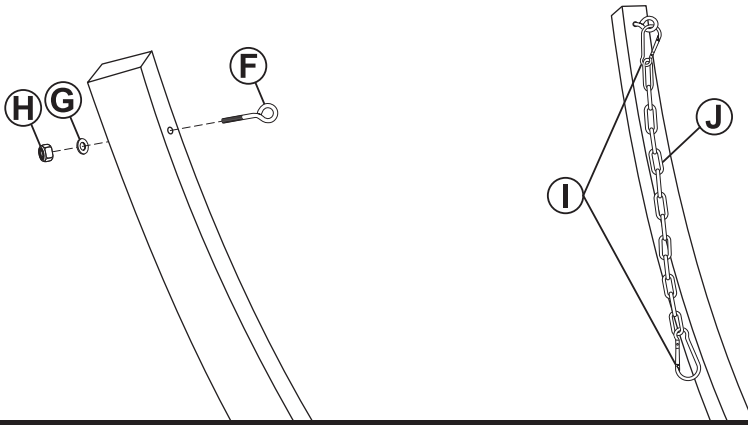

STEP 3

F: 2 G: 2 H: 2 I: 4 J: 2

- Install one Eye Bolt (F) on the inside of the upright beam, and securely fasten using one Washer (G) and Lock Nut (H).
- Repeat this step on the opposite upright beam to secure the remaining eye bolt.
- Connect two Carabiners (I) to the outermost links of each Chain (J). Then, clip one carabiner onto each eye bolt.

HANGING YOUR HAMMOCK (hammock not included)

! IMPORTANT: This hammock stand accommodates most hammock styles that are 9' to 12' in length from ring to ring.

Always leave some slack in the fabric when hanging your hammock.

The center of the hammock should be at a height where the user can enter and exit the hammock safely.

Always enter and exit hammocks slowly; moving too quickly can cause the hammock and/or stand to tip over. Excessive movements also put unnecessary strain on the edge-glued wood, causing them to separate, which could result in serious injury.

ADJUSTING THE HAMMOCK HEIGHT (hammock not included)

When adjusting hammock height, adjust both ends evenly.

The more chain links there are between the carabiners, the lower the hammock height will be. To raise the hammock height, simply adjust the hanging hardware, ensuring both ends are adjusted evenly.

To raise the height, unclip the chain from the carabiner on the stand, pull the chain toward the carabiner, and clip the carabiner to an inner link on the chain. Repeat this adjustment on the opposite side.

BEFORE USE

- Ensure all hardware is securely fastened.
- Only use on a flat, level surface.
- Carefully read all use, care, and safety information to ensure the stand is used safely.

GENERAL USE & CARE



WARNING: Do not use if parts are missing, worn, or damaged.



WARNING: Do not allow children to use this product without constant adult supervision.



WARNING: Never leave a hammock hanging on this stand while it is not in use.



WARNING: Always keep weight centered over the base when using this product.

• **SAFE USE:** Follow all safety statements and warnings. Always move slowly when getting in and out of any hammock. This stand could cause serious injury, including, but not limited to, the stand tipping over or breaking if user(s) stand up in, swing, bounce, jump, or perform any other excessive movement while using a hammock.

- **CHILDREN:** This stand is only to be used by adults and person(s) with developed motor skills who also understand the potential dangers if misused. Supervise children at all times. Never allow small or young children to enter or exit a hammock without adult assistance. Never allow or encourage children to sleep or play in a hammock. Always teach and practice safe hammock use, with and without a hammock stand.
- **INSPECTION:** Frequently check the hardware to ensure it remains securely fastened; tighten loose hardware as needed. Do not use the stand if parts are missing, broken, damaged, or worn. Don't forget that it is also important to inspect your hammock (not included) before every use.
- **COVER AND STORE:** Protect your investment by covering or storing this stand when not in use. Avoid long-term exposure to precipitation and high-moisture areas. Covering the stand will protect it from damages caused by water and sunlight. Store in a cool, dry location.
- **CLEANING:** Identify the direction of the woodgrain, use a soft cloth to wipe away dust and debris.
- **MAINTENANCE:** As the wood ages, small cracks or 'checking' can appear. Maintain the appearance of the wood by applying a suitable wood oil or varnish regularly to help seal gaps. Clean the stand and bring it indoors, allow it to dry thoroughly; drying may take several days. If necessary, lightly sand rough areas by hand with fine grit sandpaper. Apply the oil or varnish as directed by the manufacturer, and only apply to wooden surfaces.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE/SOLUTION
Mounting holes do not align	Ensure components are being installed in the correct direction.
	Hardware was tightened too soon. Unscrew any hardware that was fully tightened.
The bolts are not long enough	Components may be installed in the wrong direction. Carefully review the assembly instructions and important tips.
The nut will not fully tighten onto the bolt	This unit includes lock nuts that have a nylon insert to resist loosening when the stand is in use. Use both back nut tap spanners with pivot pins, one to hold the bolt head and the other to tighten the lock nut. If you are still having trouble tightening, try a ratcheting socket wrench (not included).
My hammock hangs too low	Adjust the chains as noted in the Hanging Your Hammock section.
	Ensure your hammock is suited for use with this stand.
The stand seems unstable	Make sure the stand is on a flat, level surface and there are no dangerous objects, such as rocks/stones, beneath the feet.
	Check that all components were installed in the correct direction.
	Check that all hardware is fully and securely tightened.
The protective coating is flaking off	The stand may have been exposed to too much moisture and/or sunlight. Cover or store the stand when not in use to prevent further degradation.
Wood is checked or separating	The stand may have been exposed to too much moisture and/or sunlight. Cover or store the stand when not in use to prevent further degradation.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.




Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

GENERAL CARE GUIDE FOR SPREADER BAR ROPE HAMMOCKS

Save this guide for future reference.



USE & CARE

SAFE USE: Take your time getting in and out of the hammock. Any hammock may tip if your weight is not centered. Misuse of the hammock, such as using it like a swing or exceeding the weight capacity, can cause the ropes to stretch or break.

SUN EXPOSURE: All fabrics will eventually fade and degrade from sun exposure. The less direct sunlight the hammock is exposed to, the longer the life of the hammock will be.

CHILDREN: Supervise children at all times while using this product. Do not allow children or pets to play in the hammock. Excessive swinging or rough play may result in permanent damage and could cause injury.

INSPECT: Before each use, inspect the ropes and spreader bar for wear and weakness.

CLEANING: Clean when soiling or staining is present and before storage. Ensure the unit is completely dry before storing.

STORAGE: Store indoors, in a dry location during inclement weather, winter, and when it will not be used for an extended time. Ensure it is completely dry before storing to prevent mold and mildew growth.

CLEANING



HAND-WASH ONLY



DO NOT USE BLEACH OR FABRIC SOFTENERS



LAY FLAT TO DRY



DO NOT IRON

Hand-wash in a bathtub or kiddie pool using mild soap or detergent and a soft-bristled scrub brush. Soaking may be required for heavily soiled ropes. Keep the wooden spreader bars and galvanized rings out of the water as much as possible.

Thoroughly rinse all soap residue. Air-dry on a flat surface to prevent the ropes from stretching. The ropes may shrink slightly while drying, but will stretch back out with use.

! SAFETY STATEMENTS & WARNINGS !

- Before each use, inspect your unit for wear and weakness. Do not use if the ropes are frayed or the spreader bars are cracked.
- Excessive swinging and other rough play may result in serious injuries.
- Children must be under constant adult supervision while using this product.
- Do not allow pets into the hammock as doing so may result in injury or damage the product.
- Do not exceed the recommended weight capacity of the hammock.
- Never untie the ropes.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with the product or it was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

! WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.