

# JAPANESE MANDOLINE SLICER

USE & CARE INSTRUCTIONS



# **USING THE SLICER**



#### **USING SLICER**

- 1. Hold Mandoline Slicer at an angle
- 2. Put food to be sliced in the spikes of the hand guard
- 3. Slice food



#### **ADDING BLADES**

- 1. Flip Mandoline Slicer over
- 2. Loosen screws
- 3. Carefully insert blade—the sharp edge will stick up on the front side



#### ADJUSTING SLICE THICKNESS

- 1. Turn Mandoline Slicer over
- 2. Turn center knob to the desired height



4. Tighten screws until blade is secure and will not fall out

## **BLADE TYPES**



#### STANDARD STRAIGHT BLADE

Cuts perfect potatoes slices and adjustable for thickness



#### **FINE BLADE**

Great for vegetable garnishes; perfect for carrots, radishes, or any other firm vegetable



#### **MEDIUM BLADE**


Excellent for quick and easy stir-fry pieces; ideal for peppers, beets, zucchini, etc



#### **COARSE BLADE**

Creates chunky and crisp cuts of fruits and vegetables; ideal for potatoes, onions, cucumbers, apples, etc



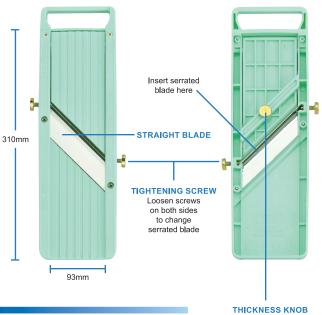

## **JAPANESE MANDOLINE SLICER SET PARTS**

### Turn knob to raise and

lower cutting plate; turn clockwise for thinner slices, counter-clockwise for thicker slices