



METAL LADDERBALL SET

INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



Recommended for ages 8 and over.

Not for use by children without adult supervision.

This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully. Proper use of this set can prevent damage and injury.

Be sure to check out all the exciting a games has to offer. Visit our web site at:



www.escaladesports.com

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO








OUTDOOR GAMES



DARTBOARDS

Escalade Sports
817 Maxwell Avenue
Evansville, IN 47711
1-800-467-1421
www.escaladesports.com


Parts List

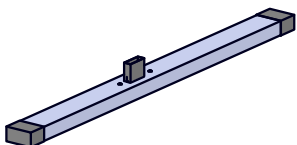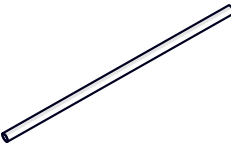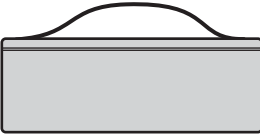1  Base (Qty. 4)	2  Upright (Qty. 4)	3  Crossbar Red Crossbar White Crossbar Blue (Qty. 2 each)	2  Carry Bag (Qty. 1)	3  Bolas Red Bolas Blue (Qty. 3 each)
--	--	---	---	--

Assembly

STEP 1

Insert the vertical side rails into the slot in the leg rails

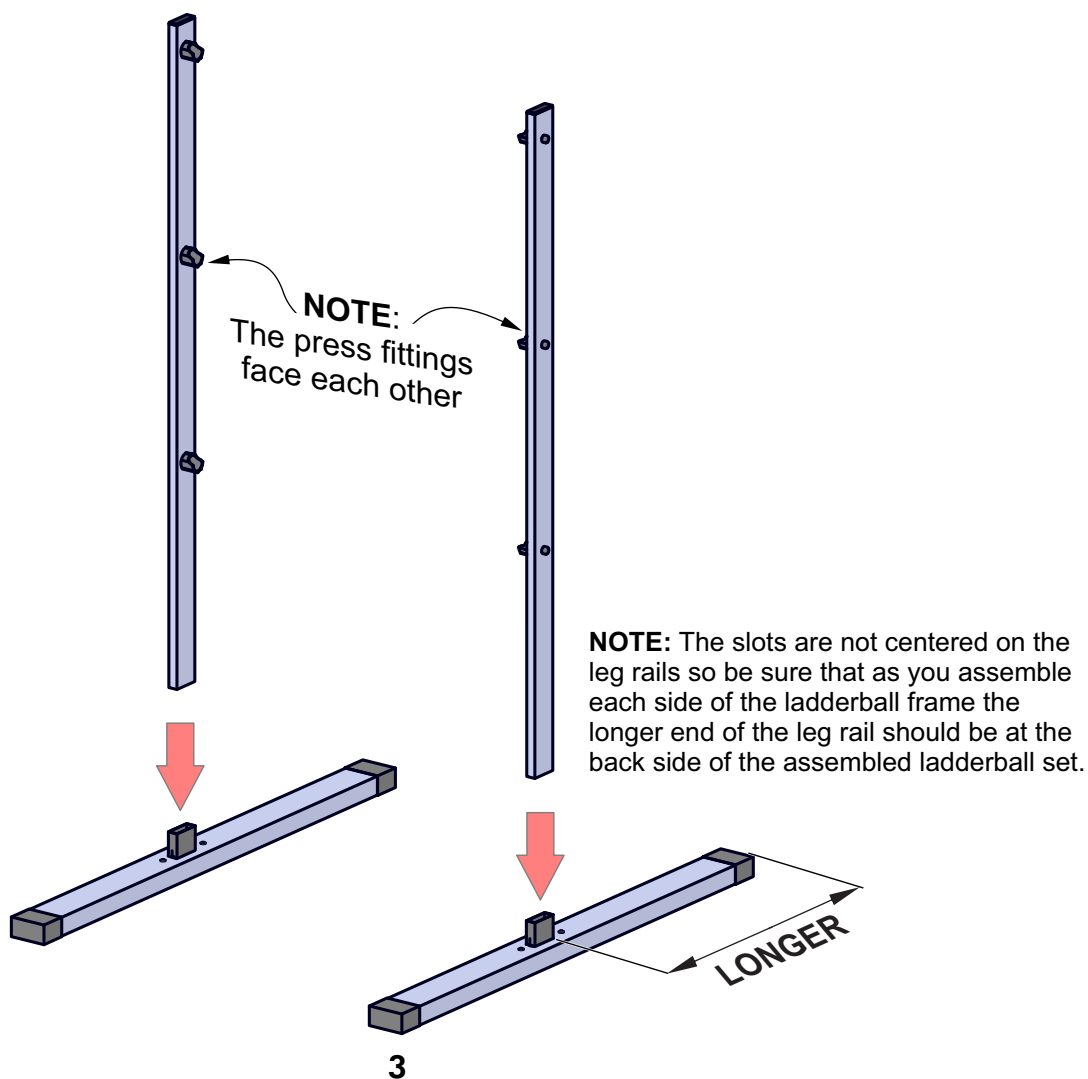

Assembly

STEP 2

Once the vertical side rails and leg rails have been assembled lay the frame on the ground with the fittings facing up. Insert the cross bars into the three fitting slots pressing firmly.


With the three cross bars in a vertical position place the second half of the frame over the open end of the cross bars. Align the frame fittings with each of the cross bars carefully and press down firmly. Your ladderball frame is now fully assembled.

Set upright and repeat the process on the second ladderball frame.


This process should not take more than a few minutes and there is no hardware to lose.

NOTE: Remember to position the ladderball frames so that the longer leg length is at the back of the ladder. This improves stability as the bolas are striking the ladderball frames.


INSERT CROSSBARS

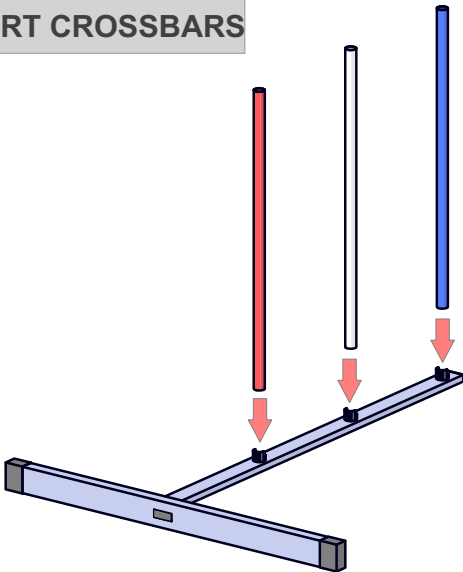


ADD SECOND SIDE

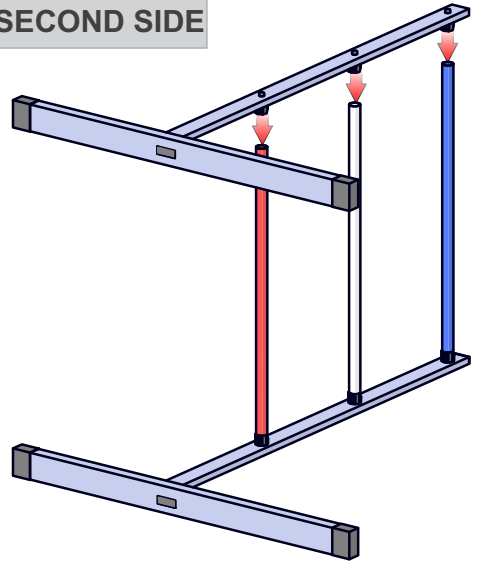


SET UPRIGHT

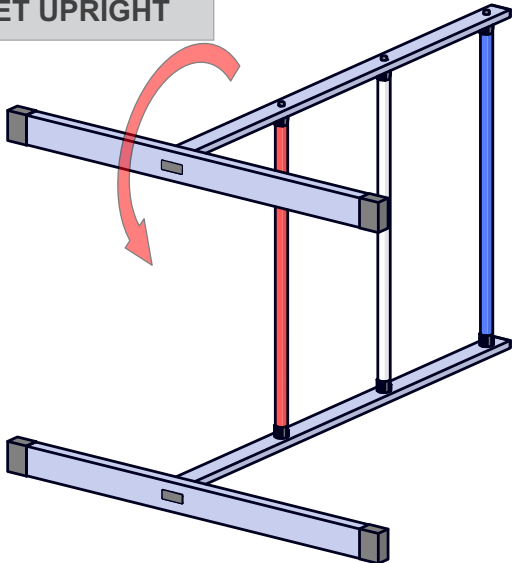

REPEAT FOR SECOND LADDER

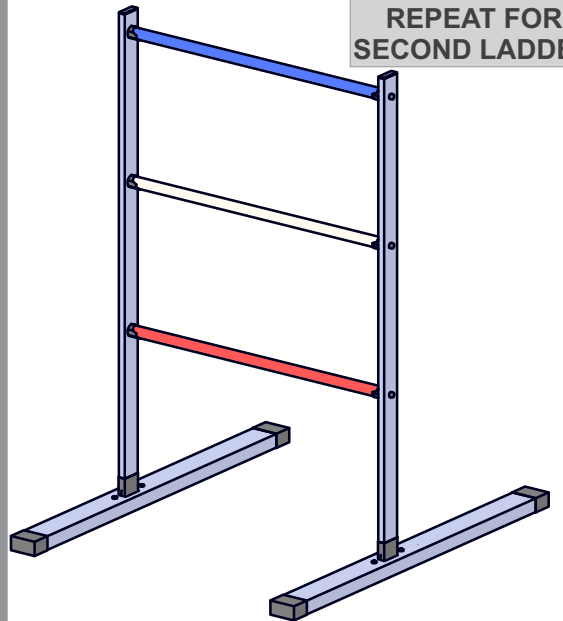

Playing Instructions

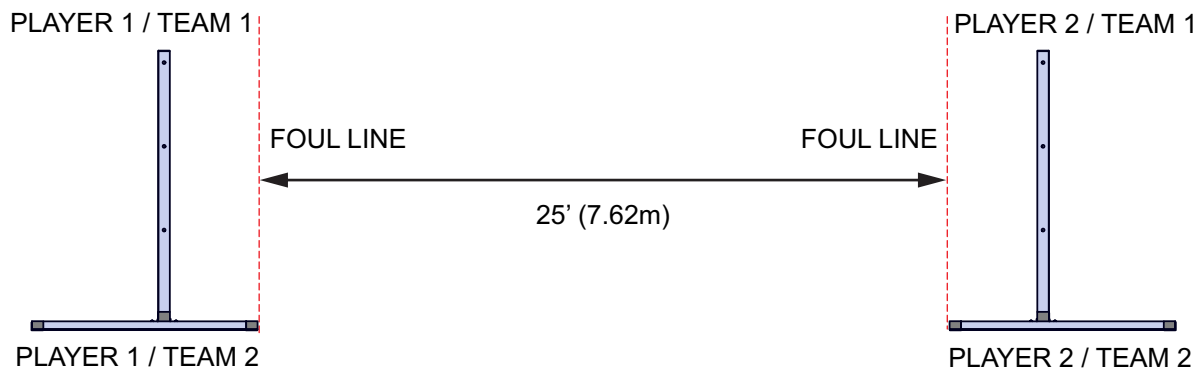

2 to 4 players; singles (2) or teams/partners (4)

Preparation:

Find an open area away from home furnishings, sprinkler heads or anything that could be damaged or tripped on. The official playing distance is 25 feet between the ladders. Distance may be adjusted to suit player skill level.

Playing the Game:

Ladderball or Ladder toss is played by each player tossing 3 bolas to the desired ladders. The first player throws all 3 bolas at the desired ladders. When finished, the next player throws 3 bolas at the same ladders as the first player. The players' partners will then total up the scores and take turns throwing the bolas. The team with the highest score throws first to start the next frame.

Points:

Points are determined by the steps that a player's bola wraps around. The top step is worth 3 points, the middle step is worth 2 points, and the bottom step is worth 1 point. Players can score an optional bonus point by hanging all 3 bolas from the same step or by hanging a bola on all 3 (1-2-3) steps in one round. The highest amount of points available per player per round is 10. This is accomplished by hanging all 3 bolas on the top (3 point) step.

Bolas can be thrown any way the player chooses as long as they are thrown individually. The first player to reach exactly 21 points wins.

If any person scores over 21 points, his or her points for that round do not count. For example: a player with 18 points needs 3 points to get to 21 and win. If that player has 5 points hanging on the ladder after all players have thrown all bolas, the 5 points do not count and the player will enter the next round with 18 points, again needing 3 points to win.

In case of a tie, the players must play until one player scores 2 or more points more than all the other players. This 2-point rule only applies in overtime rounds.

Scoring:

Scoring is determined by the bolas that are still hanging from the steps after all teams have tossed all of their bolas. Players can knock off bolas during the course of the game, and knocking off other players' bolas is encouraged as good defensive play. Bolas that are knocked off during play should not be counted towards point totals. Only bolas that remain hanging after all bolas are tossed should be counted.