




**IMPORTANT:**

Before you begin, make sure you familiarize yourself with all the parts and fully read the instructions.

**CUSTOMER SERVICE:**

Toll-free customer help line available weekdays between 7:00am and 6:00pm Central Time at 800-463-0660.


**TOOLS NECESSARY:**

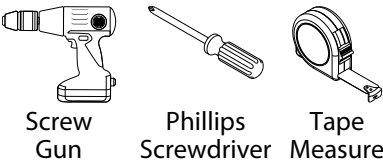


NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

**WARNING**

**THIS PRODUCT IS SPRING LOADED AND COULD CAUSE SEVERE HARM IF NOT INSTALLED CORRECTLY!**

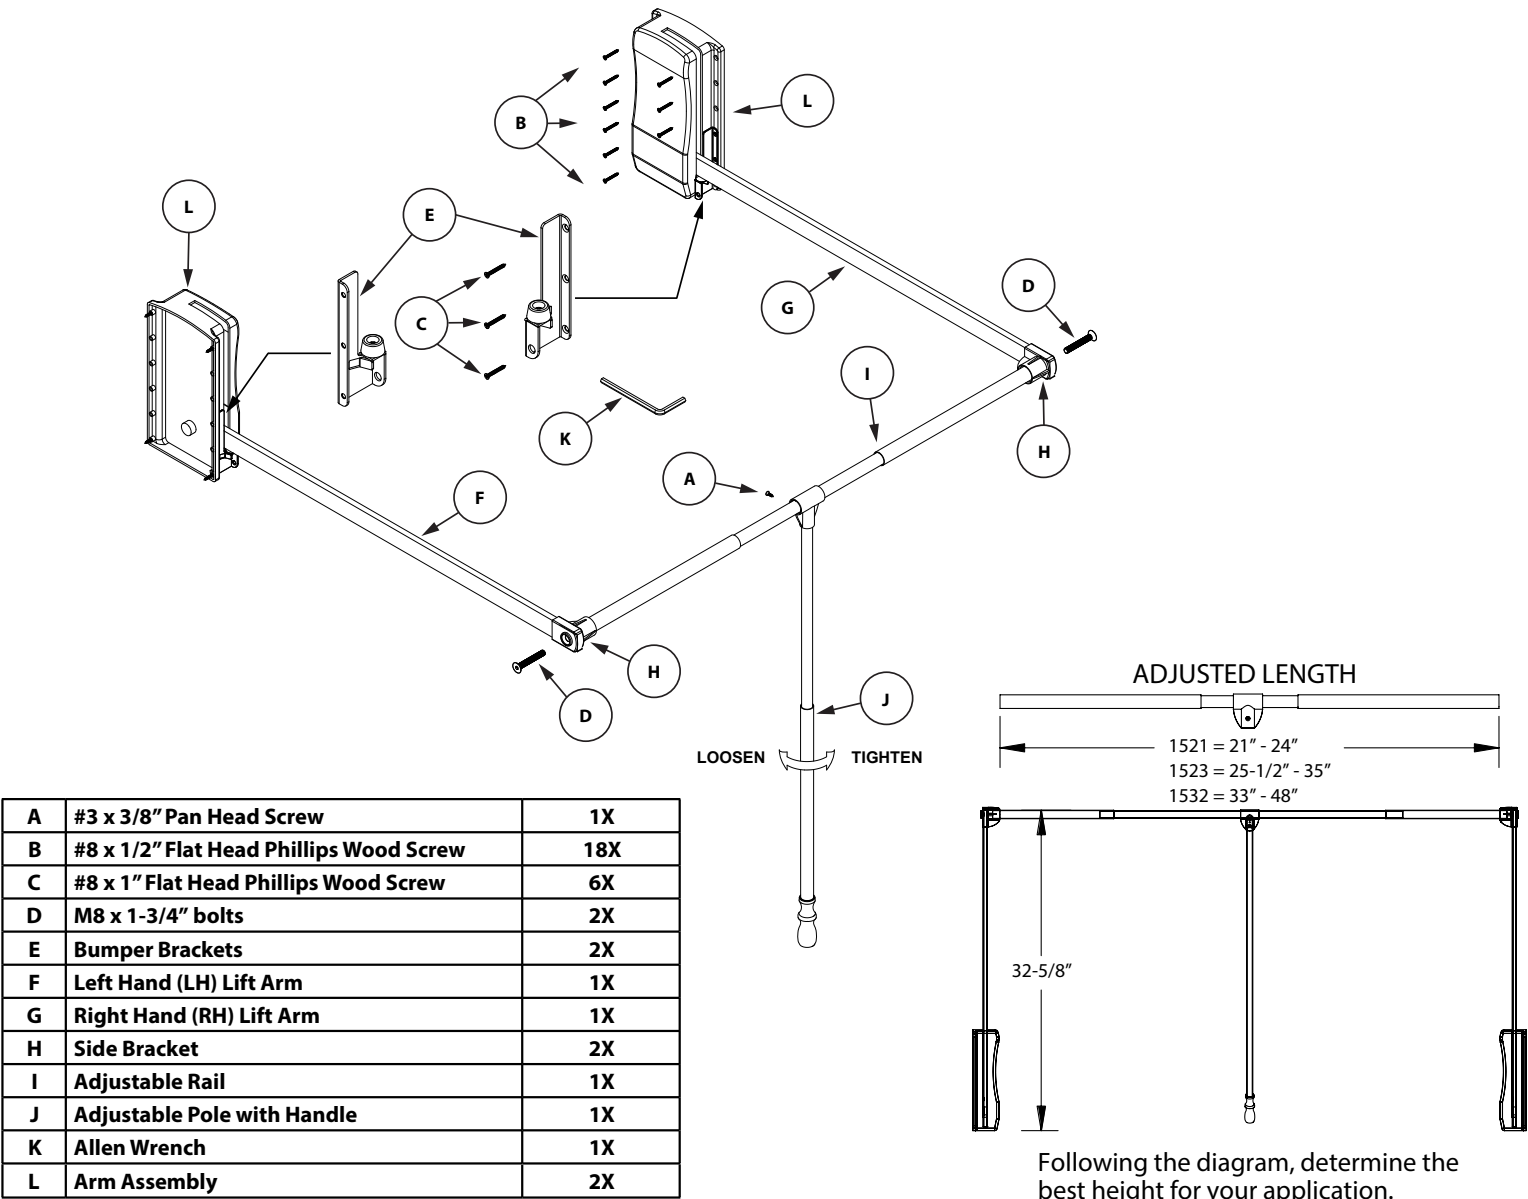


1

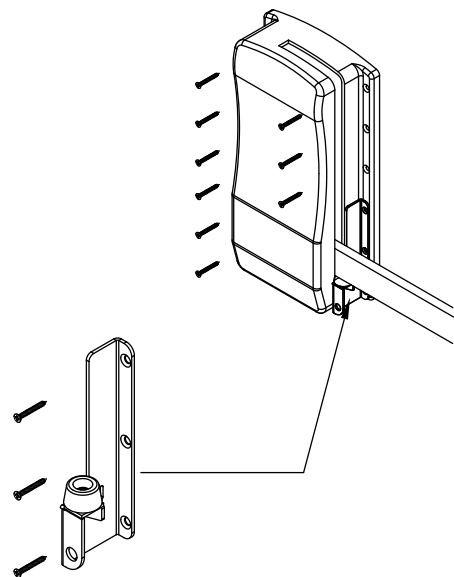


Attach LH & RH Arm Assemblies to the cabinet sides using nine (9) #8X3/4" Flat Head Screws. Attach Bumper Brackets (LH & RH) to both sides by using three (3) #8X1" Flat Head Screws.

2

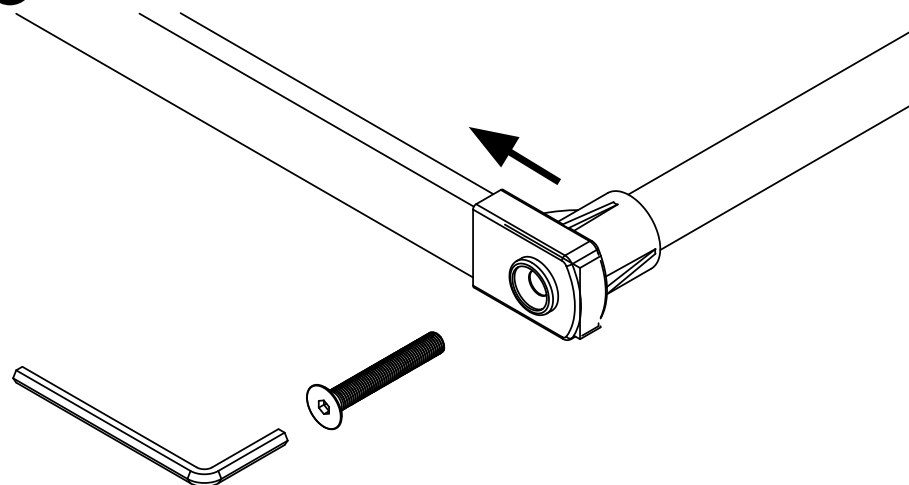


With Lift Arms in the down position, slide the Side Brackets onto the Lift Arms. Adjust the Adjustable Rail so that it extends into the Side Brackets as shown. Use provided Allen Wrench to secure one #8 x 1-3/8" Flat Head Allen Machine Screw through one Side Bracket and Lift Arm and into the Adjustable Rail. Repeat on other side.

3

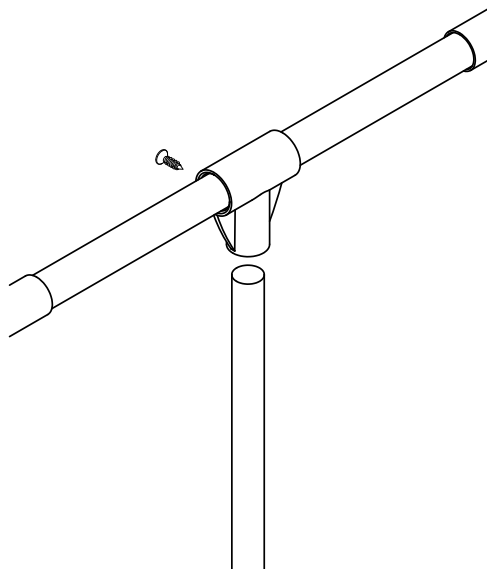

Slip the Adjustable Pole into the T-Bracket and fasten using one (1) #3 x 3/8" Pan Head Screw.

4

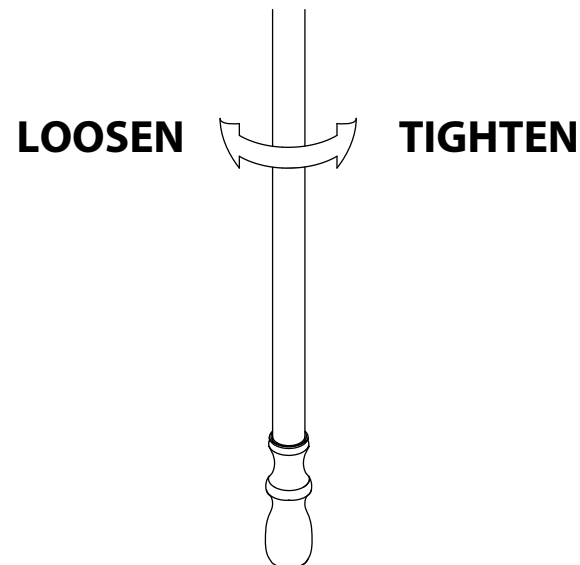

Operate the lift by gently pushing upward on the handle. Check clearance of Adjustable Rail from side to side and adjust accordingly. Center the T-Bracket on the Adjustable Rail and slide the rubber O-rings tight against both sides of the T-Bracket to hold it in place. Adjust Pole to desired length by twisting as shown.