



OWNER'S MANUAL

MILKHOUSE HEATER

15" | 1500 / 1300W



MODEL 2VAHW152PC, 2VAHW153PC, 2VAHW152P, 2VAHW153P,
2VAHW152PCA, 2VAHW153PCA

TECHNICAL DATA

Model: 2VAHW152P, 2VAHW153P, 2VAHW152PC, 2VAHW153PC,
2VAHW152PCA, 2VAHW153PCA

Voltage: 120V~ / 60Hz / 12.5A

Watts: 1300W Low / 1500W High

BTUs: 5120

Features:

- Adjustable Thermostat with Anti-freeze Setting
- Front Mounted Control Panel
- Power Indicator Light
- Safety Overheat Protection
- Safety Tip-Over Protection
- Convenient Carry Handle
- Sturdy Metal Frame
- 3-Prong plug (2VAHW153P only)

⚠ WARNING Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

To avoid excessive room temperatures which can cause hyperthermia:
DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual.
Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Safety Guidelines	5-8
Usage	9-12
Before Using This Product	9
Heater Operation	10
Heater Location.....	10
Heater Connection.....	10
Assembly Instructions	10
Turning Heater On	11
Power Level Switch	11
Setting Thermostat	11
Turning Off.....	12
Operating Fan	12
Safety Features	12
Care and Maintenance	13

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

SAFETY GUIDELINES

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial application. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. This heater must be plugged in to a 120V AC, 15 Amp. (or larger) circuit. Do not plug anything additional into the same circuit. If you have any questions whether your wiring is adequate, consult a qualified electrician. Risk of fire, overheating, malfunction, property damage, injury or even death may result if not adhered to.

Use your heater/fan only with a working smoke detector located in the vicinity of your heater/fan.

While using your heater/fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **"WARNING"** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all the instructions before using this heater/fan.
- This heater/fan is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use provided handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater/fan and keep them away from the sides and rear.
- Do not use heater unattended. Use of extreme caution is necessary when any heater is used by or near children, invalids, disabled persons or pets.
- Do not operate the heater with a damaged power cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use heater outdoors.

- Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use in damp environments such as flooded basements.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs, carpet, vinyl flooring or other plastic surfaces. Not for use outdoors or in wet areas.
- This heater is not designed as a primary heat source.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Always unplug heater when not in use.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn controls off then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons or property.

WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

WARNING: FIRE HAZARD

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code. The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections.

PET OWNERS NOTE

The health of birds and some small pets are extremely sensitive to the fumes given off during the initial use of many appliances. Although these fumes are not harmful to humans, it is recommended that this heater not be used around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

WARNING:

CONTINUOUS OPERATION AND TIMER USE

- Plug directly into a wall outlet. Do not use an extension cord, power strip, surge protector, outlet adapter, or any other type of cord extension.
- Do not use the space heater in an outlet that is loose or does not hold the plug securely.
- Do not operate the unit if the power cord, plug, or outlet is damaged, loose, or overheating.
- This unit is not designed for unattended use or continuous operation for indefinite periods.
- If this unit includes a timer, the timer function is provided solely for convenience. It is not a safety device and is not a substitute for active supervision.
- Periodically turn the unit off and discontinue use immediately if any abnormal operation is observed.

IMPORTANT SAFETY WARNING:

PACKAGING REMOVAL

DO NOT operate this unit while it is inside, resting on, or in contact with Styrofoam, foam blocks, plastic bags, tape, or any packaging materials.

FAILURE TO REMOVE ALL PACKAGING MATERIALS BEFORE USE MAY RESULT IN OVERHEATING, MELTING, SMOKE, FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.

USAGE

BEFORE USING THIS PRODUCT

- Remove the unit completely from the carton.
- Remove ALL Styrofoam, foam inserts, plastic coverings, tape, and protective materials.
- Inspect all air intake and exhaust openings to ensure they are fully clear and unobstructed.

 **NEVER attempt to operate the unit while packaging materials are attached or nearby.**

FOR SAFE OPERATION

- Stop using immediately if unusual noise, odor, or abnormal operation occurs.
- Do not operate this unit unattended for extended periods of time.
- Keep the heater out of reach of children and pets during operation.
- Do not rely on the timer function as a substitute for supervision.
- This heater is intended for **indoor, dry-location use only**.
- Do not operate outdoors or in damp environments.
- Do not place the heater on soft surfaces such as beds, sofas, or thick carpeting that may restrict airflow.
- Maintain proper clearances and ventilation during operation.
- Do not insert or allow foreign objects to enter ventilation or exhaust openings.
- Do not modify the plug or attempt to bypass built-in safety features.
- Always unplug the unit when not in use or before cleaning or maintenance.
- Allow the unit to cool before moving or storing.
- Turn the unit off periodically to allow internal components to cool.

 **Failure to follow these instructions may result in damage to the unit or unsafe operating conditions.**

HEATER OPERATION

Always operate the heater in the upright position following all instructions and recommendations listed in this manual.


HEATER LOCATION

Place the heater in the area of the room that is coldest.

HEATER CONNECTION

Plug heater directly into 120 Volt AC, 60Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater.

This product must be plugged directly into a wall outlet. Never use any type of extension cord or outlet adapter with this high wattage product. To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other large or small appliances.

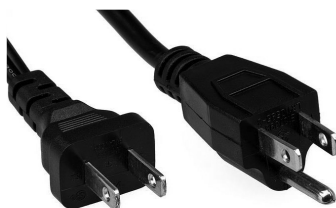


2VAHW152P
2VAHW152PC
2VAHW152PCA

2VAHW153P
2VAHW153PC
2VAHW153PCA


ASSEMBLY INSTRUCTIONS

Before initial use some assembly is required. With a phillips screwdriver, attach handle to heater body using screws provided as shown in the photo at right.

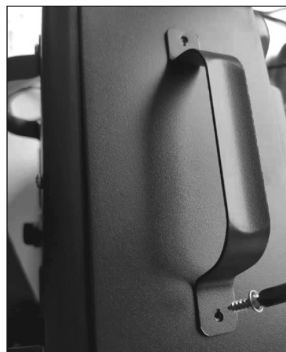

TURNING HEATER ON

To start the heater, turn the ON/OFF Power Level/Fan Dial from the OFF position to the 1300 or 1500 watt setting. Then rotate the Thermostat Control clockwise to the HIGH THERMOSTAT position as described below. (During the heaters initial use, you may experience a slight odor or smoking. This is the result of the heating element lubrication "burning off". This is normal and will go away after a few minutes of use).

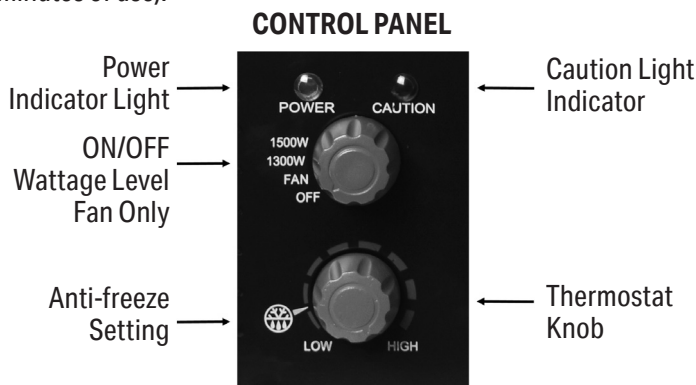

POWER LEVEL SWITCH

This heater has two heat settings: 1300 and 1500 watts. Use the higher setting (1500 watt) to raise the room temperature quickly. When the desired temperature is reached use the lower 1300 watt setting. It is usually sufficient to maintain a comfortable temperature.

ADJUSTABLE THERMOSTAT WITH ANTI-FREEZE SETTING

After heater has been turned on and the room has reached the desired temperature, slowly rotate the thermostat knob counter-clockwise until the heater shuts off (you should hear a faint "click"). By leaving the thermostat at this setting it will automatically maintain this temperature. To lower temperature, rotate the knob further counter-clockwise (towards the LOW position). To raise the temperature, rotate the thermostat knob clockwise (towards the HIGH position).

When set to the Anti-Freeze setting, the Heater will turn on whenever the temperature drops below 40°F, which is helpful to economically prevent ice formation in garages and other unheated spaces.

TURNING HEATER OFF

Turn the ON/OFF Power Level/Fan Dial to the OFF position before unplugging or plugging in the heater. Heater should be unplugged when not in use. To disconnect heater, turn controls to OFF, then remove plug from outlet. Do not wrap the cord around the unit tightly for storage, this will cause damage long term to the cord.

TO OPERATE FAN ONLY

Turn the On/Off Power Level Control dial to the Fan setting. Turn thermostat fully clockwise so the fan will run continuously.

SAFETY FEATURES

This heater includes a visual alarm to warn that parts of the heater are getting excessively hot. If the caution light comes on, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WITH THE CAUTION LIGHT ON.** The power indicator light, located near the power control, lights whenever the heater is turned on. The heater is equipped with an automatic overheat protection device located inside the body of the heater. If the heater grille is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off. To reset the heater, simply turn power off and unplug the heater for 10 minutes until it cools down and then you may plug the heater in and restart. Be sure that the heater is on a smooth level surface with no obstructions. The heater is also equipped with a safety tip-over switch to turn power off to the heater when the heater tips over. To resume heater functions simply stand heater upright.

CARE AND MAINTENANCE

CLEANING

CAUTION – Before cleaning the heater be sure to disconnect power cord and allow the heater to cool completely. This heater should be cleaned at least once a year to maintain proper performance. Clean the outside surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. **DO NOT IMMERSE THE HEATER IN WATER.** Allow heater to dry completely before use

REPAIR

DO NOT OPERATE THE HEATER WITHOUT THE GRILLE IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY. RETURN HEATER TO AUTHORIZED FACILITY FOR EXAMINATION, ELECTRICAL OR MECHANICAL ADJUSTMENT OR REPAIR.

STORAGE

Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com
www.visionairproducts.com

Printed in Cambodia | 0226_M025