


Reference Water Heater IO Manual for cascading instructions.

Ensure tankless heaters are installed in parallel to maximize system output.

Contact Application Engineering Center of Excellence if alternate piping arrangements will be considered.

Balancing of hot water risers may be necessary after installation to ensure consistent hot water delivery.

8

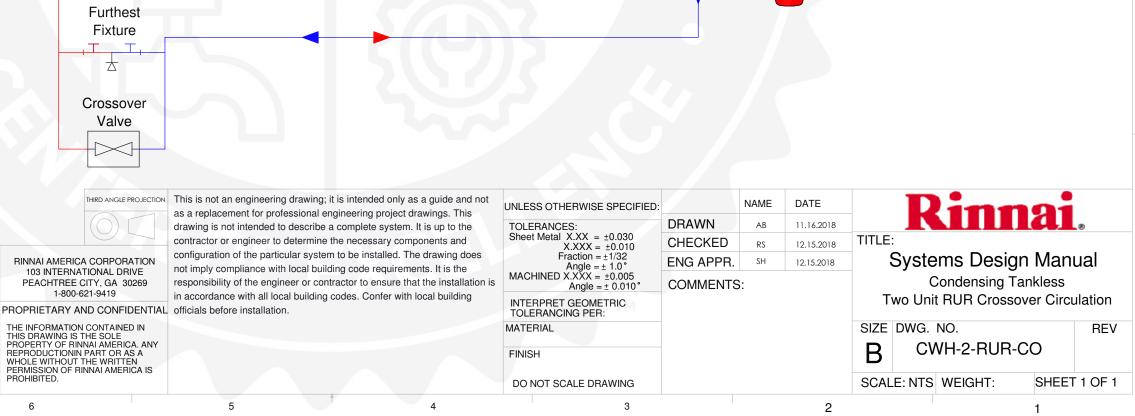

Gas Supply

Cold Water Supply

6

Hot Water Supply

Furthest

Fixture

Crossover Valve

RINNAI AMERICA CORPORATION

103 INTERNATIONAL DRIVE

PEACHTREE CITY, GA 30269

1-800-621-9419

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF RINNAI AMERICA. ANY REPRODUCTIONIN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RINNAI AMERICA IS PROHIBITED.