


QUICKSCORE UNIVERSAL OUTDOOR GAME SCORER Assembly Manual




Parts List

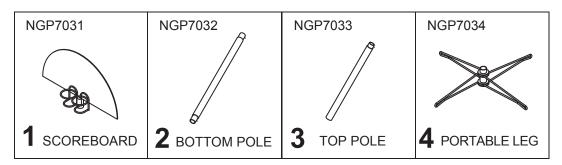

Ver. 11/17 BG3400

Step 1: Unfold the portable leg #4




Step 2: Assemble the bottom pole #2 to the portable leg #4.



Step 3: Assemble top pole #3 to the bottom pole #2.



Step 4: Assemble scoreboard #1 to the top pole #3.



Now you're ready to play!

LIMITED WARRANTY


This product is warranted to be free from defects in material and workmanship for a period of 90 days from date of purchase. Should any evidence of defects in material and/or workmanship appear within the Limited Warranty period, manufacturer will either replace or repair the product at its option. This warranty covers normal consumer use and does not cover failure which results from alteration, accidents, misuse, abuse or neglect. An original receipt will be required before warranty performance can be rendered. Requests for return authorization should be sent to: Blue Wave Products, 1745 Wallace Ave., St. Charles, IL 60174. This warranty gives you specific legal rights and you may have other rights which may vary by state.



MARQUEUR DE JEU EXTÉRIEUR UNIVERSEL QUICKSCORE Instructions D'assemblage




Liste des pièces

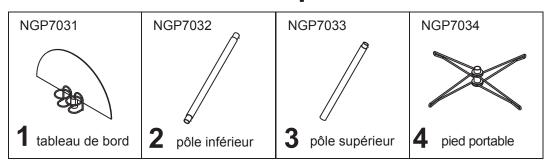

Ver. 11/17 BG3400

Étape 1 : Déplier la pied portable (4)




Étape 2 : Assemblez le pôle inférieur (2) à la pied portable (4)



Étape 3 : Assembler le pôle supérieur (3) au pôle inférieur (2)



Étape 4 : Assembler le tableau de bord (1) au pôle supérieur (3)



Vous êtes maintenant prêts à jouer!

GARANTIE LIMITÉE

Ce produit est garanti libre de défaut de matériel et main d'œuvre pour une période de 90 jours à compter de la date d'achat. Si une preuve de défaut matériel et/ou de main d'œuvre apparaitre pendant la période de garantie limitée, le fabricant s'engage remplacer ou réparer le bien à sa discrétion. Cette garantie couvre un usage normal et ne couvre pas les défaillances provenant d'altération, mauvais usage, accidents, abus ou négligence. Un reçu original sera requis avant que la garantie ne puisse être invoquée. Les demandes pour autorisation de retour doivent être soumises à: Blue Wave Products, 1745 Wallace Ave., St. Charles, IL 60174 or call 800-759-0977. Cette garantie vous accorde des prérogatives légales spécifiques et vous pourriez avoir d'autres droits qui peuvent varier selon les états.