
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

430-701 ARRAY ROUND DINING TABLE TOP
430-B01 ARRAY ROUND DINING TABLE BASE

www.kincaidfurniture.com
Phone : 828-728-3261.

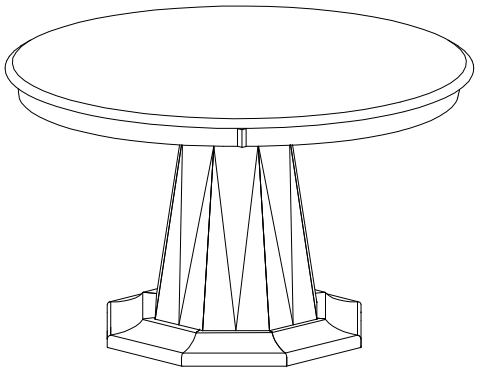

2) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

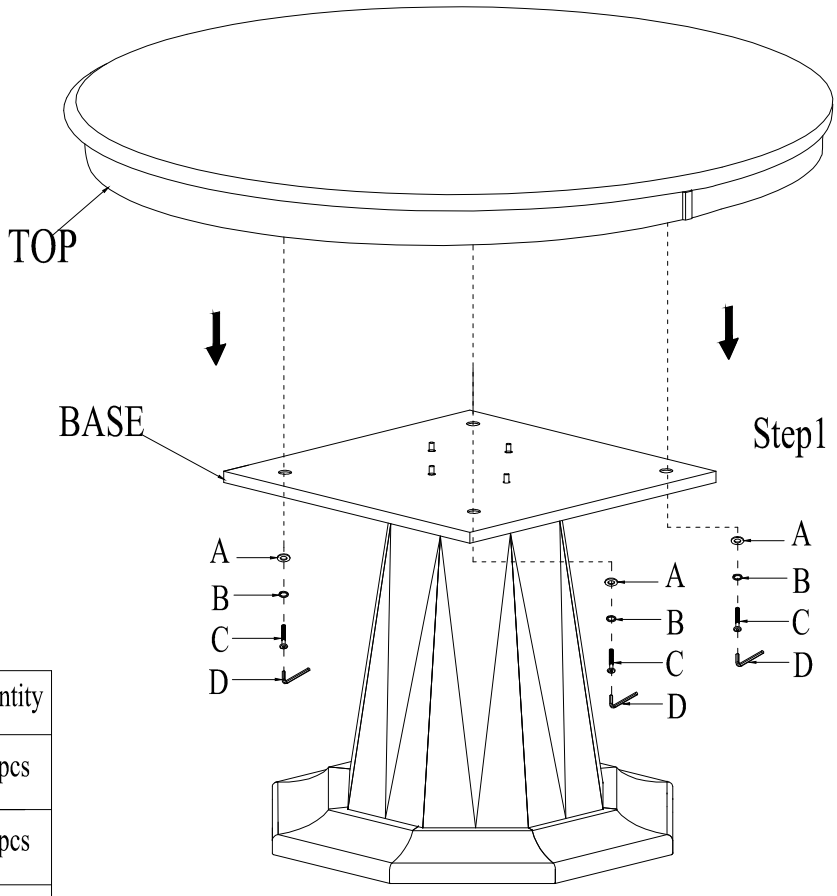

NO.	Dimension	Shape	Quantity
A	Flat Washer #5/16"*19		4pcs
B	Lock Washer Ø5/16"		4pcs
C	Bolt 5/16*45mm		4pcs
D	Allen Key 4mm		1pc