FLEXSTEEL®

Power Inclining Loveseat

IMPORTANT NOTE

Read these instructions carefully and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bad and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

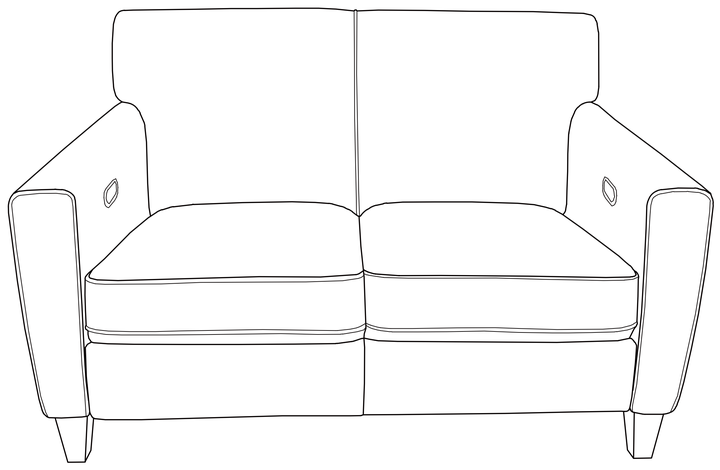

Part List

A. Sofa Back & Seat	B. Wood Leg	C. M8*80 Hex Screw & Flat Washer	D. Plastic Floor Protector	E. Plastic Leg	F. Transformer	G. Hexkey
1 piece	4 pieces	4 pieces	4 pieces	1 piece	1 piece	1 piece

Assembly Instructions

STEP 1

Detach the Transformer (F) and Leg with fittings (B C D E G) from the bottom of the seat. (See Figure 1.)

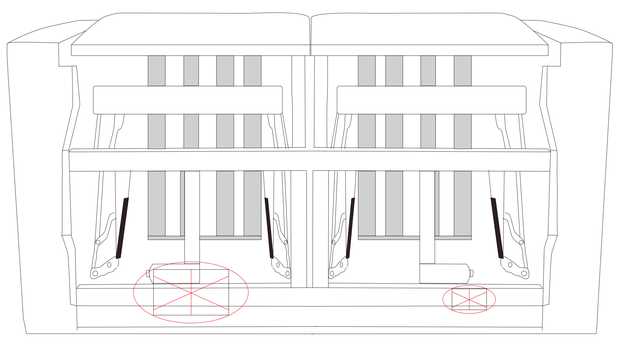

Figure 1

STEP 2

Attach the Plastic Leg (E) and fix the Wood Leg (B) with Screw (C). Then press the Plastic Floor Protector (D) into the bottom of leg. (See Figure 2.)

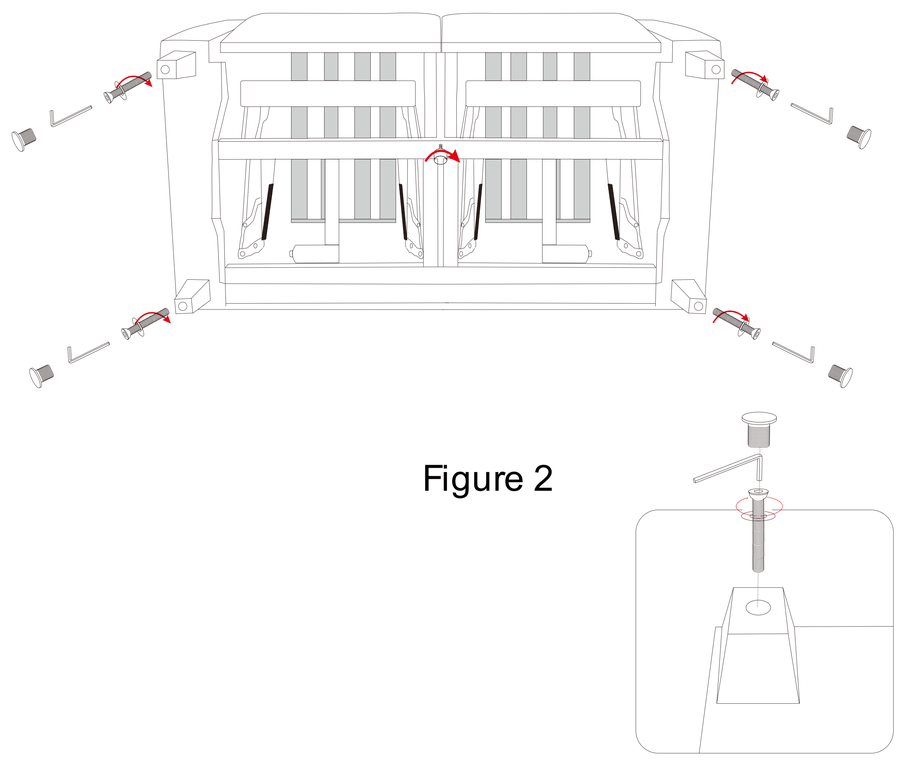

Figure 2

STEP 3

Connect the base motor cable to the adapter and plug the Transformer (F) into a nearby outlet. (See Figure 3.)

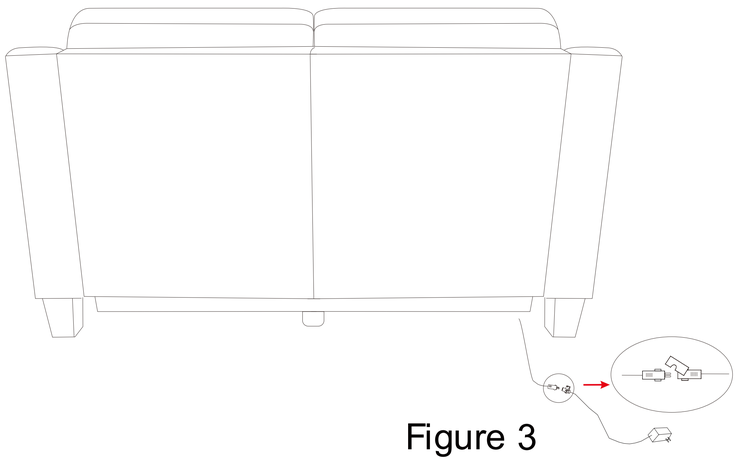

Figure 3

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose hardware and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.