
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

430-744 EDGE RECTANGULAR DINING TABLE

www.kincaidfurniture.com
Phone : 828-728-3261.

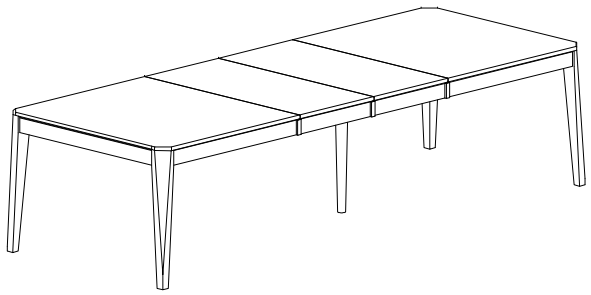

5) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.


. Remove all wrapping materials,including staples and packing straps before you start to assemble.


. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

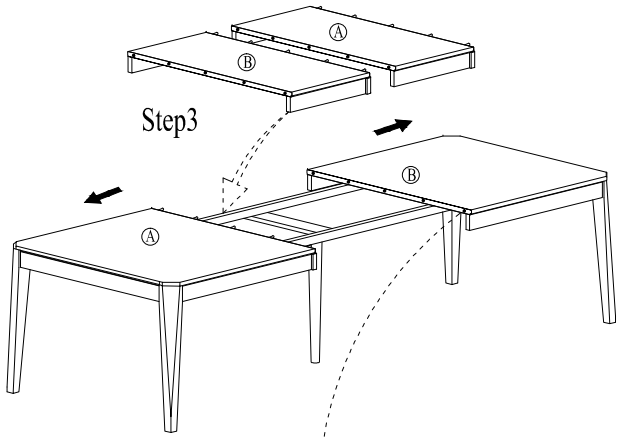

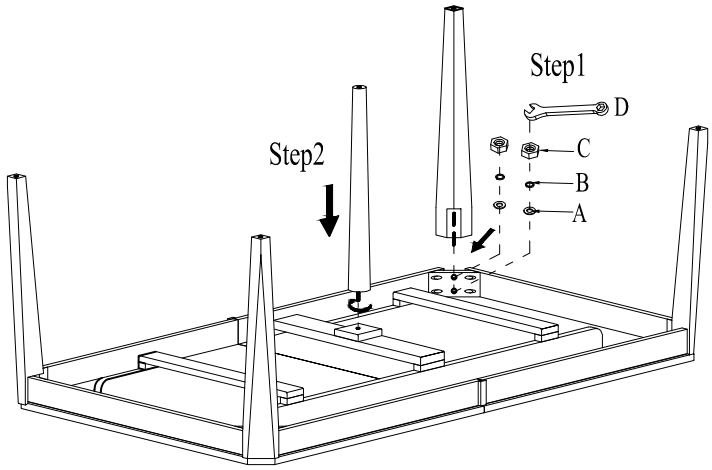

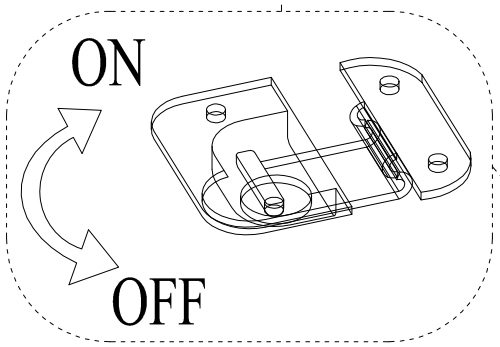

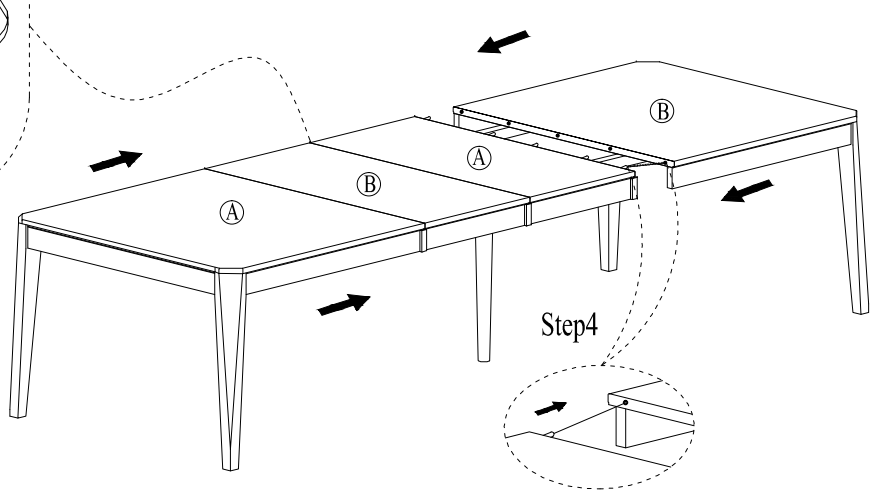

NO.	Dimension	Shape	Quantity
A	Flat Washer #5/16"*19		8pcs
B	Lock Washer Ø5/16"		8pcs
C	Nuts 5/16"		8pcs
D	Wrench 12mm		1pc