
KINCAID

SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

706-701 BUTTON DINING TABLE

www.kincaidfurniture.com
Phone : 828-728-3261.

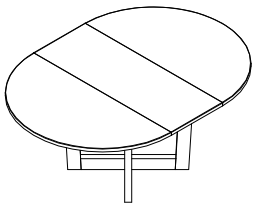

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.


. Remove all wrapping materials,including staples and packing straps before you start to assemble.


. Do not tighten all screws and bolts until completely assembled.


. Keep all hardware out of the reach of children.

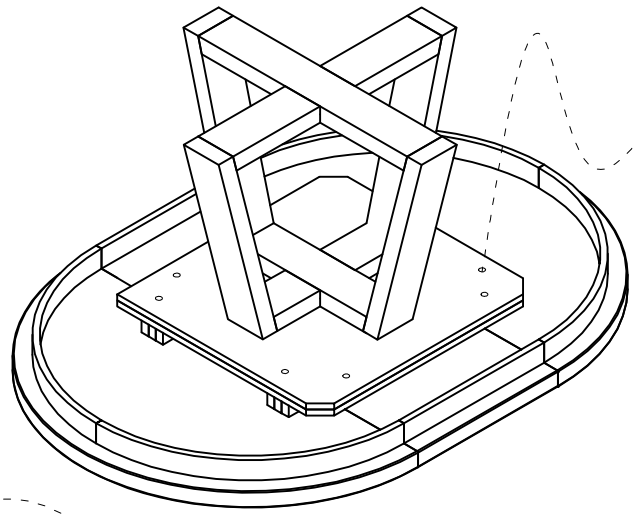


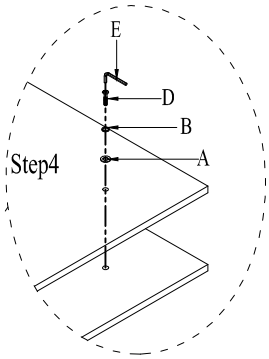

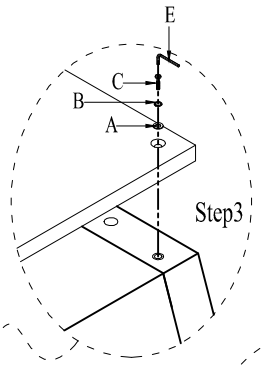

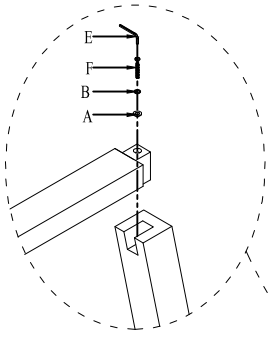

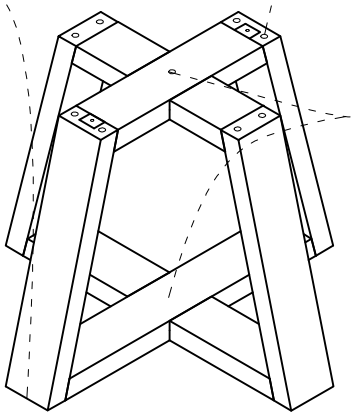

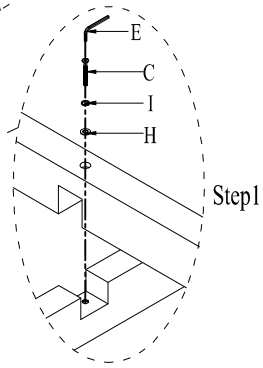

NO.	PART DESCIPTION		Q'TY
A	Flat washer 5/16"*19		16pcs
B	Lock washer 5/16"		16pcs
C	Bolt 5/16"*32mm		10pcs
D	Bolt 5/16"*25mm		8pcs
E	Allen key 4mm		1pcs
F	Bolt 5/16"*38mm		2pcs