

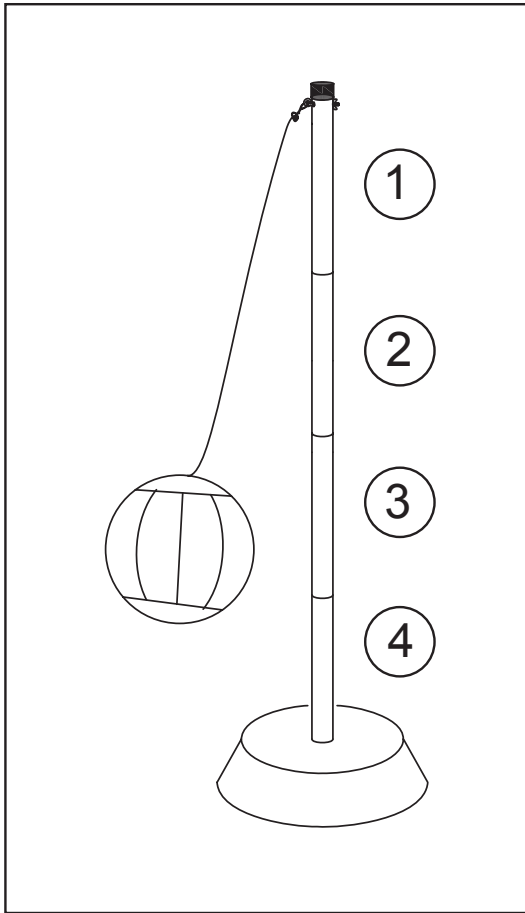


Designed for Fun, Built to Last™









Classic Tether Ball

Item
BG5034

PLAYING INSTRUCTIONS



Parts List

	①	27"	Tube 1	1
	②	29"	Tube 2	1
	③	29"	Tube 3	1
	④	27"	Tube 4	1
	⑤		Air Pump	1
	⑥		Tetherball	1
	⑦		Base	1
	⑧		"J" Ground Stake	3

NOTE:

Base must be filled with water or sand. It is recommended that sand be used for additional strength and safety. If sand is used, you may need to shake or lift the base to better fill it.

INSTRUCTIONS:

Step 1: Assemble the hook on the cord with tetherball to the steel "I" bolt on the top pole #1. Adjust length of cord to players' height.

Step 2: Insert the bottom pole #4 into the base, make sure the pole flat side matches the flat side in the base

Step 3: Assemble the poles #1, #2 and #3 together onto pole #4

Step 4: Fill base with either water or sand.

Step 5: If you have your portable tetherball set on grass you can use the 3 "J" ground stakes for additional stability.

Storage: Poles fit into the bottom of the base for compact storage.

Parts List

Tube 1	NGP7430	Air Pump	NGP7434
Tube 2	NGP7431	Tetherball	NGP7435
Tube 3	NGP7432	Base	NGP7436
Tube 4	NGP7433	Ground Stake	NGP7437

WARNING!

Adult supervision is necessary whenever children are playing. Being hit by a thrown object can result in a serious injury.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of 90 days from date of purchase. Should any evidence of defects in material and/or workmanship appear within the Limited Warranty period, manufacturer will either replace or repair the product at its option. This warranty covers normal consumer use and does not cover failure which results from alteration, accidents, misuse, abuse or neglect. An original receipt will be required before warranty performance can be rendered. Requests for return authorization should be sent to: Blue Wave Products, 1745 Wallace Ave., St. Charles, IL 60174. This warranty gives you specific legal rights and you may have other rights which may vary by state.

For replacement parts, further warranty information or inquiries, please call 800-759-0977

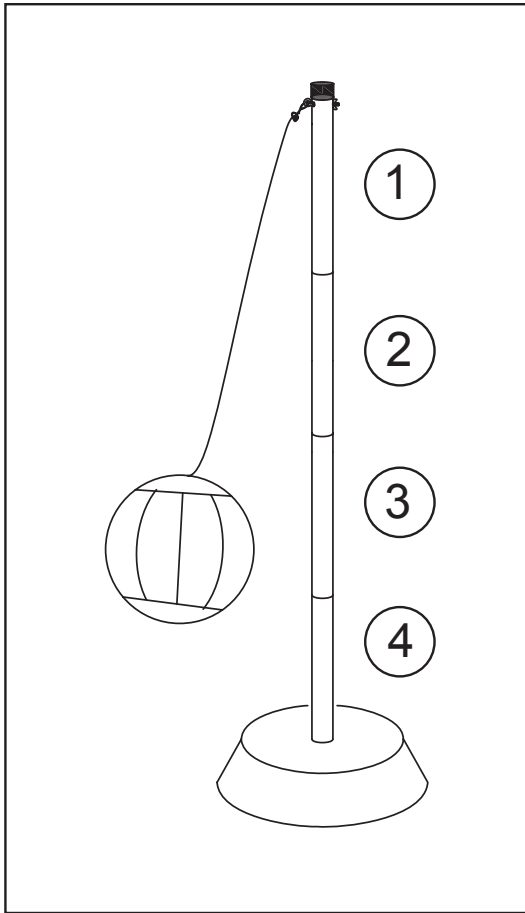


Designed for Fun, Built to Last™









Tetherball Classique

Article
BG5034

INSTRUCTIONS DE JEU



Liste des pièces

	①	27"	tube 1	1
	②	29"	tube 2	1
	③	29"	tube 3	1
	④	27"	tube 4	1
	⑤		pompe à air	1
	⑥		tetherball	1
	⑦		base	1
	⑧		piquet de terre	3

REMARQUE:

La base doit être remplie d'eau ou de sable. C'est recommandé que le sable soit utilisé pour plus de force et de sécurité. Si vous utilisez du sable, vous devez souvent secouer ou soulever la base pour mieux la remplir.

INSTRUCTIONS:

Étape 1: Assemblez le crochet sur le cordon avec la boule d'attache au boulon «I» en acier situé sur le poteau supérieur n° 1. Ajustez la longueur du cordon à la hauteur des joueurs.

Étape 2: Insérez le poteau inférieur n° 4 dans la base, assurez-vous que le côté plat du poteau correspond au côté plat de la base

Étape 3: Assemblez les pôles n° 1, n° 2 et n° 3 ensemble sur le pôle n° 4

Étape 4: Remplissez la base d'eau ou de sable.

Étape 5: Si votre boule de longe portable est posée sur de l'herbe, vous pouvez utiliser les 3 piquets de sol en "J" pour plus de stabilité.

Stockage: les montants s'insèrent dans le bas de la base pour un rangement compact.

Liste des pièces

tube 1	NGP7430	pompe à air	NGP7434
tube 2	NGP7431	tetherball	NGP7435
tube 3	NGP7432	base	NGP7436
tube 4	NGP7433	piquet de terre	NGP7437

ATTENTION!

La supervision d'un adulte est nécessaire dès que des enfants jouent. Être frappé par un objet qui a été lancé peut occasionner des blessures graves

GARANTIE LIMITÉE

Ce produit est garanti libre de défaut de matériel et main d'œuvre pour une période de 90 jours à compter de la date d'achat. Si une preuve de défaut matériel et/ou de main d'œuvre apparaît pendant la période de garantie limitée, le fabricant s'engage à remplacer ou réparer le bien à sa discrétion. Cette garantie couvre un usage normal et ne couvre pas les défaillances provenant d'altération, mauvais usage, accidents, abus ou négligence. Un reçu original sera requis avant que la garantie ne puisse être invoquée. Les demandes pour autorisation de retour doivent être soumises à: Blue Wave Products, 1745 Wallace Ave., St. Charles, IL 60174 or call 800-759-0977. Cette garantie vous accorde des prérogatives légales spécifiques et vous pourriez avoir d'autres droits qui peuvent varier selon les états.

Pour des pièces de remplacement, plus d'information sur la garantie ou pour plus d'information, veuillez appeler le 800-759-0977