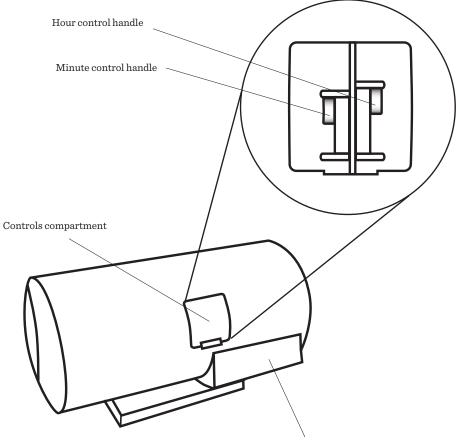# Flip Clock

INCLUDED:

1.5V Size C Battery (x1)

SETTING INSTRUCTIONS

1. Remove the Controls Compartment door and zero the minute flaps by gently and repeatedly pushing down the Minute Control Handle. Stop at any whole hour (ex: 11:00 am).

2. Remove the Battery Compartment cover, remove and unwrap the Battery (included), and re-insert the Battery by referencing the orientation diagram inside the compartment.

3. Set the correct hour time by gently and repeatedly pushing down the Hour Control Handle.

4. Set the correct minute time by gently and repeatedly pushing down the Minute Control Handle, stopping one minute ahead of the correct time.

Hour control handle

Minute control handle

Controls compartment

Battery compartment