


INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301




1 Insert Poles in Corner Anchors

Lay the inner tent on the ground and arrange pole set so pole color matches corner webbing color. Insert locking pole tips into corner grommets.



2 Attach Inner Tent to Poles

Attach the inner tent canopy to the poles using pole clips. The integrated Flybar™ clip attaches like a normal pole clip but significantly increases headroom and interior volume.

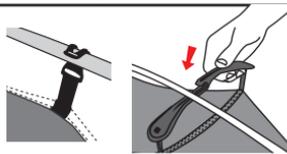

3 Stake in Place

Position your tent as desired and stake the corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. For hard ground, tie anchors to rocks or other heavy objects.



4 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the webbing straps on the corners of the fly and secure their grommets under the main pole end tips.



5 Vestibule(s) and Tension Fly

Secure poles to rain fly with internal pole wraps. Stake vestibule(s) and pull firmly on all adjustable corner anchors. Add guylines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.



6 Volumize (optional)

Locate integrated small plastic hook(s) to connect rain fly to inner tent near door(s). Attach each hook to its corresponding webbing loop for increased interior volume.




©2019 NEMO Equipment, Inc.

Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

**HORNET™ ELITE
SERIES**

INSTRUCTIONS DE MONTAGE

Service à la clientèle de NEMO
Courriel : journey@nemoequipment.com
Téléphone : 800-997-9301




1 Insérer les mâts dans les arceaux

Étendre la tente intérieure sur le sol, et disposer l'ensemble de mâts de façon à ce que la couleur des mâts corresponde à la couleur des sangles des coins. Insérer les embouts de blocage des mâts dans les oeillets des coins



2 Attacher la tente intérieure aux mâts

Attacher la canopée de la tente intérieure aux mâts à l'aide des clips arceaux. Le clip intégré Flybar™ s'attache comme un clip arceau normal, mais accroît considérablement le volume intérieur et en hauteur.

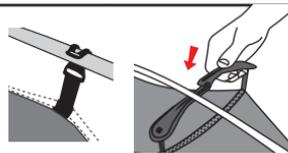

3 Fixer en place

Positionner votre tente comme souhaité, et planter les arceaux. Pendant que vous tirez sur les coins, prêtez attention à la tension au niveau du sol de la tente afin de la maintenir à plat. Pour les sols durs, accrocher les arceaux à des pierres ou d'autres objets lourds.



4 Attacher le double-toit

Couvrir la tente intérieure avec le double-toit. Localiser les sangles des coins du double-toit et fixer leurs oeillets sous les embouts des mâts principaux.




5 Abside(s) et double-toit

Fixer les mâts au double-toit à l'aide des rabats internes. Fixer le ou les absides et tirer fermement sur tous les arceaux ajustables. Ajouter des cordes de tension pour plus de résistance. Une tente correctement tendue assure une protection contre l'eau et une résistance au vent maximales.



6 Volumiser (facultatif)

Localiser le ou les petits crochets en plastique pour connecter le double-toit à la tente intérieure près de la ou des portes. Attacher chaque crochet à la boucle de sangle correspondante pour un volume, intérieur accru.

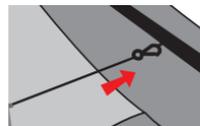

©2019 NEMO Equipment, Inc.

Rappelez-vous de ne rien laisser derrière vous. Avant de quitter votre terrain de camping, assurez-vous de n'avoir rien laissé derrière vous, déplacer ou endommager.

SÉRIE
HORNET™ ELITE