


INSTRUCCIONES DE USO

1. Precaliente el aparato: Cierre las placas y enchufe el aparato en una toma de corriente.
2. Gire la perilla de control de temperatura para ajustar la temperatura al nivel deseado.
3. La luz roja se encenderá para indicar que le aparato está en tensión. La luz verde de listo se encenderá cuando esté listo para su uso.
4. Cuando la luz verde se encienda, vierta la mezcla en la placa inferior. Cierre las placas; el indicador luminoso verde se apagará.
5. Cuando las pizzellas estén listas, la luz verde se iluminará otra vez. Nota: El ajuste de temperatura elegido determinará el tiempo de cocción.
6. Abra las placas. Retire las pizzellas, soltando los bordes con un utensilio que no sea de metal.

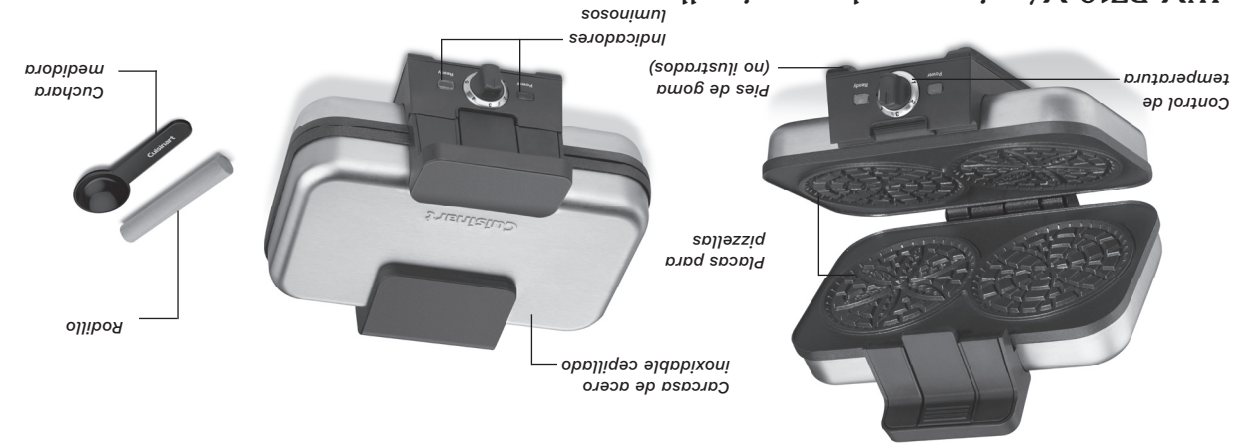

Escanear para ver el manual de instrucciones y la información de garantía

Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso. El manual de instrucciones completo y la información de garantía están disponibles a través del código QR, visitando <https://conair.bc5.io/5/13?u=WM-PZ10> o llamando al 1-800-726-0190.




Cuisinart®



Follow us @cuisinart

OPERATING INSTRUCTIONS

1. Preheat the Pizzelle Press: Close lid and plug cord into a standard electrical outlet.
2. Adjust the temperature knob to the desired browning setting.
3. The red light will go on to signal power. The green indicator light will go on when the unit is ready to use.
4. When the green indicator light goes on, scoop batter onto bottom plates according to the recipes provided. Close the lid. The green light will go off.
5. Once the pizzelle are ready to be removed from the unit, the green light will illuminate once again. Baking time is determined by browning level.
6. Lift the top cover. Remove the pizzelle by loosening the edges of the pizzelle with a nonmetal utensil.

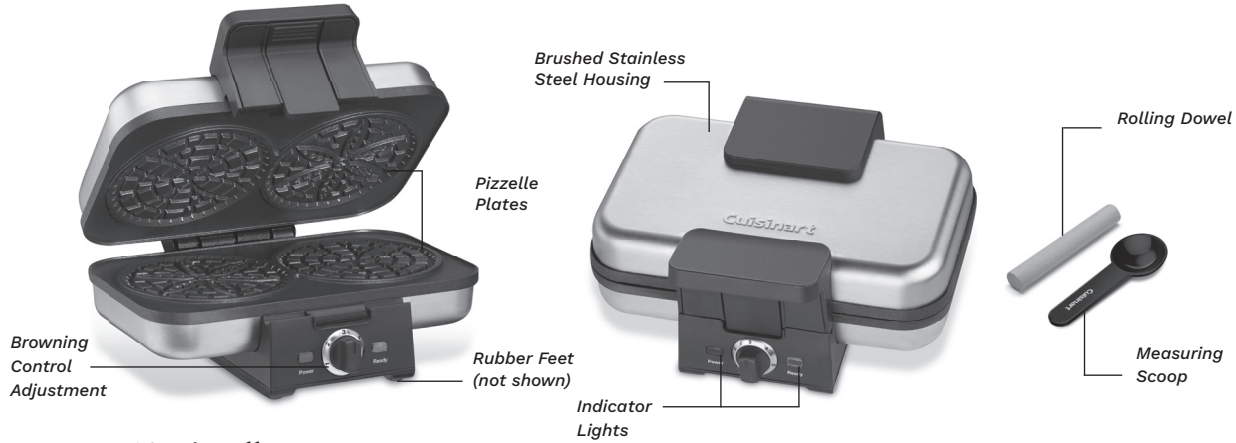

WM-PZ10 Pizzelle Press



Scan Now
for User Guide & Warranty

For your safety and continued enjoyment, always read the full user guide for this product before using. The full user guide and important warranty information can be accessed using the QR code or at <https://conair.bc5.io/5/13?u=WM-PZ10> or by calling 1-800-726-0190.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET

INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over. The extension cord should be for a polarized plug and outlet.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

CLEANING AND MAINTENANCE

Once you have finished cooking, remove plug from electrical outlet. Be certain plates have cooled completely before cleaning or handling. Never take your Fizzelle Press apart for cleaning. Simply brush crumbs from grooves, and absorb any excess cooking oil by wiping with a dry cloth. To clean exterior, wipe with a soft, dry cloth. Never use an abrasive cleanser or harsh pad. NEVER IMMERSE CORD, PLUG OR UNIT IN WATER OR OTHER LIQUIDS.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles and dials.
3. To protect against fire, electric shock, and injury to persons, DO NOT IMMERSE CORD, PLUG, OR UNIT in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children or individuals with certain disabilities.
5. Always unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
7. Return appliance to the nearest Cuisinart Authorized Service Facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by Cuisinart may result in fire, electric shock, or injury to persons.
9. Do not use outdoors.
10. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Always unplug the unit when finished pressing pizzelle.
13. To safely disconnect power at any time, remove the plug from the outlet.
14. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
15. WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL. NO USER-SERVICEABLE PARTS ARE INSIDE.
16. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
17. This appliance must be operated only in the closed position.
18. Any other servicing should be performed by an authorized service representative.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

1. LEA TODAS LAS INSTRUCCIONES.
2. No toque las superficies calientes; use los mangos/asas/agarraderas o los botones/perillas/diales.
3. Para reducir el riesgo de incendio, descarga eléctrica o lesiones personales, NO SUMERJA EL CABLE, EL ENCHUFE, NI EL APARATO EN AGUA U OTROS LÍQUIDOS.
4. Supervise el uso de este aparato con cuidado cuando sea usado por o cerca de niños o personas con ciertas discapacidades.
5. Desenchufe el aparato cuando no esté en uso y antes de limpiarlo. Deje que se enfríe antes de instalar/quitar piezas y antes de limpiarlo.
6. No use este aparato si el cable o el enchufe están dañados, después de un mal funcionamiento, después de una caída, o si está dañado; devuélvalo a un centro de servicio autorizado para su revisión, reparación o ajuste.
7. El uso de accesorios no recomendados por Cuisinart presenta un riesgo de incendio, descarga eléctrica o lesiones personales.
8. No lo use en exteriores.
9. No deje que el cable cuelgue de la encimera o de la mesa, ni que tenga contacto con superficies calientes.
10. No coloque el aparato sobre o cerca de un quemador a gas o de un hornillo eléctrico caliente, ni en un horno caliente.
11. Solo use este aparato para el uso previsto.
12. Siempre desenchufe el aparato después del uso.
13. Para desconectar el aparato de forma segura en cualquier momento, desenchufe el cable.
14. Tenga sumo cuidado al mover un aparato que contenga aceite u otro líquido caliente.
15. ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIO O DESCARGA ELÉCTRICA, LAS REPARACIONES DEBEN SER REALIZADAS POR UN TÉCNICO CALIFICADO. ESTE APARATO NO CONTIENE NINGUNA PIEZA QUE PUEDA SER REPARADA/REEMPLAZADA POR EL USUARIO.
16. No haga funcionar el aparato debajo o dentro de un armario/gabinete. Siempre desenchufe el aparato antes de almacenarlo en un armario/gabinete. Dejar el aparato enchufado representa un riesgo

- de incendio, especialmente si este toca las paredes o la puerta del armario/gabinete cuando se cierra.
17. No haga funcionar este aparato con las placas abiertas; siempre deben estar cerradas durante el uso.
 18. Cualquier otro servicio debe ser realizado por un técnico autorizado.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE USO DE ALARGADORES

El cable provisto con este aparato es corto, para reducir el peligro de que alguien se enganche o tropiece con un cable más largo. Puede usar un alargador, siempre que respete las precauciones siguientes. La clasificación nominal del alargador debe ser por lo menos igual a la del aparato. El alargador deben ser acomodado de tal manera que no cuelgue de la encimera/mesa, donde pueda ser jalado por niños o causar tropezos. Use solamente cables con enchufe polarizado.

AVISO: El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, aquel enchufe se podrá enchufar de una sola manera en las tomas de corriente polarizadas. Si no entra en la toma de corriente, invértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente modificarlo.

LIMPIEZA Y MANTENIMIENTO

Desconecte el cable de la toma de corriente después del uso. Compruebe que las placas estén completamente frías antes de limpiarlas o manipularla. Nunca desarme el aparato para limpiarlo. Simplemente quite los residuos de las placas con una brocha y absorba el aceite con un paño seco. Limpie la carcasa del aparato con un paño suave seco. Nunca use limpiadores ni estropajos abrasivos. NUNCA SUMERJA EL CABLE, EL ENCHUFE, NI EL APARATO EN AGUA U OTROS LÍQUIDOS