

Cuisinart®

Salt, Pepper and Spice Mill

SG-3 SERIES



Instruction
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not put the charger base or motor body of this appliance in water or other liquid. Never submerge any other portion of this unit. If any part falls into liquid, remove immediately. Carefully remove, clean and dry unit thoroughly before continuing.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Unplug charger base from outlet before cleaning.
5. Charger base should be plugged into an electrical outlet away from sink or hot surfaces.
6. Do not use an extension cord. Plug charger base adapter directly into an electrical outlet.
7. Do not use appliance for other than intended use.
8. **Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, or mechanical or electrical adjustment.**
9. The use of attachments or accessories not recommended by Cuisinart may cause fire, electrical shock or risk of injury.
10. This appliance is intended for household use only and not for commercial or industrial use.
11. Do not operate a damaged charger. Have damaged charger replaced immediately.
12. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
13. **Do not incinerate the mill, even if it is damaged. Severe injury can occur if the batteries are placed in a fire.**
14. This product contains, nickel-metal hydride (NiMH) batteries, which must be recycled at the end of the life of the product and disposed of properly. (See Disposal/Recycling of Batteries, page 6.) **Do not incinerate or compost batteries, as risk of severe injury can occur at high temperatures.**
15. Leaks from battery cells can occur under extreme conditions. If the liquid, which is a 20–35% solution of potassium hydroxide, gets on the skin, (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
16. Avoid contacting moving parts.
17. Do not use outdoors.
18. Do not let cord hang over edge of table or counter.
19. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
21. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

**SAVE THESE
INSTRUCTIONS
FOR HOUSEHOLD
USE ONLY**

CONTENTS

Important Safeguards	2
Parts and Features	3
Assembly	4
Operation	5
Quick Tips	6
Charging & Battery Life	6
Cleaning and Maintenance	6
Disposal/Recycling of Batteries	6
Warranty	7

PARTS AND FEATURES

- 1. Measuring Cap**
1 teaspoon capacity
- 2. Removable Grinding Containers**
Clear for easy viewing, and hold large portions for less refills
- 3. Rechargeable Batteries (Not Shown)**
- 4. Comfort Grip Housing**
Ergonomically designed for comfort and ease of use
- 5. On/Off Button**
Operates mill when pressed
- 6. Charging Base**
Plugs into outlet and brings unit to full recharge
- 7. Spice Catcher**
Removable tray easily discards leftover spices
- 8. Charge/Ready Light**
Illuminates red when charging and blue when fully charged.
- 9. Adjustable Grind Dial**
Choose from 5 set positions from coarse to fine
- 10. Grind Directional Arrows**
Indicates which direction to turn the adjustable grind dial for desired setting
- 11. Cord Storage (not shown)**
- 12. BPA Free (not shown)**
All materials that come in contact with food are BPA free.




ASSEMBLY


To assemble your Cuisinart® Salt, Pepper and Spice Mill for use:

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.

2. Attach grinding container(s) to the unit housing. **NOTE:** It is best to attach the grinding container from the bottom while holding the unit upright. See fig.1.

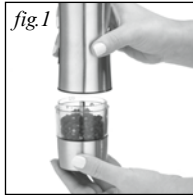


3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned. See fig.2.

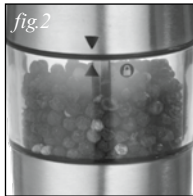


4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing. See fig.3.



5. Secure the grinding container in place by twisting the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly. See fig.4.

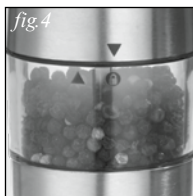

6. To attach the second grinding container, flip the unit housing over and repeat assembly instructions. See fig.5.

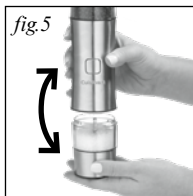

7. Your Cuisinart® Salt, Pepper and Spice Mill is now assembled. See fig.6.



For use with measuring cap:

1. To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. See fig.7.



2. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** When not in use, the measuring cap should remain in the uppermost grinding container, as the unit housing will not fit into the charging base if the measuring cap is on the lower container.


To assemble charging base for use:

1. Place housing, charging base and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.

2. Place the removable spice catcher into the charging base so that it fits securely. **NOTE:** The spice catcher will only fit into the charging base one way. See fig.8.



3. Connect power adapter to the charging base by grasping the pin on the power adapter and inserting it vertically into the back of the charging base until secure. **NOTE:** Do not insert power adapter into the charging base while power adapter is plugged into a power source. See fig.9.

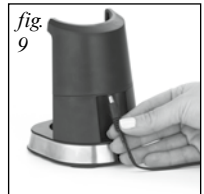

CHARGING INSTRUCTIONS


To charge your Cuisinart® Salt, Pepper and Spice Mill for use:

1. Follow **assembly instructions** for the Cuisinart® Salt, Pepper and Spice Mill and charging base on page 4 to properly assemble for charging.


2. Grasp assembled unit securely and make sure it is facing upright. The Salt, Pepper and Spice Mill is facing upright when the Cuisinart® logo on the front of the unit is in proper reading orientation (easy to read and horizontal.) See fig.10.



3. Place the fully assembled Salt, Pepper and Spice Mill in the charging base so that the recessed area on the back of the unit housing fits comfortably with the protrusion on the charging base. See fig.11.

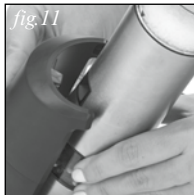

4. Plug charging base into a 120v power outlet. Your unit is now charging for use. **NOTE:** Unit is properly charging if red LED illuminates from charging base. See fig.12.

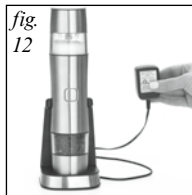

OPERATION INSTRUCTIONS

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly and properly assembled before use.
2. Attach grinding container(s) to the unit housing with sea salt, peppercorns, or desired dried spice. **NOTE:** It is best to

attach the grinding container from the bottom while holding the unit upright.

3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned.
4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing.
5. Twist the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly.
6. To attach the second grinding container, flip the unit housing over and repeat operating instructions.
7. Press the On/Off button in the center of the unit housing to begin grinding. **NOTE:** Only the bottom container will yield any grinding results. Even though the grinding container facing upward will rotate, no grinding will actually take place.

For use with measuring cap:

To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** **The measuring cap can be used on either container during operation only.** When not in use, the measuring cap should remain in the uppermost grinding container as the unit housing will not fit into the charging base if the measuring cap is on the lower container.

ADJUSTING THE GRIND

To adjust the grind from fine to coarse, use the adjustment dial on the underside of the mill. Clockwise for a finer grind and counterclockwise for a coarser grind.



QUICK TIPS

- Before first use, the batteries must be charged for 13 hours.
- To clear a peppercorn that is stuck in the grinding wheel you may either:
 1. Turn the mill upside down and shake gently while pressing the On/Off power button.
 2. Turn the mill upside down and position the grind selector to coarse, then hold over a plate and grind until peppercorn is dislodged.
- Never use moist or wet spices in the mill. This will clog the grinding mechanism. We recommend using only store-bought dried spices.
- To improve battery performance, it is recommended that you occasionally unplug the charging base and run the mill until its battery is fully discharged and it stops operating. Once discharged, plug the charging base back into the electrical outlet and recharge the mill for 13 hours. This procedure improves battery capacity and should be repeated every 2–3 months.
- Clean the mill and base by simply wiping all parts with a damp cloth and thoroughly drying. Do not place in the dishwasher. Avoid wetting battery contacts.

CHARGING & BATTERY LIFE

Your Cuisinart® Salt, Pepper and Spice Mill is equipped with NiMH batteries. We have selected these batteries to give you maximum battery life and long running times.

If batteries should run down completely, it will take between 8 and 13 hours to fully recharge them. Normally, you won't run batteries down completely, since the running time with a full charge is up to 20 minutes. It varies depending on your usage, but most grinding tasks take only about 5 seconds. If your battery is no longer charging, it is time to replace the battery. Please call our Consumer Service Center at 1-800-726-0190 for instructions on returning your unit for battery replacement.

CONTINUOUS CHARGING

The unit is designed so that the batteries may remain on continuous charge. It is recommended that the Salt, Pepper and Spice Mill charger be kept plugged into a wall socket, so that the mill will always be ready to use. Leaving the unit on continuous charge is inexpensive in terms of the amount of electricity being used.

Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.

HOLDING THE CHARGE

The batteries hold most of their charge even when not plugged in and charging, losing only about 30% of total charge per month.

SHORT RUN TIMES

If, after repeated use, the run time seems to get shorter and the Salt, Pepper and Spice Mill has less power, remove the plug from the wall outlet and continue to use mill until it is fully discharged and stops operating. Plug base back into wall outlet and recharge the unit for 13 hours or overnight for a full new charge. This procedure improves battery capacity and should be repeated once every 2–3 months to ensure optimum performance.

CLEANING AND MAINTENANCE

Simply wipe all parts with a damp cloth then dry thoroughly. Do not place in the dishwasher. Avoid wetting battery contacts. Any other servicing should be performed by an authorized service representative.

DISPOSAL/RECYCLING OF BATTERIES

This product uses four NiMH rechargeable and recyclable batteries. At the end of the batteries' useful life, they should be recycled. These batteries must not be incinerated or composted.

NiMH batteries should not be put in municipal waste systems. Contact your local waste collection agency for proper recycling and disposal information for your area.

Please do not attempt to dismantle the mill to replace these batteries on your own. Damage could result to the unit.

When it is time to replace and/or recycle the batteries, or to receive additional instructions for disposing of old batteries, call toll-free 1-800-726-0190 for instructions on how to ship your Salt, Pepper and Spice Mill back to Cuisinart. Or send the Salt, Pepper and Spice Mill to: Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

Limited Warranty

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Salt, Pepper, and Spice Mill ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of THREE (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party, may void, this Limited Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void, this Limited Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

It is recommended that you visit the website, <https://cuisinart.registria.com>, for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

Hassle-free warranty

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

California Residents Only

The three (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to

their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190

©2024 Cuisinart
Glendale, AZ 85307
Printed in China

24CE94002

IB-12261-ESP-C

Cuisinart®

Molinillo de sal, pimienta y especias

SERIE SG-3



Manual de Instrucciones

Para su seguridad y para disfrutar plenamente de este producto,
siempre lea las instrucciones cuidadosamente antes de usarlo.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, debe tomar precauciones básicas de seguridad, incluso las siguientes:

1. LEA TODAS LAS INSTRUCCIONES.

2. Para reducir el riesgo de electrocución, no ponga la base de carga o el bloque-motor en agua u otro líquido. No sumerja ninguna otra parte del aparato en agua u otro líquido. Si el aparato cayera en líquido, desconéctelo y luego retírelo del líquido. Limpie y seque cuidadosamente la unidad antes de continuar.
3. No haga funcionar el aparato en la presencia de vapores explosivos o inflamables.
4. Desconecte la base de carga de la toma de corriente antes de limpiarla.
5. Conecte la base en una toma de corriente alejada del fregadero o de superficies calientes.
6. No utilice una extensión. Enchufe la base de carga directamente en una toma de corriente.
7. No utilice el aparato para ningún otro fin que no sea el indicado.
8. **No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.**
9. El uso de accesorios no recomendados por Cuisinart presenta un riesgo de incendio, electrocución o herida.
10. Para uso doméstico solamente. No aprobado para uso comercial o industrial.
11. No utilice el cargador si está dañado. Reemplace el cargador inmediatamente.
12. Utilice el adaptador sector y la base de carga proveídos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.
13. **No queme el molinillo, aunque esté gravemente dañado. Incinerar la batería puede causar graves heridas.**
14. Este aparato está equipado con baterías recargables de níquel e hidruro metálico (NiMH), las cuales deben reciclarse según las leyes vigentes al final de la vida útil del aparato. Véase la sección "Reciclaje de las baterías" en la página 6. **No queme ni coloque las baterías en un compostador, ya que pueden explotar por el calor y causar heridas muy graves.**
15. Las baterías pueden tener fugas bajo condiciones extremas. Si el líquido adentro de las baterías (el cual es una solución de 20–35% de hidróxido de potasio) entrara en contacto con la piel, (1) lave la piel rápidamente con agua y jabón y (2) neutralice la acidez de la piel con jugo de limón o vinagre. Si el líquido entrara en contacto con los ojos, enjuáguelos inmediatamente con abundante agua durante 10 minutos o más. Busque atención médica.
16. Evite el contacto con las piezas móviles.
17. No lo utilice en exteriores.
18. No permita que el cable cuelgue del borde de la mesa o de la encimera.
19. No haga funcionar el aparato bajo o adentro de un armario. **Siempre desconecte el aparato antes de guardarlo en un armario.** Dejar el aparato conectado presenta un riesgo de incendio, especialmente si éste toca las paredes o la puerta del armario cuando cierra.
20. Los niños o las personas que carezcan de la experiencia o de los conocimientos necesarios para manipular el aparato, o aquellas cuyas capacidades físicas, sensoriales o mentales estén limitadas, no deben utilizar este aparato. Supervise el uso de este aparato cuidadosamente cuando sea usado cerca de niños. No permita que los niños jueguen con este aparato.
21. Para desenchufar, agarre el enchufe y jale de la toma de corriente. Nunca jale el cable.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

ÍNDICE

Medidas de seguridad importantes	2
Piezas y características	3
Ensamblaje	4
Funcionamiento	5
Consejos rápidos	5
Instrucciones de carga	6
Limpieza y mantenimiento	6
Reciclaje de las baterías	6
Garantía	7

PIEZAS Y CARACTERÍSTICAS

- 1. Tapa medidora**
con capacidad de 1 cucharadita
- 2. Recipientes removibles transparentes**
Guardan porciones más grandes;
requieren llenarse con menos frecuencia
- 3. Baterías recargables (no ilustradas)**
- 4. Cuerpo de agarre cómodo**
Ergonómicamente diseñado
para máxima comodidad y
facilidad de uso
- 5. Botón de encendido/
apagado**
Enciende el molinillo al toque
de un botón
- 6. Base de carga**
Se conecta a la toma de
corriente para recargar la
unidad
- 7. Bandeja de residuos**
Bandeja removible que
permite tirar los residuos de
especias fácilmente
- 8. Luz de carga/listo**
Una luz roja indica que el
molinillo está cargando, una
luz azul indica que está
completamente cargado
- 9. Control de molienda**
Permite elegir entre 5 grados
de molienda, desde grueso
hasta fino
- 10. Indicador de dirección**
Indica en qué dirección girar
el control de molienda para
conseguir el grado de
molienda deseado
- 11. Sin BPA (no ilustrado)**
Ninguna de las piezas en
contacto con los alimentos contiene bisfenol A (BPA).




ENSAMBLAJE


Para ensamblar el molinillo:

1. Coloque la base y todas las piezas extraíbles sobre una superficie plana, seca y segura. Cerciérese que todas las piezas están limpias y secas.

2. Instale el primer recipiente sobre la base. **NOTA:** se le hará más fácil instalar cada recipiente sosteniendo la unidad recta e instalando el recipiente abajo de la misma (Fig. 1).

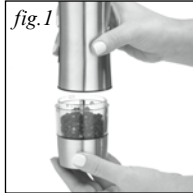


3. Alinee la flecha del recipiente con la flecha de la base. **NOTA:** cada flecha debe apuntar hacia la otra; esto indica que el recipiente y la unidad están debidamente alineados (Fig. 2).

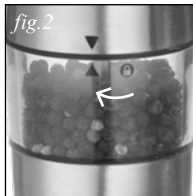


4. Presione suavemente el recipiente y la unidad uno hacia otro. No debería encontrar resistencia (Fig. 3).



5. Gire el recipiente en sentido horario hasta que la flecha de la unidad quede alineada con el candado cerrado del recipiente. **NOTA:** escuchará un "clic", lo que indica que las piezas están debidamente ensambladas (Fig. 4).

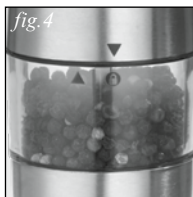

6. Para instalar el segundo recipiente, voltee la base y repita las instrucciones de ensamblaje (Fig. 5).

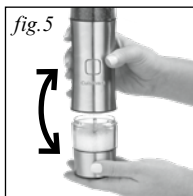

7. Su molinillo de sal, pimienta y especias Cuisinart® está listo (Fig. 6).



Para usar la tapa medidora:

1. Para usar la tapa medidora, conéctela debajo del recipiente deseado, alineando las ranuras de la tapa medidora con los resaltes del recipiente (Fig. 7).



2. Presione ambas piezas una hacia otra hasta que la tapa medidora quede ajustada sobre el recipiente. **NOTA:** cuando no la usa, guarde la tapa arriba de la unidad, ya que no cabrá en la base de carga con la tapa medidora puesta abajo.


Para ensamblar la base de carga:

1. Coloque el bloque-motor, la base de carga y las piezas extraíbles sobre una superficie plana, seca y segura. Cerciérese que todas las piezas están limpias y secas.

2. Instale la bandeja de residuos removible sobre la base de carga. **NOTA:** la bandeja puede instalarse sobre la base de carga solamente de una manera (Fig. 8).




3. Conecte el adaptador sector a la base de carga, introduciendo las patas verticalmente en la parte trasera de la base. **NOTA:** no conecte el adaptador sector a la toma de corriente hasta después de haberlo conectado a la base de carga (Fig. 9).

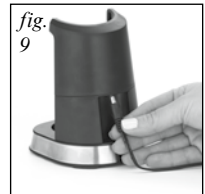

INSTRUCCIONES DE CARGA

Para cargar el molinillo de sal, pimienta y especias:

1. Ensamble el molinillo y la base de carga según se describió en la página anterior.
2. Agarre la unidad seguramente, de manera que quede recta (el logotipo Cuisinart puede leerse) (Fig. 10).
3. Coloque el molinillo sobre la base de carga, asegurándose de que el conector de la unidad encaje debidamente sobre el conector de la base de carga. Esto sólo puede ocurrir cuando la unidad y la base de carga están debidamente alineadas (Fig. 11).
4. Conecte el cable a una toma de corriente de 120V. La unidad está cargando (Fig. 12).

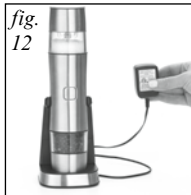

INSTRUCCIONES DE OPERACIÓN

1. Coloque la base y todas las piezas extraíbles sobre una superficie plana, seca y segura. Cerciérese que todas las piezas están limpias, secas y debidamente ensambladas.
2. Llene el recipiente deseado con sal marina, granos de pimienta o las especias secas deseadas e instálelo sobre la unidad. **NOTA:** sostenga el recipiente recto al instalarlo.
3. Alinee la flecha del recipiente con la flecha de la base. **NOTA:** cada flecha debe apuntar hacia la otra; esto indica que el recipiente y la unidad están debidamente alineados.
4. Presione suavemente el recipiente y la unidad uno hacia otro. No debería encontrar resistencia.

5. Gire el recipiente en sentido horario hasta que la flecha de la unidad quede alineada con el candado cerrado del recipiente. **NOTA:** escuchará un "clic", lo que indica que las piezas están debidamente ensambladas.
6. Para instalar el segundo recipiente, voltee la unidad y repita las instrucciones de ensamblaje.
7. Presione el botón de encendido/apagado. **NOTA:** solamente el recipiente que apunta hacia abajo molerá sal/pimienta/especias. **NOTA:** aunque el recipiente que apunta hacia arriba gira, no molerá.
8. Para usar la tapa medidora, conéctela debajo del recipiente deseado, alineando las ranuras de la tapa medidora con los resaltes del recipiente. Presione ambas piezas una hacia otra hasta que la tapa medidora quede ajustada sobre el recipiente. **NOTA:** la tapa medidora puede instalarse sobre cualquiera de los recipientes, durante el uso solamente. Cuando no la usa, guárdela arriba de la unidad, ya que ésta no cabrá en la base de carga con la tapa medidora puesta abajo.

CÓMO AJUSTAR EL GRADO DE MOLIENDA

Para ajustar el grado de la molienda, desde fina hasta gruesa, utilice el dial ubicado debajo de cada molinillo. Gire el dial en sentido horario para obtener una molienda más gruesa, o en sentido antihorario para obtener una molienda más fina.



CONSEJOS RÁPIDOS

- Antes del primer uso, deberá cargar las baterías durante 13 horas.
- Para desalojar granos de pimienta trabados en la rueda de moler:
 1. Sostenga el molinillo boca abajo y sacúdalo suavemente mientras oprime el botón de encendido.
 2. Sostenga el molinillo boca abajo, coloque el selector del grado de molienda sobre "molienda gruesa" y haga funcionar el

molinillo hasta desalojar el grano de pimienta.

- Nunca llene el recipiente con especias húmedas o mojadas. Esto obstruirá el mecanismo de molienda. Le aconsejamos que utilice especias secas compradas en tienda.
- Para mejorar el rendimiento de las baterías recargables, le aconsejamos que de vez en cuando, desconecte la base de carga y utilice cada molinillo hasta que las baterías estén completamente descargadas. Después, conecte la base de carga a la toma de corriente y vuelva a cargar los molinillos durante 13 horas. Para mejorar la capacidad de carga de las baterías, le aconsejamos que haga esto cada 2-3 meses.
- Utilice un paño ligeramente humedecido para limpiar los molinillos y la base de carga, y séquelos bien. No los meta al lavavajillas. Evite mojar los contactos de las baterías.

CARGA Y VIDA ÚTIL DE LAS BATERÍAS

Su molinillo de sal, pimienta y especias recargable Cuisinart® está equipado con baterías recargables de níquel e hidruro metálico (NiMH). Hemos seleccionado estas baterías por su larga vida útil y autonomía.

Si las baterías se descargan completamente, se deberán poner a cargar durante 8-13 horas para recargarse completamente. Una vez cargadas, las baterías tienen una autonomía de 20 minutos. Moler sal o pimienta requiere tan sólo 5 segundos. Si la batería ya no se carga, es tiempo de cambiarla. Comuníquese con nuestro servicio de atención al cliente, llamando al 1-800-726-0190, para regresar la unidad a nuestro centro de servicio a fin de reemplazar las baterías.

CARGA CONTINUA

Este aparato ha sido diseñado para poder mantenerse cargando. Le aconsejamos que siempre deje la base de carga conectada a la toma de corriente; de esta manera, el molinillo siempre estará listo. La base de carga no consume mucha electricidad y no notará una diferencia en su factura eléctrica.

Utilice el adaptador sector y la base de carga proveídos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.

MANTENIMIENTO DE LA CARGA

Las baterías mantienen la carga aunque el aparato no está enchufado y cargando, perdiendo aproximadamente el 30% de la carga total por mes.

TIEMPO DE FUNCIONAMIENTO REDUCIDO

Si, después de usar el aparato repetidamente, el tiempo de funcionamiento parece ser más corto y el molinillo tiene menos potencia, desconecte la base de carga y haga funcionar el molinillo hasta que esté completamente descargado. Después, vuelva a conectar la base de carga a la toma de corriente y cargue el molinillo durante 13 horas. Para mejorar la capacidad de carga de las baterías, le aconsejamos que haga esto cada 2-3 meses.

LIMPIEZA Y MANTENIMIENTO

Simplemente limpie todas las piezas con un paño ligeramente humedecido y séquelo bien. No meta ninguna de las piezas al lavavajillas. Evite mojar los contactos de las baterías. Cualquier otro servicio debe ser realizado por un técnico autorizado.

RECICLAJE DE LAS BATERÍAS

Este producto utiliza cuatro baterías NiMH recargables y reciclables. Las baterías deben ser recicladas al final de su vida útil. No queme las baterías, ni las coloque en un compostador.

Tampoco se debe tirar las baterías con el resto de la basura. Para más información acerca del reciclaje de las baterías, comuníquese con las autoridades locales en materia de reciclaje y eliminación de desechos.

No intente desarmar la unidad para cambiar las baterías. Esto podría dañar el aparato.

Cuando es tiempo de cambiar las baterías, llame al 1-800-726-0190 para pedir una nueva unidad, la cual contiene nuevas baterías. O mande el molinillo a: Cuisinart, 7475 North Glen Harbor Blvd. Glendale, AZ 85307.

Garantía Limitada

Sujeto a las exclusiones y limitaciones contenidas en este documento, Conair LLC/Cuisinart ("Cuisinart") garantiza que este Producto Cuisinart® estará libre de defectos de materiales y fabricación en condiciones normales de uso doméstico durante un período de TRES (3) años a partir de la fecha de compra del Producto en su embalaje original sellado, a menos que se especifique lo contrario en esta Garantía Limitada. Esta Garantía Limitada es solo para consumidores de Estados Unidos (definidos aquí como compradores al por menor para uso personal, familiar o doméstico) que compren originalmente el Producto a Cuisinart o a un revendedor autorizado de Cuisinart. Si no está seguro de si un minorista u otro punto de venta es un revendedor autorizado de Cuisinart, póngase en contacto con Cuisinart.

Esta Garantía Limitada NO cubre:

- El desgaste normal;
- Cualquier Producto adquirido por compradores comerciales o para usos comerciales o no domésticos;
- Accesorios, piezas o programas añadidos al Producto después de que Cuisinart lo haya enviado;
- Cualquier costo asociado con el reemplazo o reparación del Producto, incluyendo mano de obra, instalación u otros costos incurridos por usted sin previa aprobación de Cuisinart;
- Daños, defectos y fallas debidos a: (1) causas externas, incluyendo el envío, accidentes, problemas con el suministro eléctrico (el Producto está diseñado para su uso exclusivo con enchufes de 120 V), condiciones anormales (como mecánicas o medioambientales); (2) uso no conforme a las instrucciones del Producto; (3) uso indebido, negligencia, alteración no autorizada, reparación no autorizada; y (4) casos fortuitos u otros acontecimientos fuera del control de Cuisinart;
- Aunque cualquier empresa puede realizar las reparaciones y el mantenimiento necesarios, los daños causados por usted o por terceros no autorizados pueden anular esta Garantía Limitada;
- Los daños causados por accesorios o repuestos no autorizados específicamente por Cuisinart pueden anular esta Garantía Limitada; y
- Cualquier Producto cuyas marcas de identificación originales (marca comercial o número de serie) hayan sido retiradas, alteradas o borradas del Producto.

Se recomienda llenar el formulario de registro disponible en <https://cuisinart.registria.com> a fin de facilitar la verificación de la fecha de compra original de este producto. Sin embargo, no es necesario registrar el producto para recibir servicio bajo esta garantía. En ausencia de prueba de la fecha de compra, el período de garantía será calculado a partir de la fecha de fabricación del producto.

Garantía de sin dificultades

Si el Producto objeto de esta Garantía Limitada falla durante el período de garantía por razones cubiertas por esta Garantía Limitada, Cuisinart, a su elección, reparará el Producto, sustituirá el Producto por otro idéntico o razonablemente equivalente, o si Conair no puede reparar o sustituir el Producto, reembolsará al consumidor el precio de compra, menos la cantidad directamente atribuible al uso anterior del Producto por parte del consumidor. Para obtener una etiqueta de devolución, contáctenos, visitando <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry//> o llamando a nuestro servicio de atención al cliente, al **1-800-726-0190**, para hablar con un representante.

Tras la recepción del Producto, Conair inspeccionará el Producto y, si lo requiere esta Garantía Limitada, intentará reparar, reemplazar o reembolsar el Producto en un plazo de treinta (30) días. No obstante, pueden producirse retrasos fuera del control de Cuisinart, en cuyo caso dicho plazo podrá ampliarse en la medida en que sea razonablemente necesario.

IMPORTANTE: Si debe llevar el producto defectuoso a un centro de servicio no autorizado, por favor informe al personal del centro de servicio que deben llamar al servicio de atención al cliente Cuisinart, al **1-800-726-0190**, a fin de diagnosticar el problema correctamente, usar las piezas correctas para repararlo y comprobar que el producto aún esté bajo garantía.

Residentes de California

El período de Garantía Limitada de TRES (3) años comienza en la fecha de entrega del Producto, que puede ser diferente de la fecha de compra del Producto. Los residentes en California también tienen la opción de obtener los beneficios de esta Garantía Limitada devolviendo el producto defectuoso (A) a la tienda donde lo compraron, o (B) a otra tienda que venda productos Cuisinart® del mismo tipo. La tienda podrá, a su elección, reparar el producto, referir al consumidor a un centro de servicio independiente, sustituir el producto por uno idéntico o razonablemente equivalente, o reembolsar al consumidor el precio de compra menos la cantidad directamente

atribuible al uso anterior del producto por el consumidor. Los residentes de California también pueden, si lo desean, enviar el producto defectuoso directamente a Cuisinart para que sea reparado o sustituido por uno idéntico o razonablemente equivalente. Para esto, deben llamar a nuestro servicio de atención al cliente al **1-800-726-0190**. Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

ESTA GARANTÍA LIMITADA LE OTORGA DERECHOS LEGALES ESPECÍFICOS, Y TAMBIÉN PUEDE TENER OTROS DERECHOS QUE VARIAN DE UN ESTADO A OTRO O EN FUNCIÓN DE LA JURISDICCIÓN. EN CASO DE INCUMPLIMIENTO DE ESTA GARANTÍA LIMITADA, USTED PUEDE RECLAMAR LA SUSTITUCIÓN, UNA INDEMNIZACIÓN POR DAÑOS Y PERJUICIOS U OTRAS SANCIONES.

LIMITACIONES DE RESPONSABILIDAD/LIMITACIONES Y EXCLUSIONES ADICIONALES

TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. LA RESPONSABILIDAD DE CUISINART BAJO ESTA O CUALQUIER OTRA GARANTÍA, IMPLÍCITA O EXPRESA, SE LIMITA A LA REPARACIÓN, SUSTITUCIÓN O REEMBOLSO, SEGÚN LO ESTABLECIDO ANTERIORMENTE. ESTOS RECURSOS SON LOS ÚNICOS Y EXCLUSIVOS EN CASO DE INCUMPLIMIENTO DE LA GARANTÍA. EN LA MEDIDA MÁXIMA PERMITIDA POR LA LEY, CUISINART NO SE HACE RESPONSABLE DE NINGÚN DAÑO DIRECTO, INDIRECTO, ESPECIAL, INCIDENTAL O CONSECUENTE RESULTANTE DE CUALQUIER INCUMPLIMIENTO DE LA GARANTÍA O BAJO CUALQUIER OTRA TEORÍA LEGAL (INCLUYENDO, PERO NO LIMITADO A, LUCRO CESANTE, TIEMPO DE INACTIVIDAD, PÉRDIDA DEL FONDO DE COMERCIO, DAÑOS O SUSTITUCIÓN DE EQUIPOS Y BIENES, Y

CUALQUIER COSTE DE RECUPERACIÓN, REPROGRAMACIÓN O REPRODUCCIÓN DE CUALQUIER PROGRAMA O DATOS ALMACENADOS EN O UTILIZADOS CON UN SISTEMA QUE CONTENGA EL PRODUCTO), INCLUSO SI CONAIR HA SIDO ADVERTIDO DE LA POSIBILIDAD DE TALES DAÑOS. ALGUNOS ESTADOS NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE DAÑOS ESPECIALES, INCIDENTALES O CONSECUENTES, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS (O JURISDICCIONES) NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED.

Esta Garantía Limitada es emitida por:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190

©2024 Cuisinart
Glendale, AZ 85307
Impreso en la China

24CE94002

IB-12261-ESP-C