
Item # 1013939873 / 1013939876

Model # AXCCONHD-SOK / AXCCONHD-WLN

USE AND CARE GUIDE

Conley 60-76W Extendable Dining Table

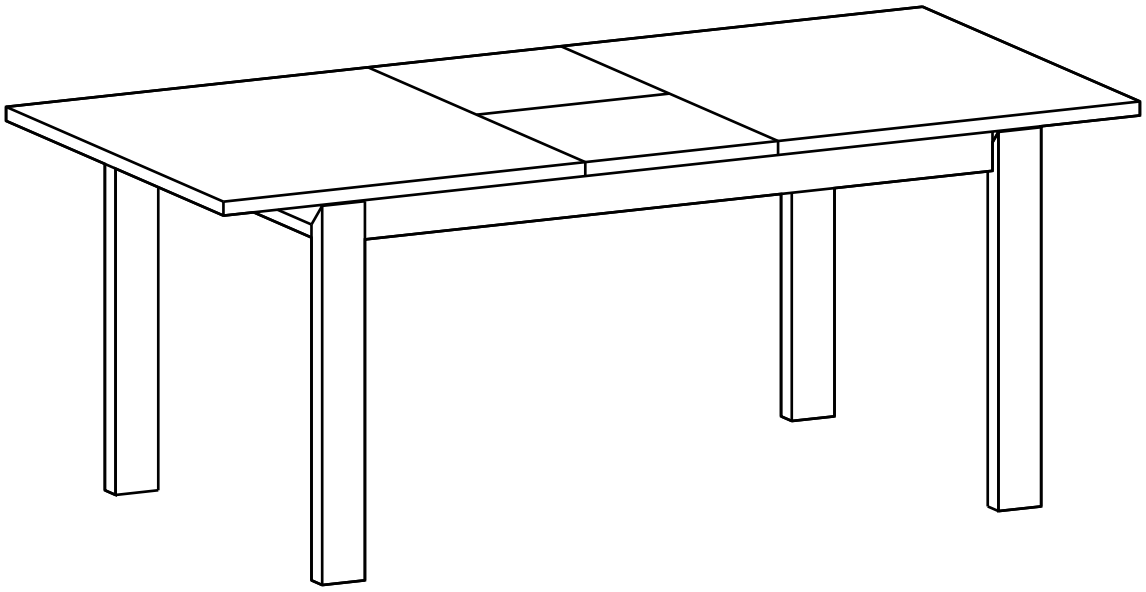

THANK YOU

We appreciate the trust and confidence you have placed in the purchase of this table.
We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing!

Table of Contents

Safety Information 2
Warranty 2
Pre-Installation 3
Planning Assembly 3
Tools Required 3
Hardware Included 3
Pre-assembly (continued) 4
Assembly 5
Attaching the legs to the Top 5
Adjusting the leveler 6
How to operate the extension table locking mechanism 7
Care & Maintenance 8

Safety Information

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

□ Identify all the parts and hardware.
Do not discard of the packaging until you have checked that you have all of the parts and hardware required.
Hardware package may have spare parts.

□ This item contains small parts which can be swallowed by children and pets.
Keep children and pets away during assembly.
To avoid danger of suffocation, always keep plastic bags away from children and pets.

□ We recommend that you assemble this unit on a carpeted floor to avoid scratches.
If using power tools, set the tool to low torque to avoid damage.

WARNING: Do not place heavy objects on the table.

WARNING: When not in use, secure the product in a cool and covered location.

WARNING: This table unit is heavy, and may require two adults for safe assembly.

CAUTION: Do not locate the product near any heat source.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.


PLANNING ASSEMBLY

Keep children and pets away from the build area. Make sure that the area is large enough to unpack, sort, and assemble the unit.

TOOLS REQUIRED




Safety goggles

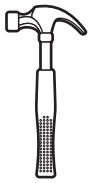

Claw hammer




Phillips screwdriver



Level

HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.

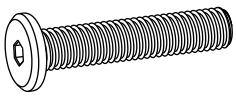


AA



BB

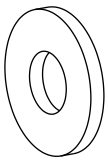


CC

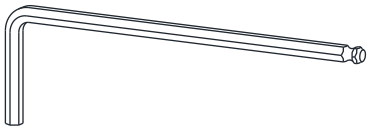

DD

Part	Description	Quantity
AA	Allen Key Bolt	12 + 1
BB	Lock Washer	12 + 1
CC	Washer	12 + 1
DD	Allen Key	1

PACKAGE CONTENTS

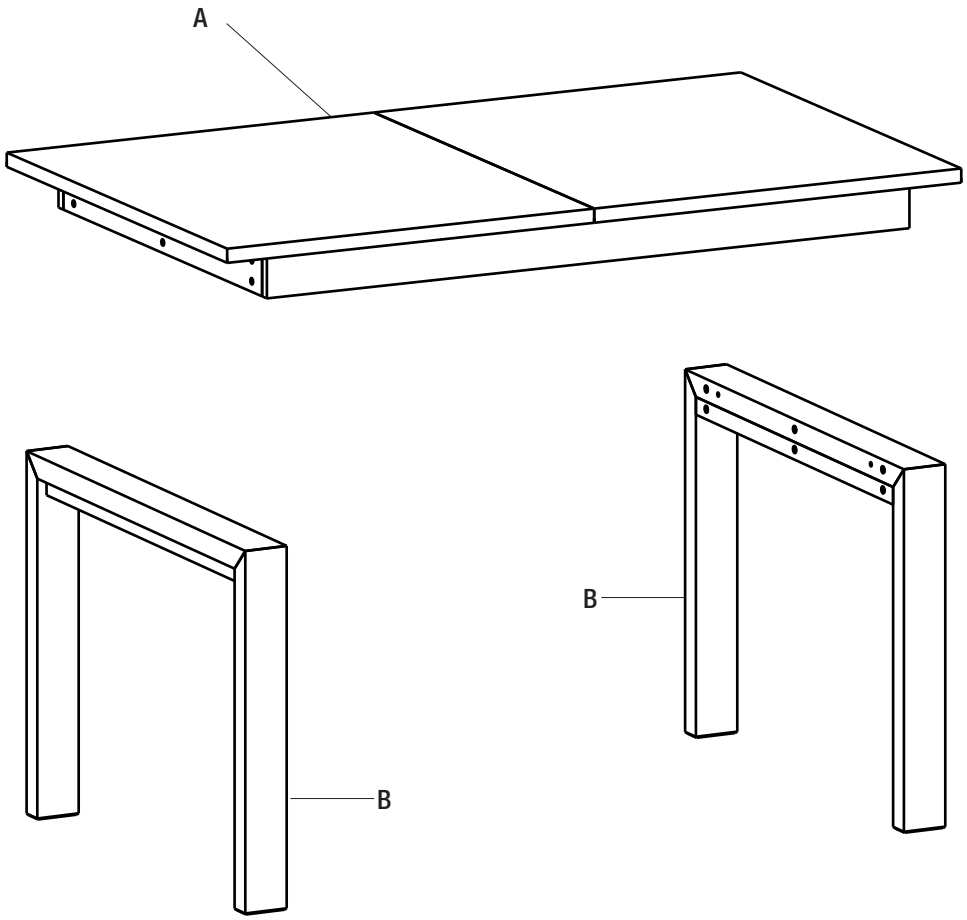


Part	Description	Quantity
A	Top	1
B	Leg	2

1 Attaching the Legs to the Top.

□ Align Wood Dowels with guide holes on Legs (B) and attach Legs (B) to Top (A).


□ Use six Allen Key Bolts (AA), six Lock Washers (BB) and six Washers (CC) to secure each Leg (B) and Top (A).

□ Use Allen Key (DD) to tighten Bolts. Do not over-tighten.

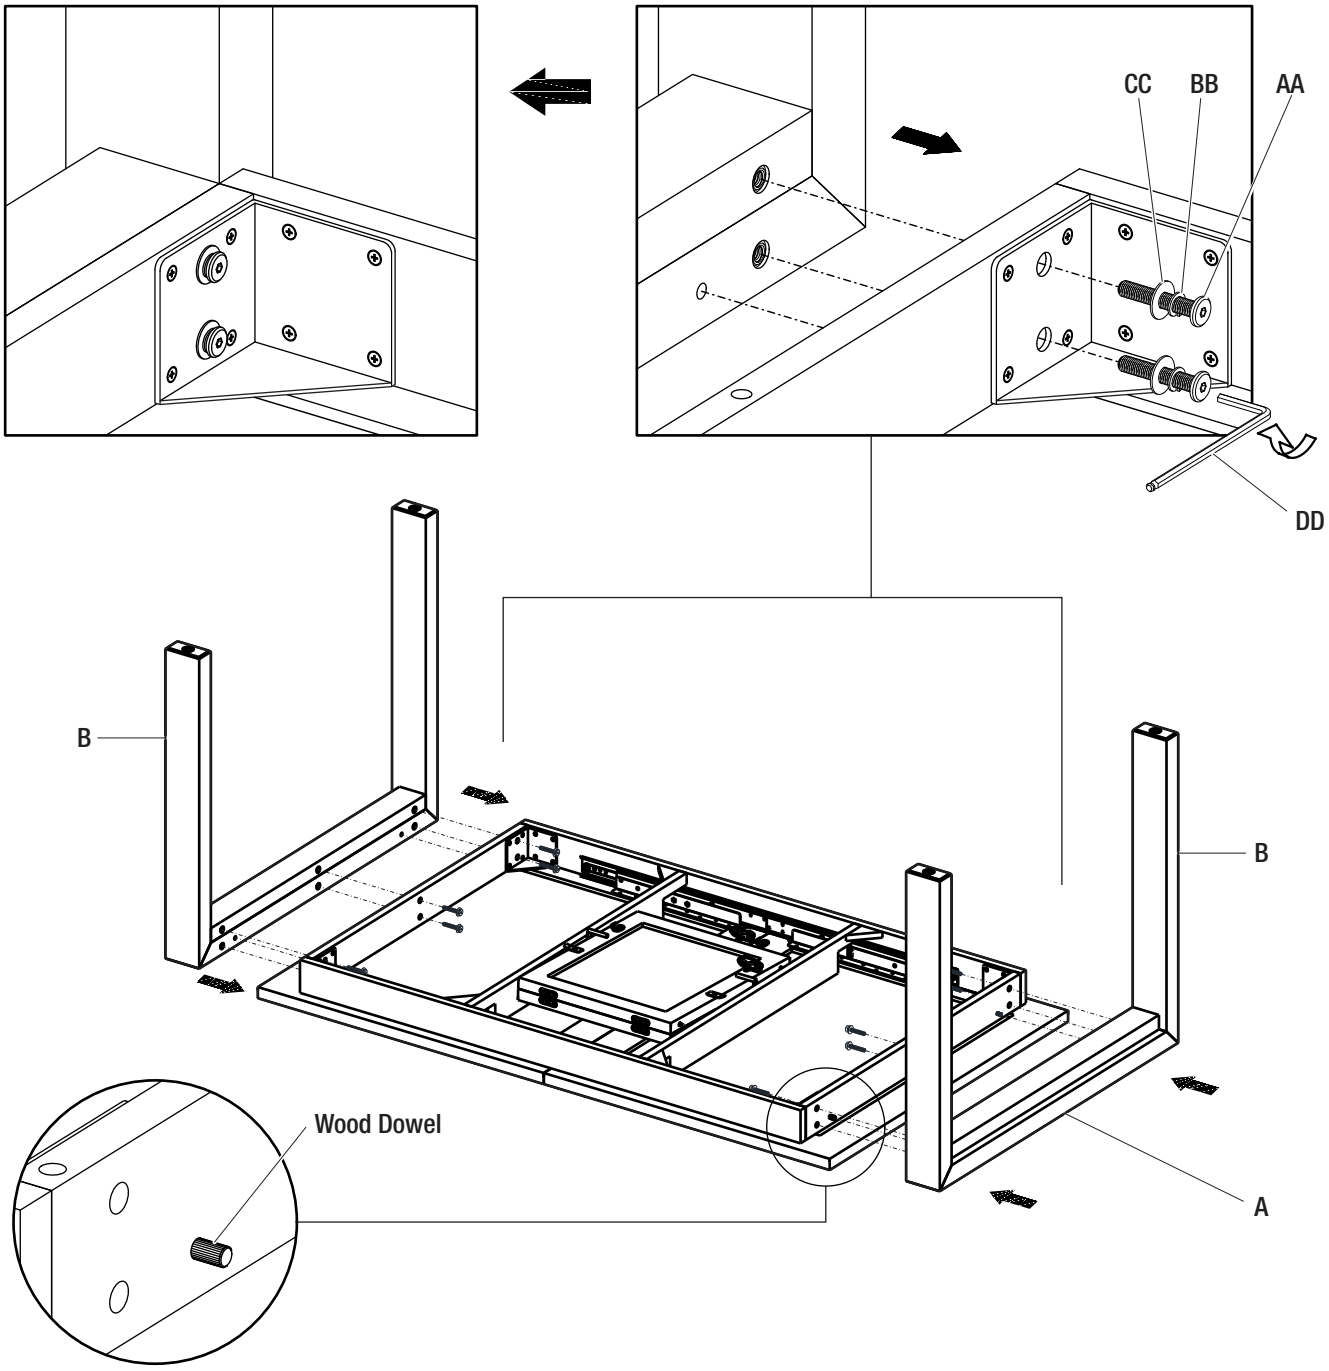

2 Adjusting the leveler

□ Levelers on bottom of legs can be adjusted if floor is uneven.

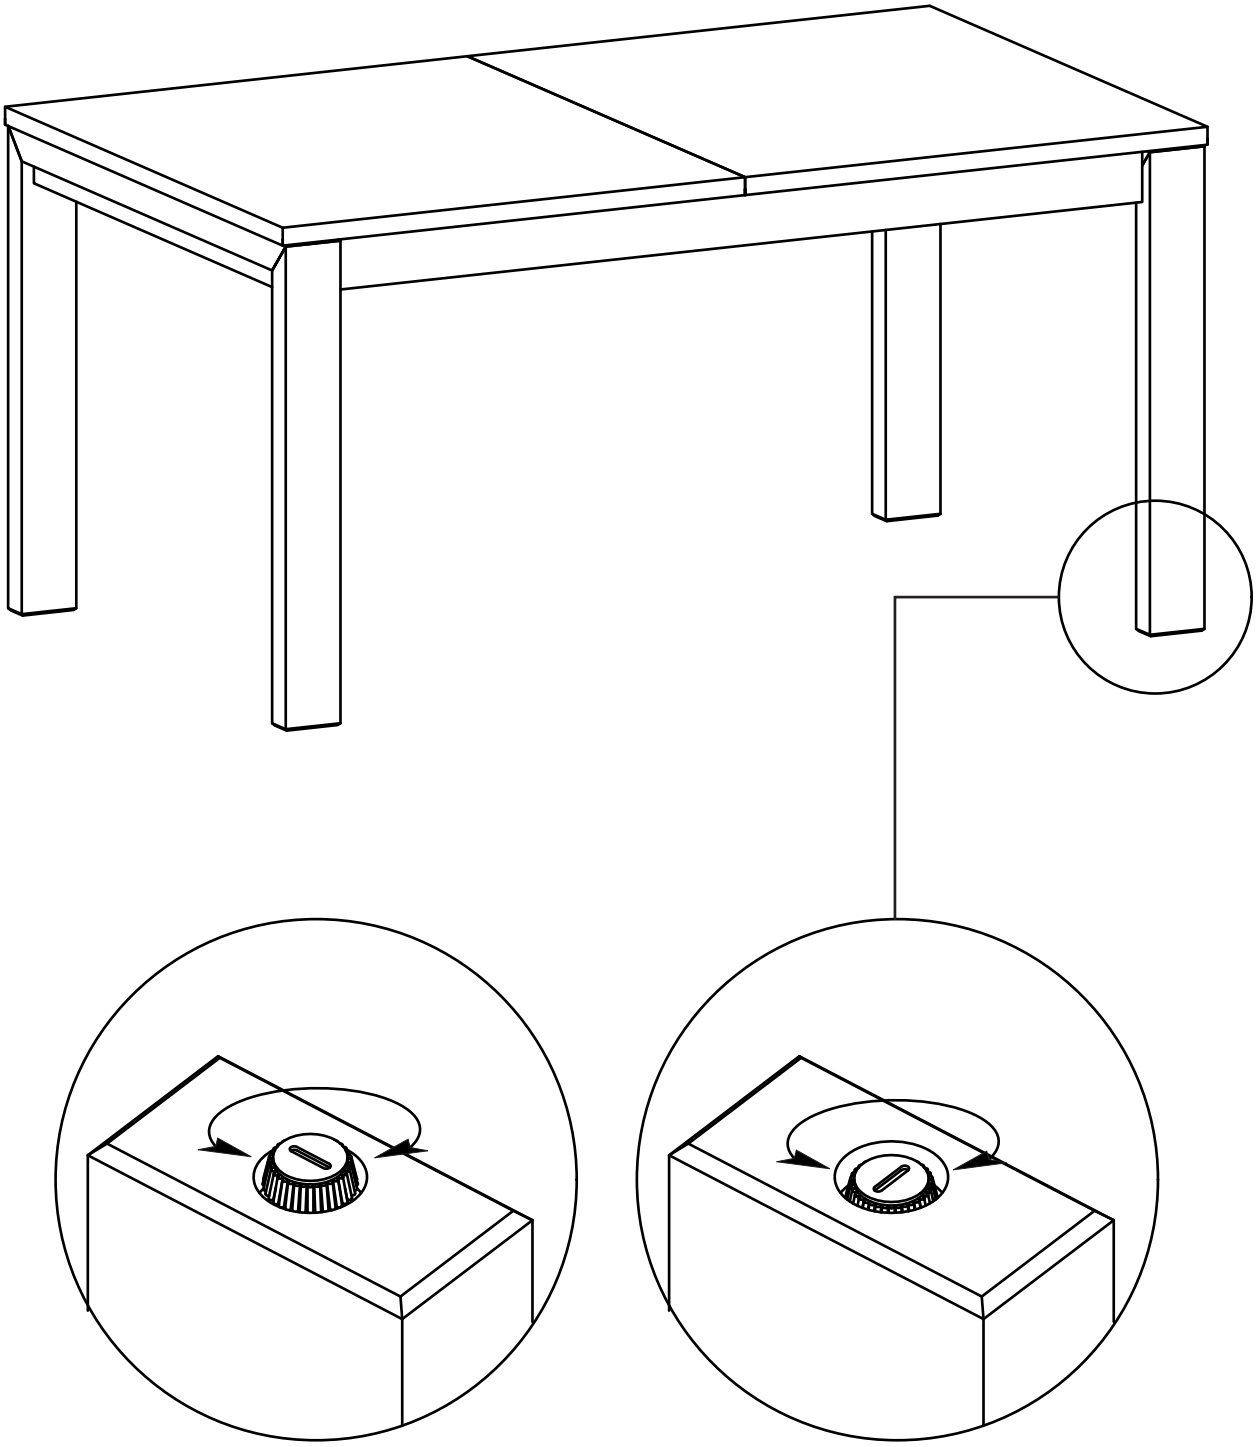


3 How to operate the extension table locking mechanism

□ To extend the table, open the locks underneath the table top and pull out the ends of the table.

□ Flip up the two extension tops to extend the table.

□ Secure the table top by closing the locks underneath the table top.

□ To collapse the table, follow the steps from the last to the first.

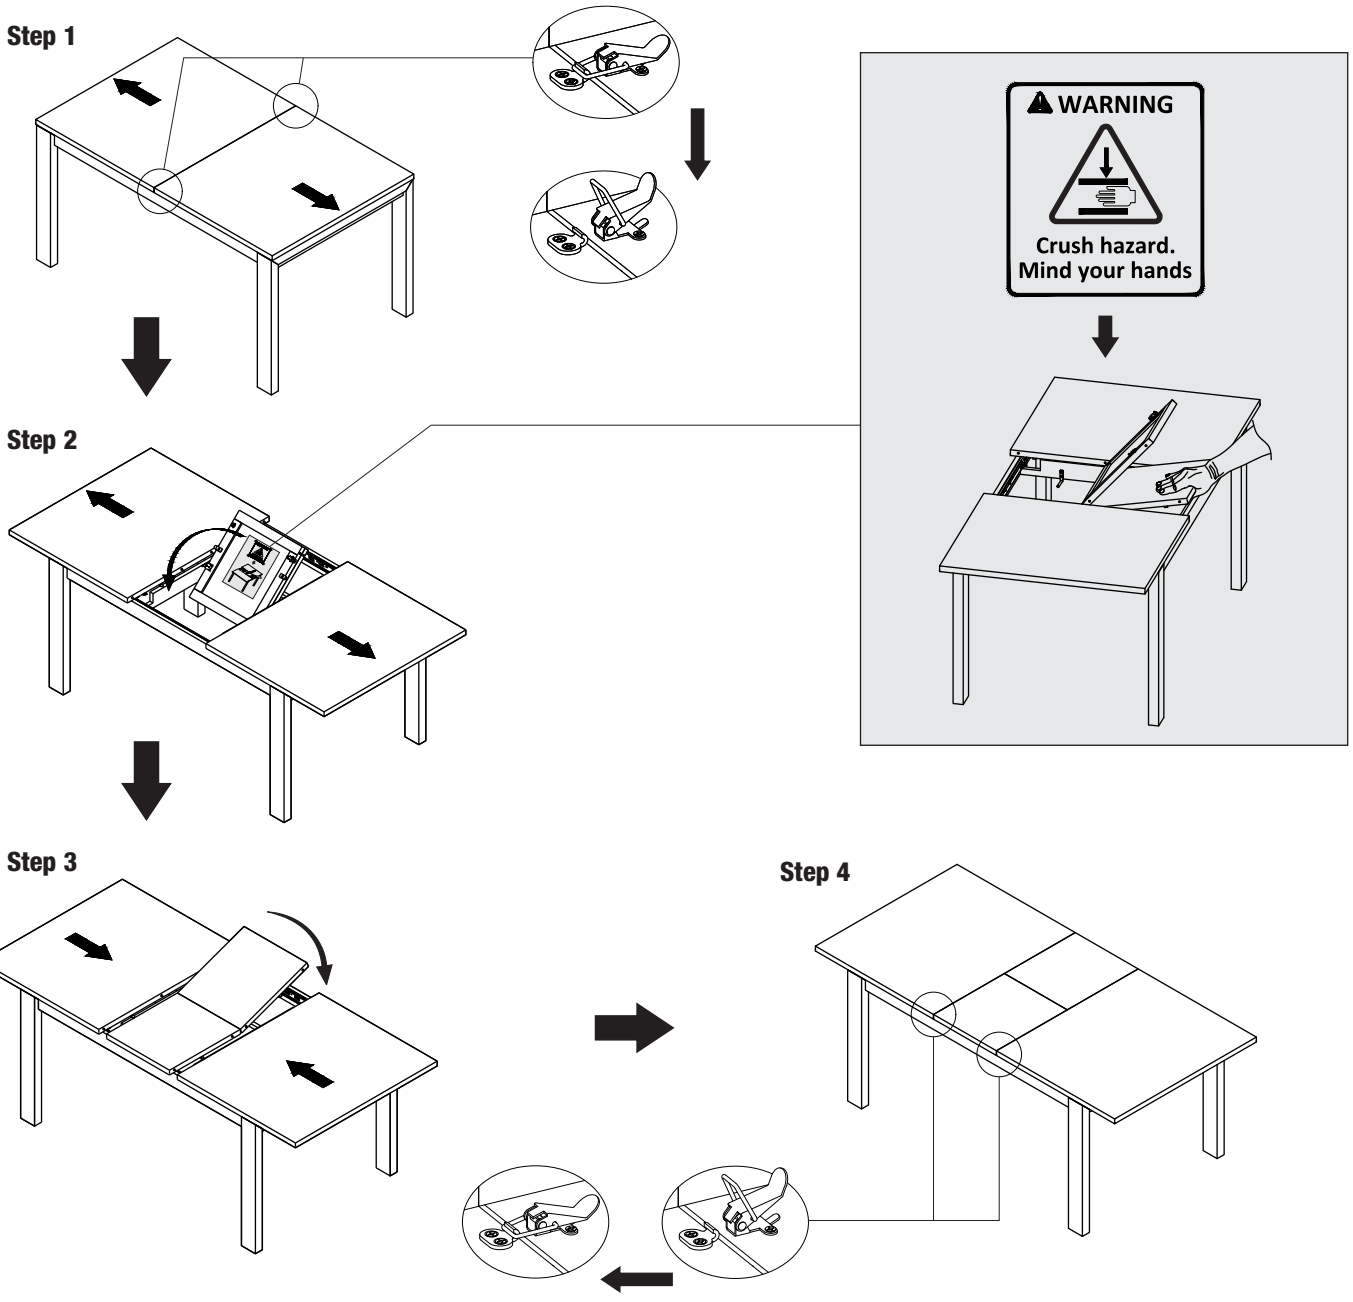

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can’t, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

Retain this manual for future use.