


# OLKIX3 Oak Log Placement for Model GDIX3

## ⚠ WARNING

- Failure to position the logs in accordance with these diagrams or failure to use only logs specifically approved with this appliance may result in property damage or personal injury.
- Logs must be placed in their exact location in the appliance. Do not modify the proper log positions, since appliance may not function properly and delayed ignition may occur.
- The logs are fragile and should be handled with care.


**PHAZER™** logs and glowing embers, exclusive to Napoleon, provide a unique and realistic glowing effect that is different in every installation. Take the time to carefully position the glowing embers for a maximum glowing effect. Log colours may vary. During the initial use of the appliance, the colours will become more uniform as colour pigments burn in during the heat-activated curing process.

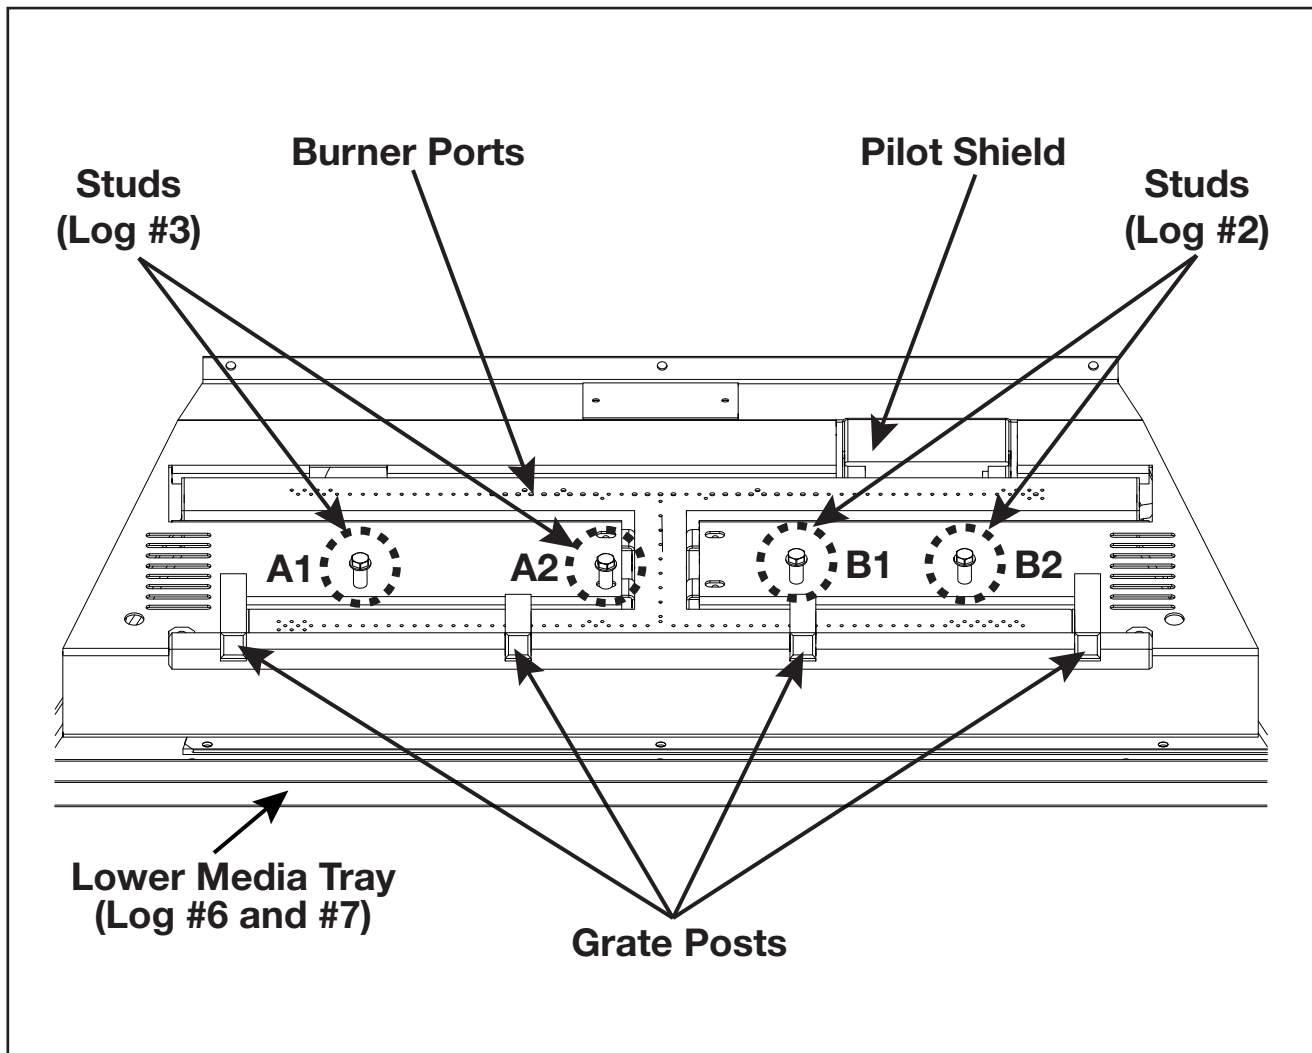


**Burner Overview**

Quality System Certified To  
**ISO**  
9001:2015


W415-1902 / B / 10.30.18

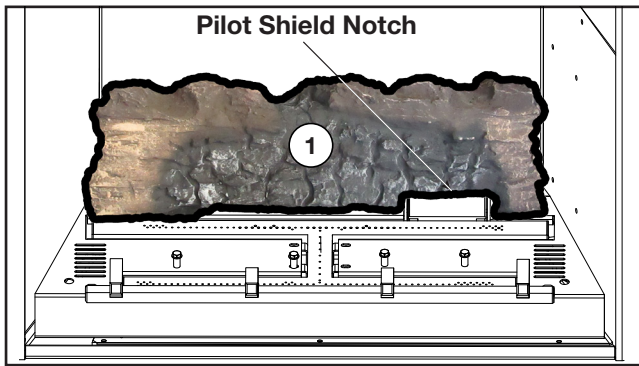


1. Place log #1 snug against the back wall, ensuring the notch fits around the pilot shield.

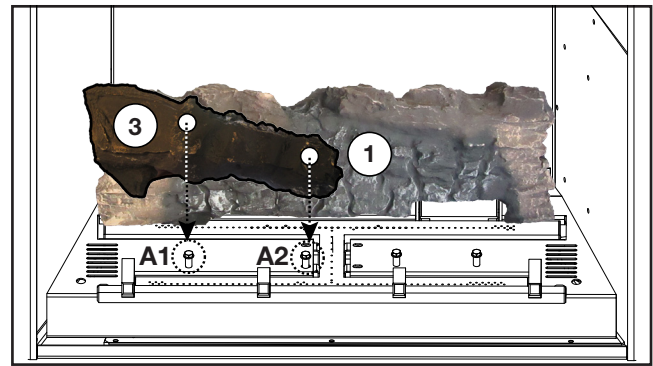


2. Place the two holes in log #3 on A1 and A2. Do not cover any burner ports.

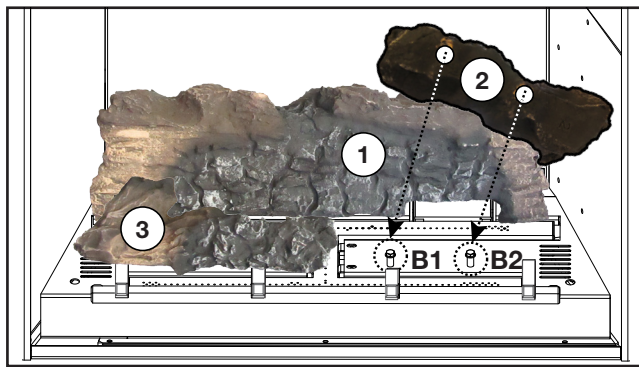


3. Place the two holes in log #2 on B1 and B2. Do not cover any burner ports.

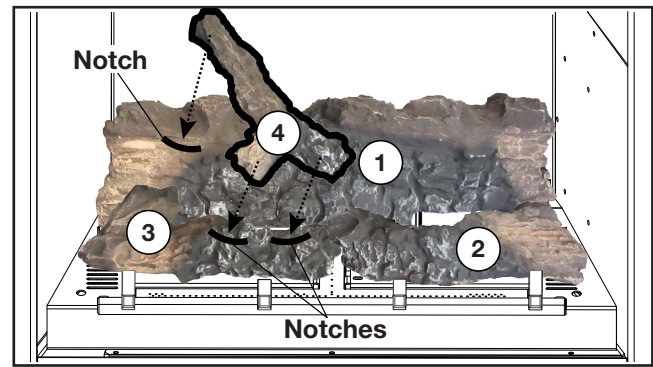


4. Place log #4 on the left-side notch of log #1 and the two notches of log #3.

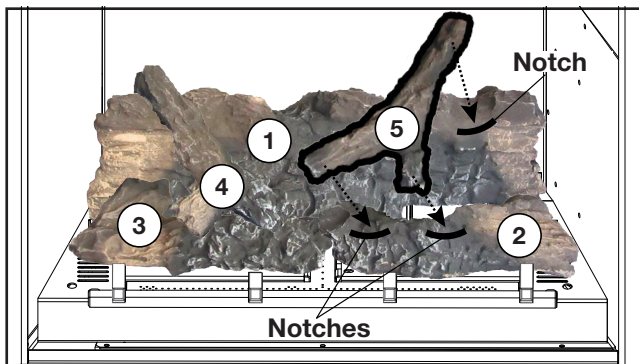



5. Place log #5 on the right-side notch of log #1 and the two notches of log #2.

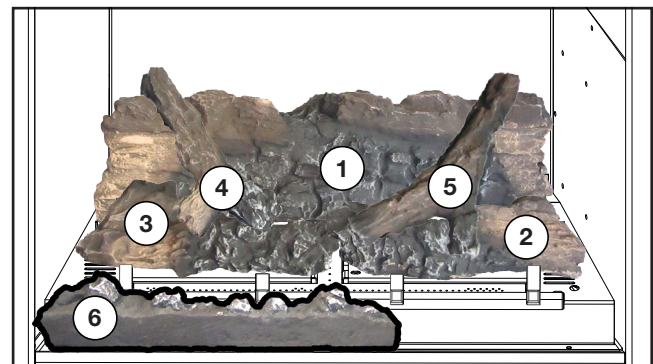

6. Place log #6 along the left side of the lower media tray.

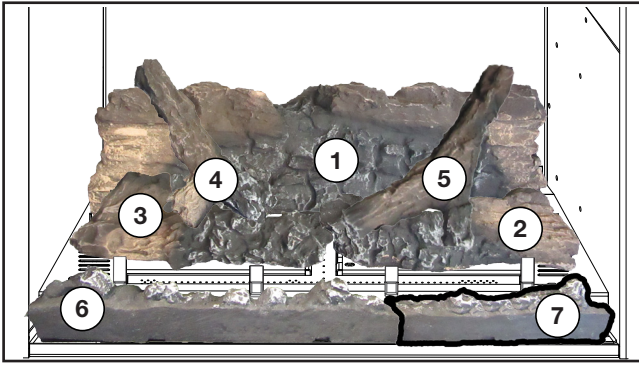

7. Place log #7 along the right side of the lower media tray.

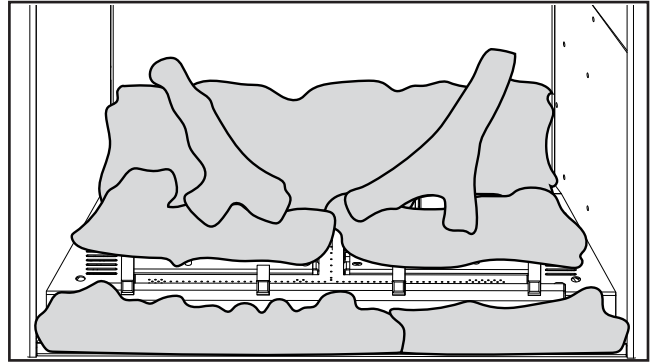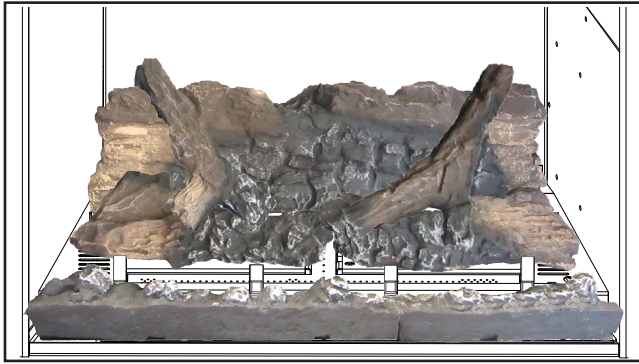


# Disposition des Bûches Chêne OLKIX3 pour Modèle GDIX3


## ⚠ AVERTISSEMENT

- Omettre de positionner les bûches conformément aux schémas ou omettre d'utiliser uniquement des bûches spécifiquement approuvées pour cet appareil peut causer des dommages matériels ou des blessures corporelles.
- Les bûches doivent être placées correctement à l'intérieur de l'appareil. Ne changez pas la position des bûches car l'appareil risque de ne pas fonctionner adéquatement et un retard d'allumage risque de se produire.
- Les bûches sont fragiles et devraient être manipulées avec soin.


Les bûches **PHAZER<sup>MD</sup>** et les braises incandescentes, exclusives aux appareils Napoléon, créent un effet réaliste et unique qui est différent dans chaque installation. Prenez le temps de bien installer les braises incandescentes pour obtenir le meilleur effet possible. Le couleur des bûches peut varier. Lors de la première utilisation de l'appareil, les couleurs deviendront plus uniforme à mesure que leurs pigments seront « absorbés » pendant le procédé de « cuisson ». Orifices de brûleurs bloqués peuvent provoquer une flamme irrégulière.

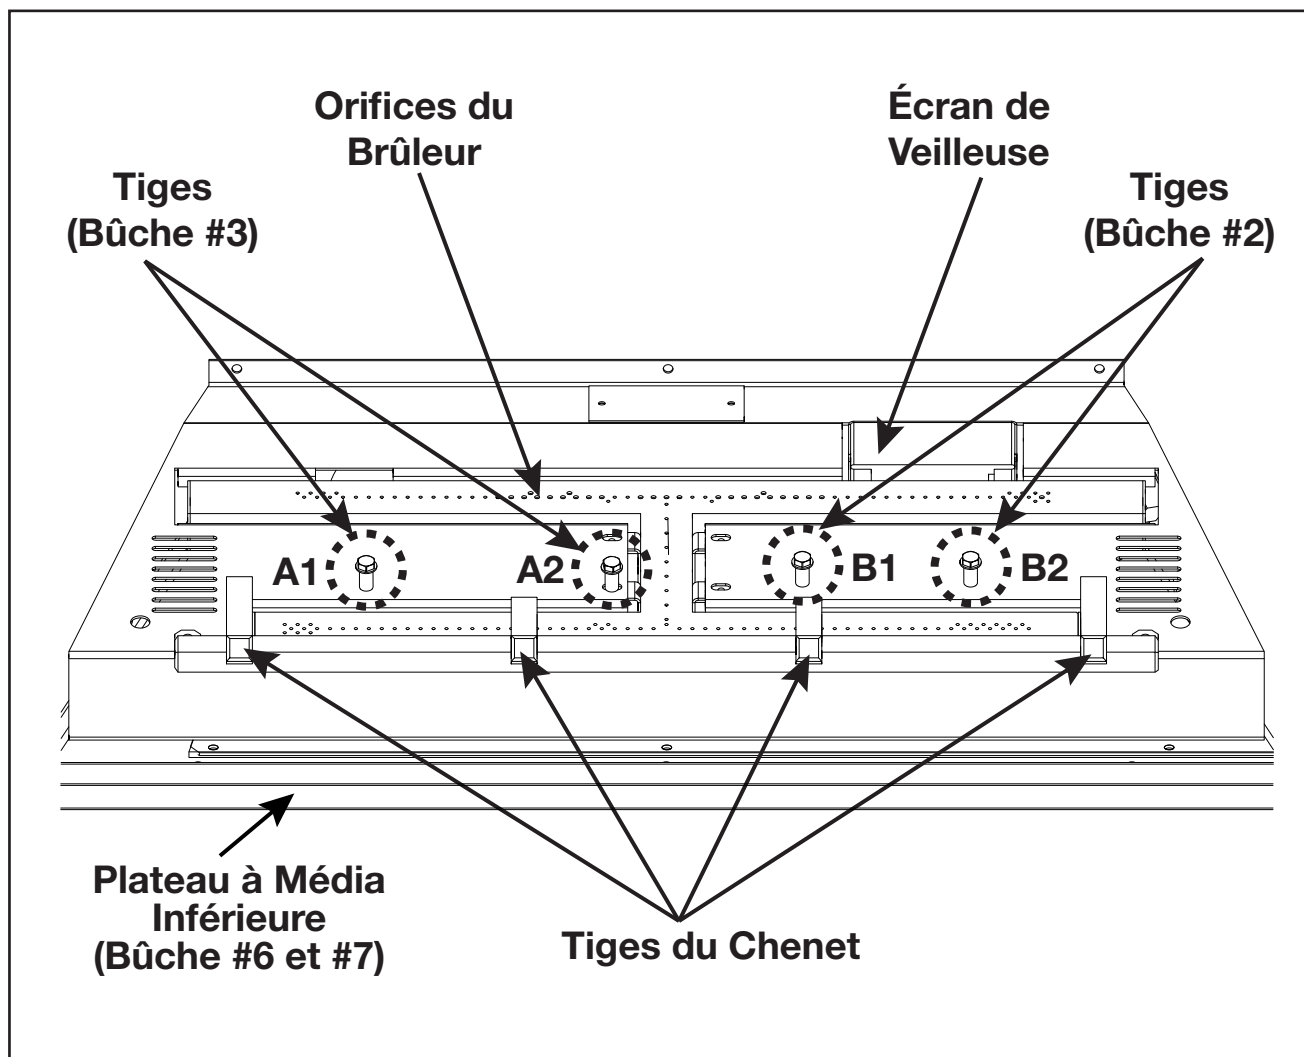


**Vue d'Ensemble du Brûleur**

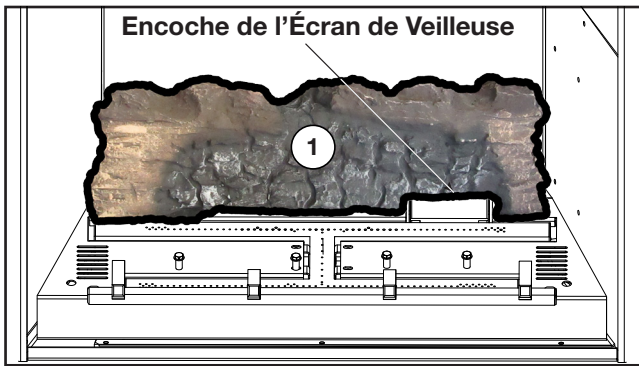


1. Placez la bûche #1 contre le mur arrière. Assurez-vous que l'encoche soit ajustée autour de l'écran de la veilleuse.

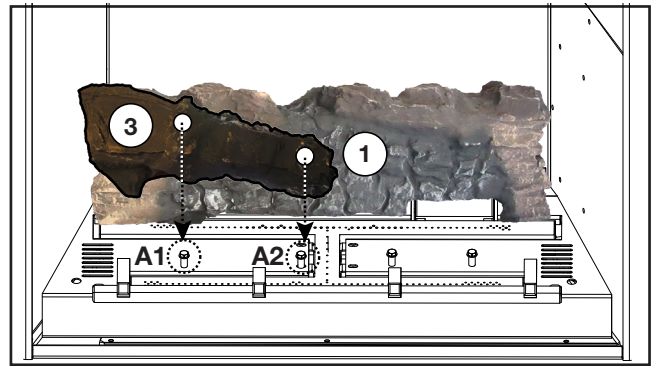


2. Placez les deux trous de la bûche #3 sur A1 et A2. Ne couvrez pas les orifices du brûleur.

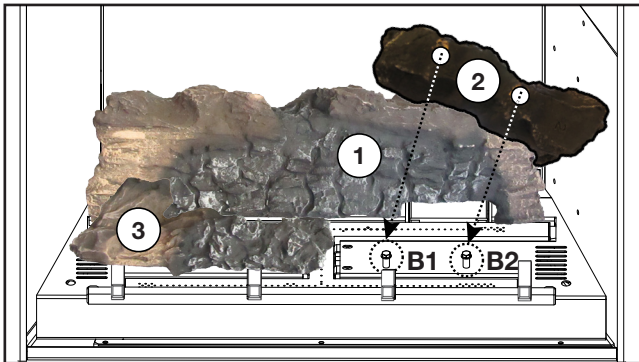


3. Placez les deux trous de la bûche #2 sur B1 et B2. Ne couvrez pas les orifices du brûleur.

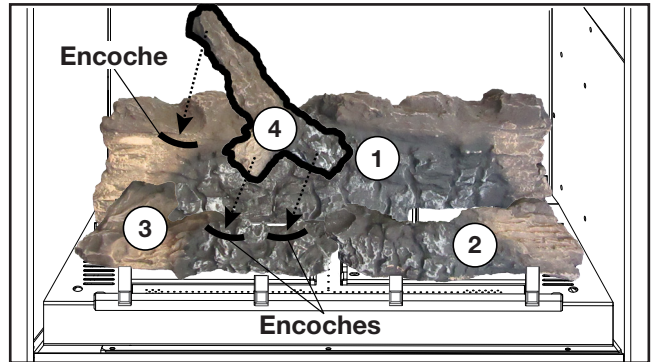


4. Placez la bûche #4 sur l'encoche gauche de la bûche #1 et les deux encoches de la bûche #3.

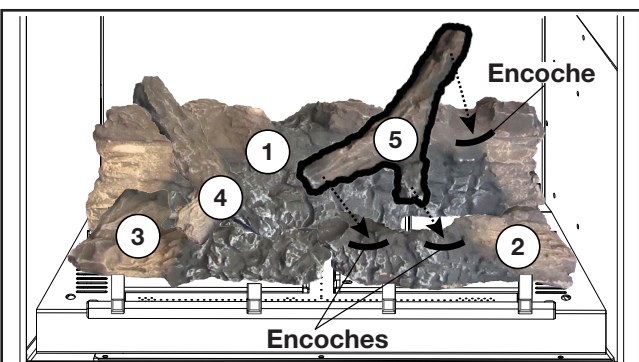

5. Placez la bûche #5 sur l'encoche droite de la bûche #1 et les deux encoches de la bûche #2.

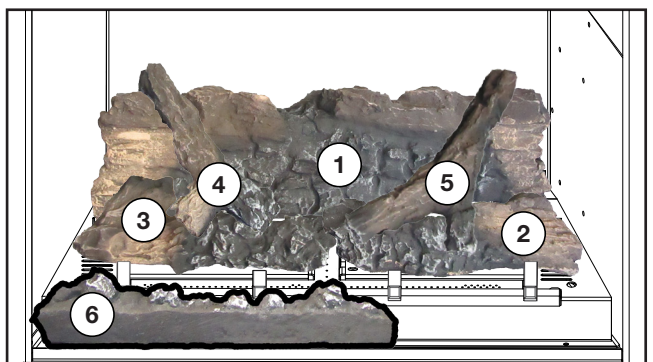

6. Placez la bûche #6 sur le côté gauche de la plateau à média inférieure.

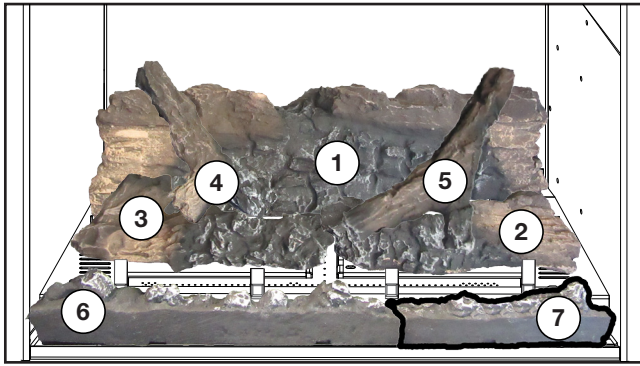

7. Placez la bûche #7 sur le côté droit de la plateau à média inférieur.

