ⓘ NOTICE

- Firmly secure all screws before use.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or warn, stop using this product until repairs are made and/or factory replacement parts are installed.
- This product requires battery for additional functions. Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Adult supervision is recommended when installing batteries.
- This product contains small parts. May result in choking hazard for children under 3 years.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

⚠ WARNING

CHOKING HAZARD - Small parts. Not for children under 3 years old.

⚠ WARNING

ADULT ASSEMBLY REQUIRED

FCC COMPLIANCE STATEMENT

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - o Reorient or relocate the receiving antenna.
  - o Increase the separation between the equipment and receiver.
  - o Consult the dealer or an experienced radio/TV technician for help.
- **NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


BATTERY INSTALLATION

1. Locate the fastening screw on the back of the part C remote control and remove it with a small screwdriver.

2. Insert three AAA batteries, take care they are properly aligned, then replace the cover and fastening screw.

3. Locate the fastening screw on the bottom of the part B tail and remove it with a small screwdriver.


4. Insert two AAA batteries, take care they are properly aligned, then replace the cover and fastening screw.

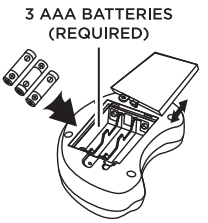



SMALL SCREWDRIVER (REQUIRED)

Please Keep This Packaging For Future Reference.

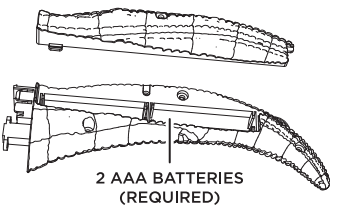


OPERATING INSTRUCTIONS


1. Flip the "on/off" switch on the T-Rex body to activate the functions.

2. Use the part C remote to play.

- Press the left (forward) button to move the dinosaur.
- Press the right (auto) button to activate preset movement and sounds. Press the button again to deactivate auto functions.

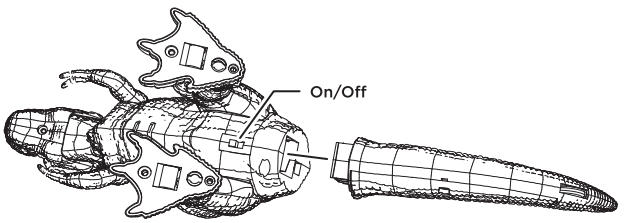

A. T-REX MAIN BODY **B. TAIL/POWER SUPPLY**

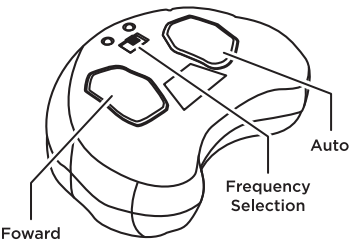

C. REMOTE CONTROL