
BEST CHOICE
PRODUCTS

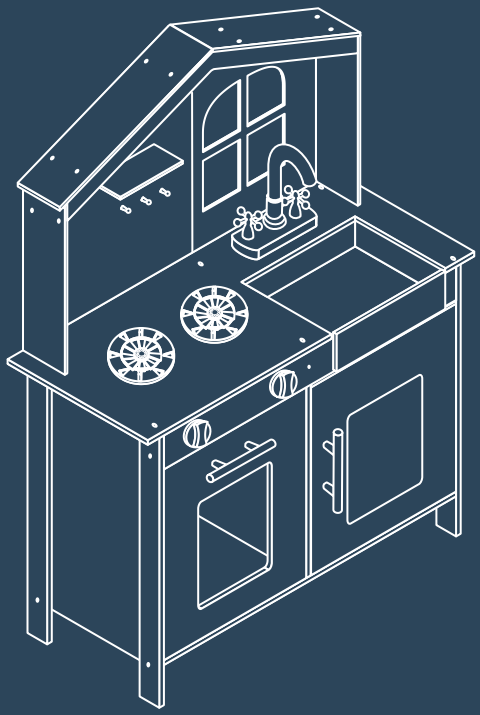

INSTRUCTION MANUAL

36in Country Farmhouse Pretend Play Kitchen

Ver. 1

SKY12253 + SKY12254 + SKY12255

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.

NOTICE | *Please retain these instructions for future reference.*

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- Be aware that some parts are heavy or have sharp edges.
- This product is intended for residential use only.

TOOLS REQUIRED



PHILLIPS SCREWDRIVER



POWER DRILL *(RECOMMENDED)*



3 YEARS OLD & UP



1 PERSON ASSEMBLY



UP TO 60 MIN. ASSEMBLY

HARDWARE

A 4 x 30mm SCREW



29 PCS

B 4 x 30mm SCREW *(BLACK)*



8 PCS

C 4 x 18mm SCREW



8 PCS

D BRACKET



2 PCS

E 3 x 9mm SCREW



24 PCS

F 3 x 14mm SCREW



3 PCS

G 5 x 25mm DOWEL



9 PCS

H HINGE RECEIVER



2 PCS

I KNOB SUPPORT



2 PCS

J KNOB




2 PCS

K UTENSIL HANGER



3 PCS

L HINGE PEG



4 PCS

M DOOR INSERT



2 PCS

N DOOR CATCH



2 PCS


O 4 x 16mm SCREW



4 PCS


PARTS

1 COUNTERTOP

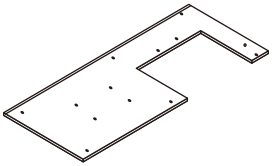


1 PC

2 BASE

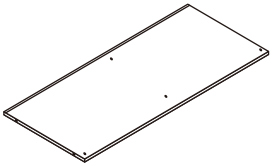


1 PC

3 DIVIDER




1 PC

4 RIGHT SIDE




1 PC

5 LEFT SIDE




1 PC

6 OVEN DOOR




1 PC

7 CUPBOARD DOOR




1 PC

8 COUNTER PANEL

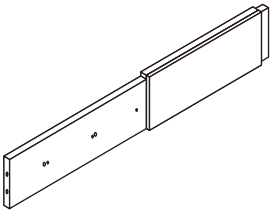


1 PC

9 SINK BACK

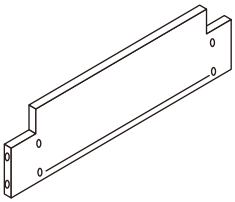


1 PC

10 SINK LEFT SIDE

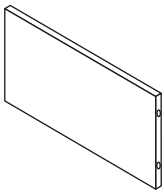


1 PC

11 SINK RIGHT SIDE

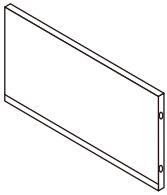


1 PC

12 SINK BOTTOM

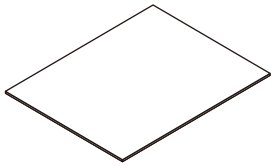


1 PC

13 ROOF LEFT

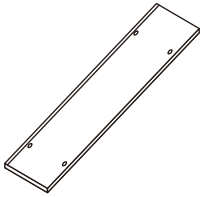


1 PC

14 ROOF RIGHT

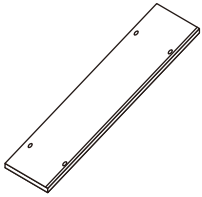


1 PC

15 SHELF

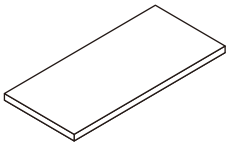


1 PC

16 OVEN BACK



1 PC

17 CUPBOARD BACK




1 PC

18 LEFT COUNTER WALL




1 PC

19 RIGHT COUNTER WALL




1 PC

20 BACKSPLASH

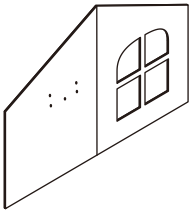


1 PC

21 ROOF FRAME

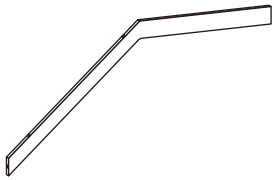


2 PCS

22 DOOR HANDLE

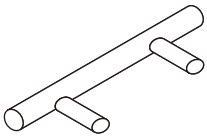


2 PCS

23 FAUCET

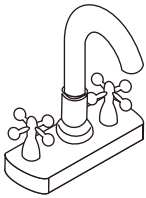


1 PC

24 BURNER

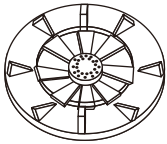


2 PCS

25 DUTCH OVEN

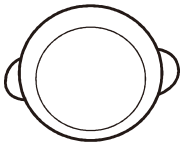


1 PC

26 DUTCH OVEN LID

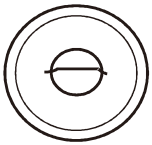


1 PC

27 SAUCEPAN

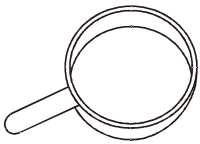


1 PC

28 SKIMMER

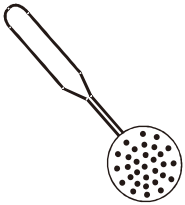


1 PC

29 LADLE

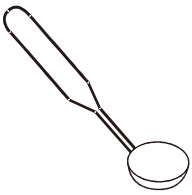

1 PC

30 SLOTTED SPATULA

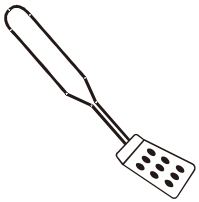


1 PC

PRODUCT ASSEMBLY


1

Locate the **part 6 oven door** and attach one **part M door insert** with two **part E screws.**
Attach one **part L hinge peg** to the of the oven door with two **part E screws.**
Attach the **part 22 door handle** with two **part C screws.**
Repeat the steps for **part 7 cupboard door.**

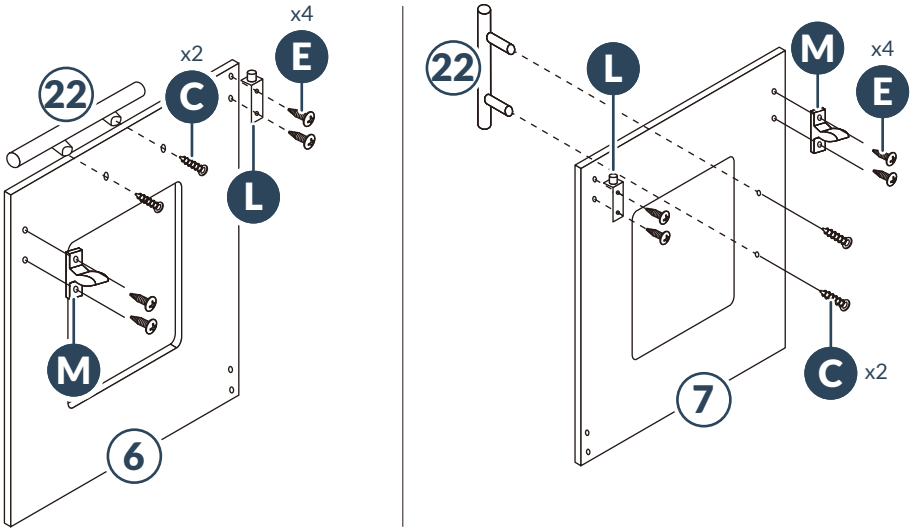


2


Attach one **part N door catch** to **part 3 divider** with two **part E screws.**
On the other side of the divider, attach another **part N door catch** with two **part E screws.**

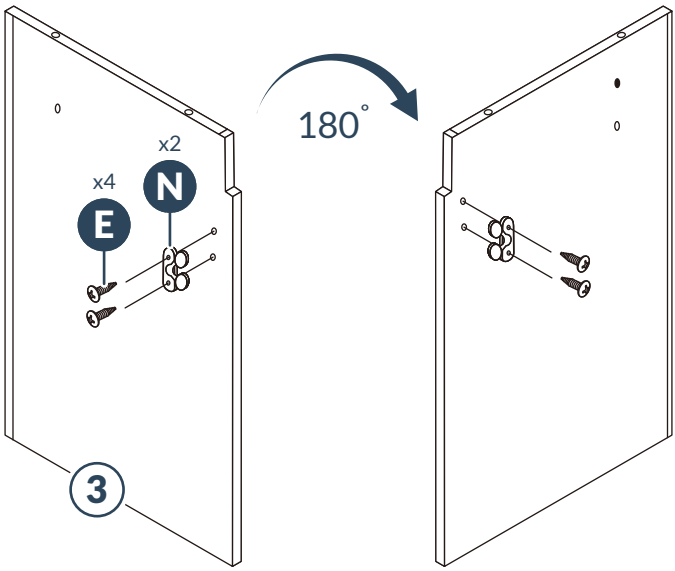

3 Locate the **part 8 counter panel** and attach two **part D brackets** with four **part E screws.**
Attach two **part I knob supports** to the back of the two **part J knobs.**
Then attach two **part J knobs** to the counter panel with two **part C screws.**

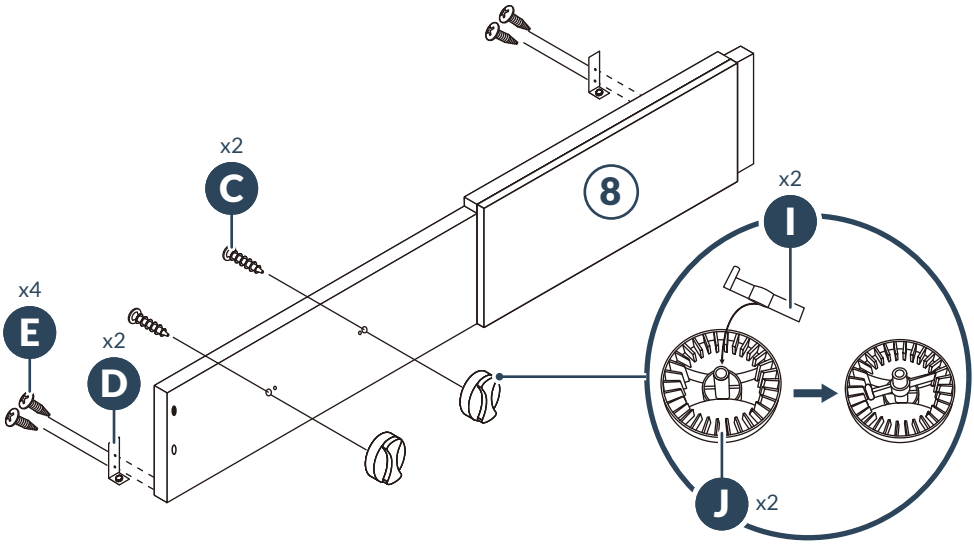


4 Locate the **part 1 countertop** and attach two **part 24 burners** with four **part O screws.**
Attach the **part 23 faucet** with two **part C screws.**

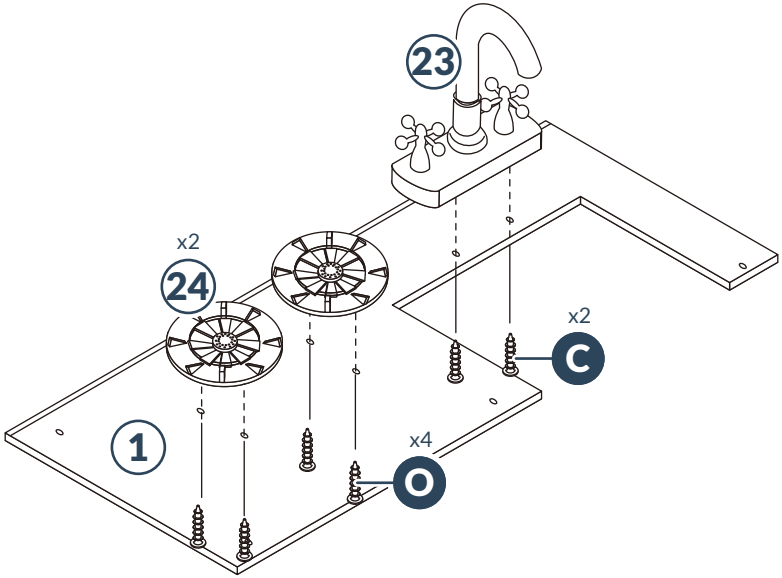


5

Locate the **part 2 base** and attach two **part H hinge receivers** with four **part E screws.**

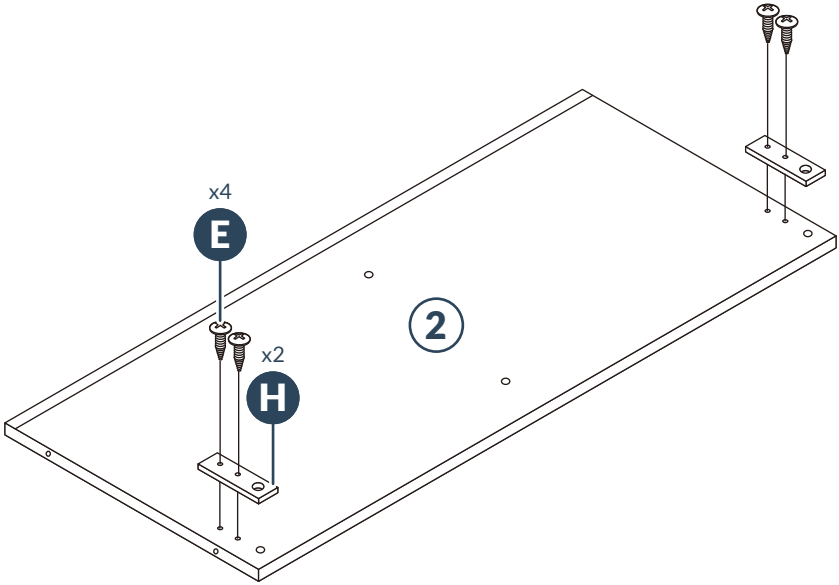


6


Attach the **part 3 divider** to the **part 2 base** with two **part A screws.**

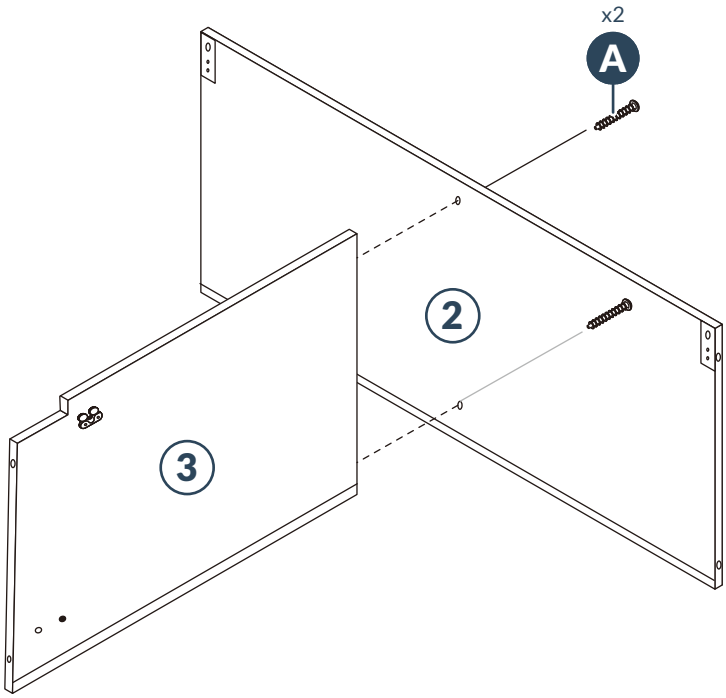

7 Insert two **part G dowels** into **part 9 sink back,** then attach **part 10 & 11 sink sides** with two **part A screws.**

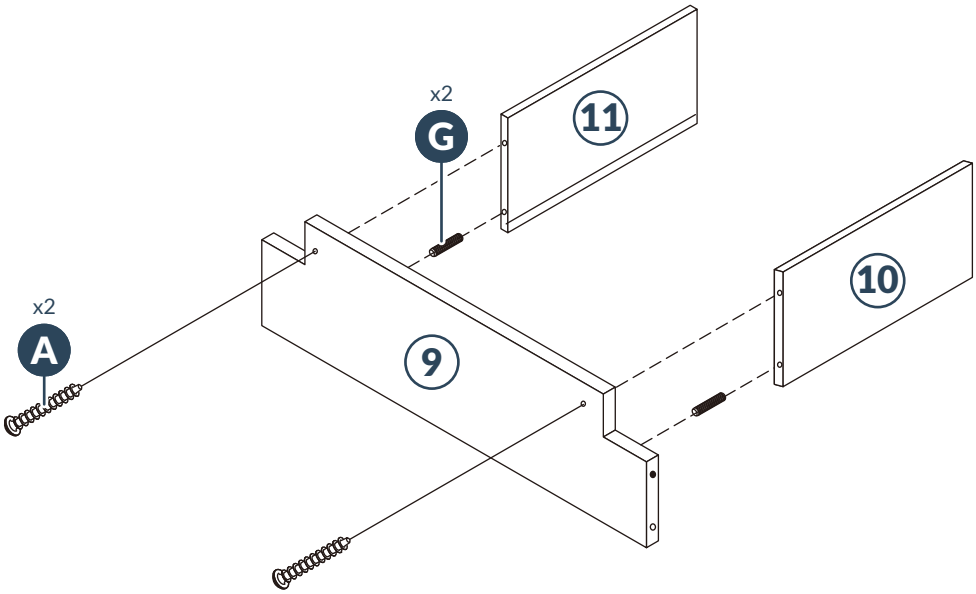

8 Insert four **part G dowels** into **part 10 & 11 sink sides,** then insert **part 12 sink bottom** between the sides.

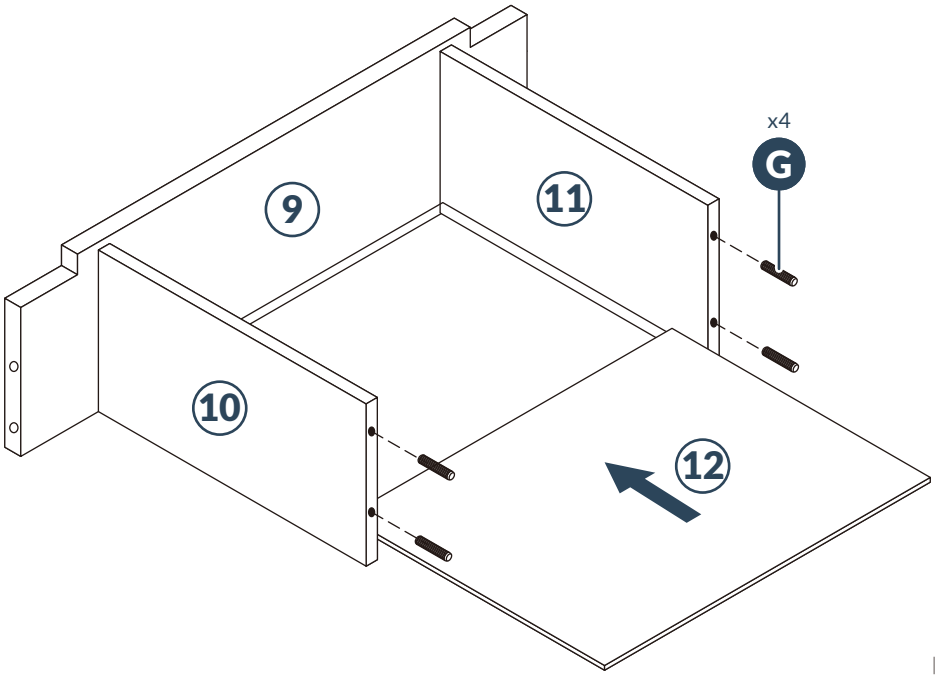


9

Insert one **part G dowel** into the **part 9 sink back,** then attach the assembled sink to **part 3 divider** with one **part A screws.**

Attach **part 8 counter panel** to the assembled sink.


Insert one **part G dowel** into **part 4 right side,** then attach it with four **part A screws.**

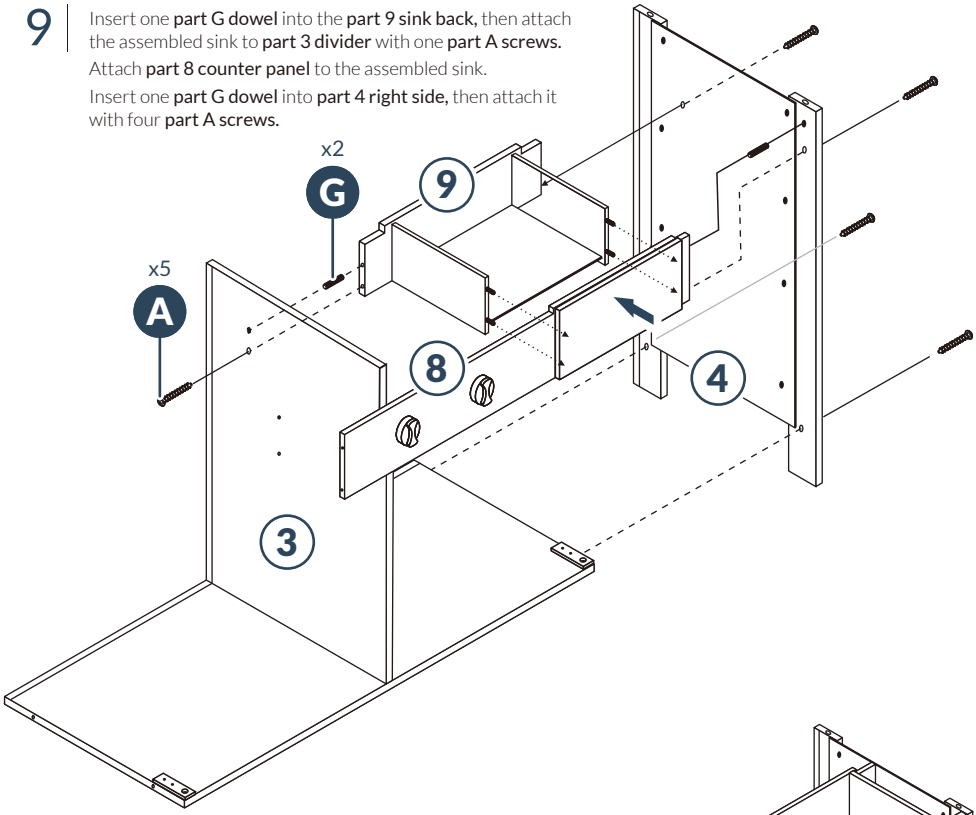

10

Insert one **part G dowel** into **part 5 left side,** then attach the left side with three **part A screws.**

Secure **part 8 counter panel** to **part 3 divider** with one **part A screw.**

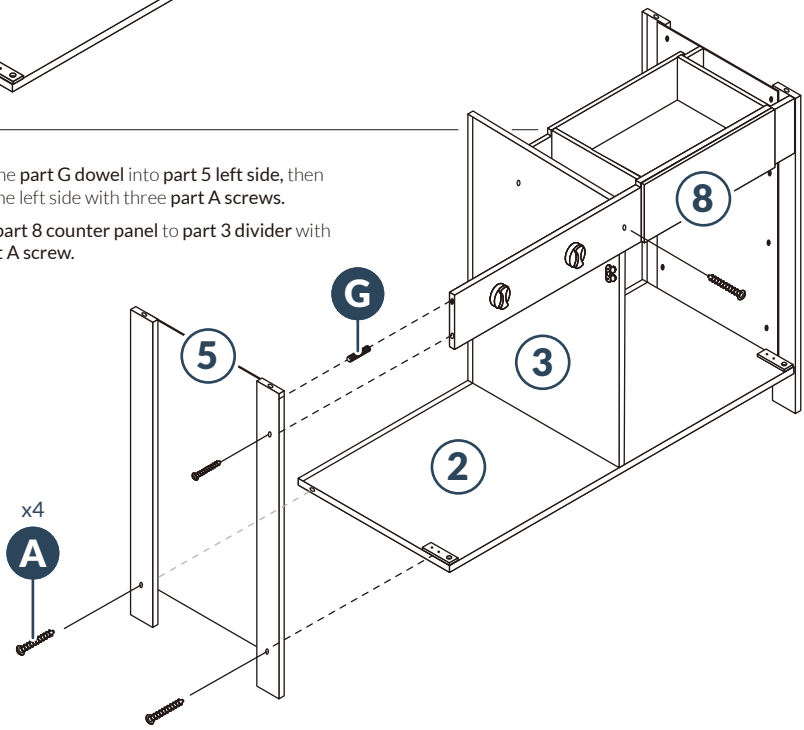


11

Insert **part 16 & 17 backs.**

Insert the hinge peg on the **part 6 oven door** into the opening on the **part 8 counter panel.**


Insert one **part L hinge peg** into the opening on the **part 2 base,** and secure to the **part 6 oven door** using two **part E screws.**

Repeat the steps for **part 7 cupboard door.**

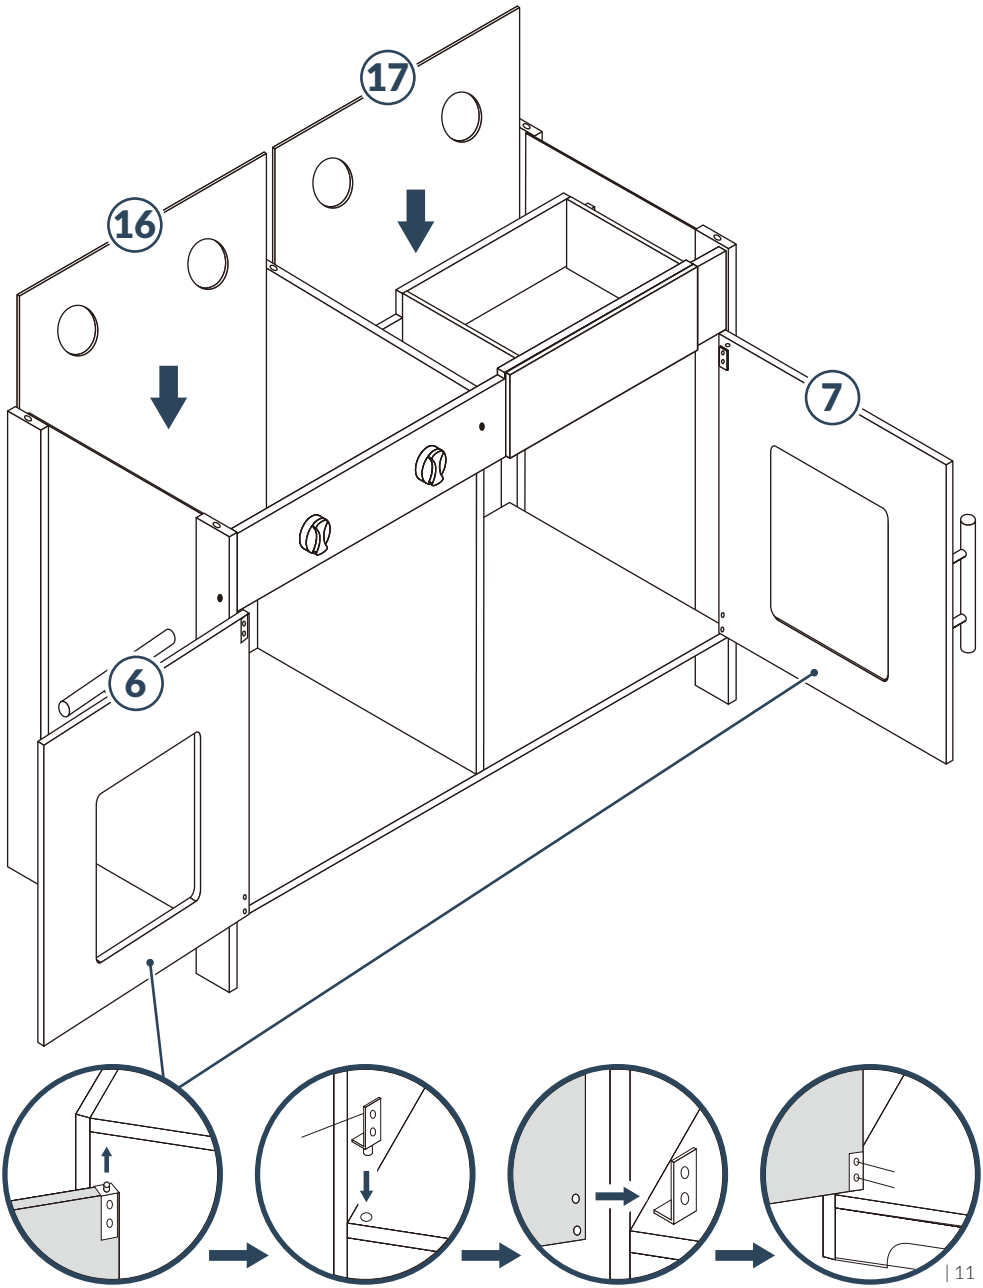


12

Attach the **part 1 countertop** with six **part A screws.**

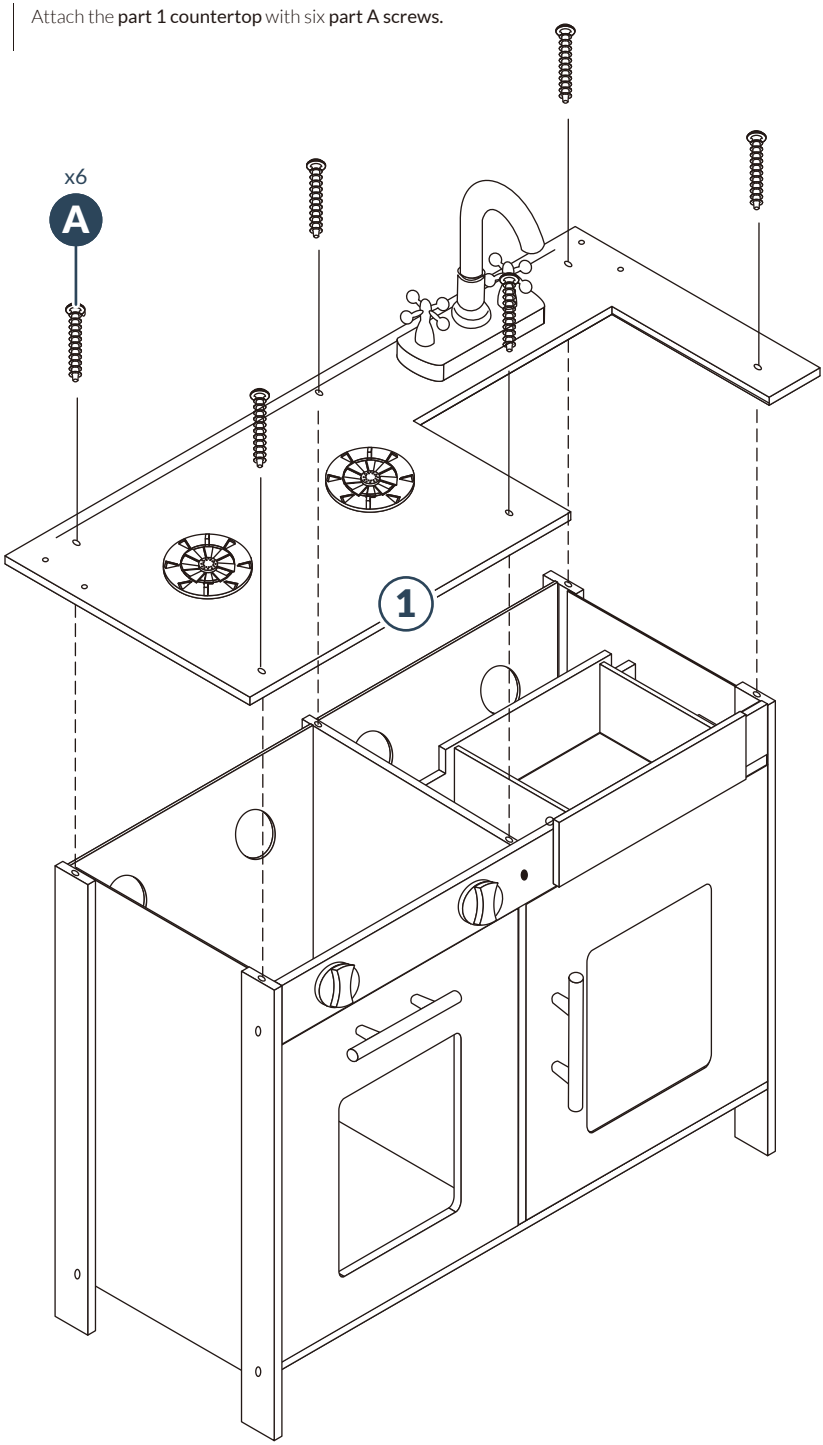


13

Attach two **part 21 roof frames** to **part 13 & 14 roofs** with eight **part B screws.**

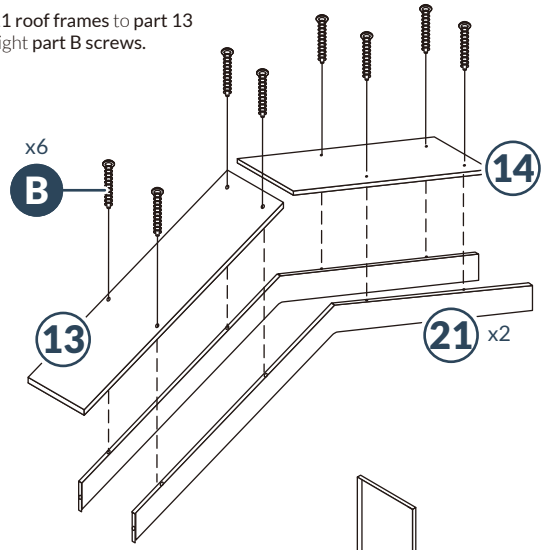

14


Attach **part 18 & 19 counter walls** with four **part A screws,**

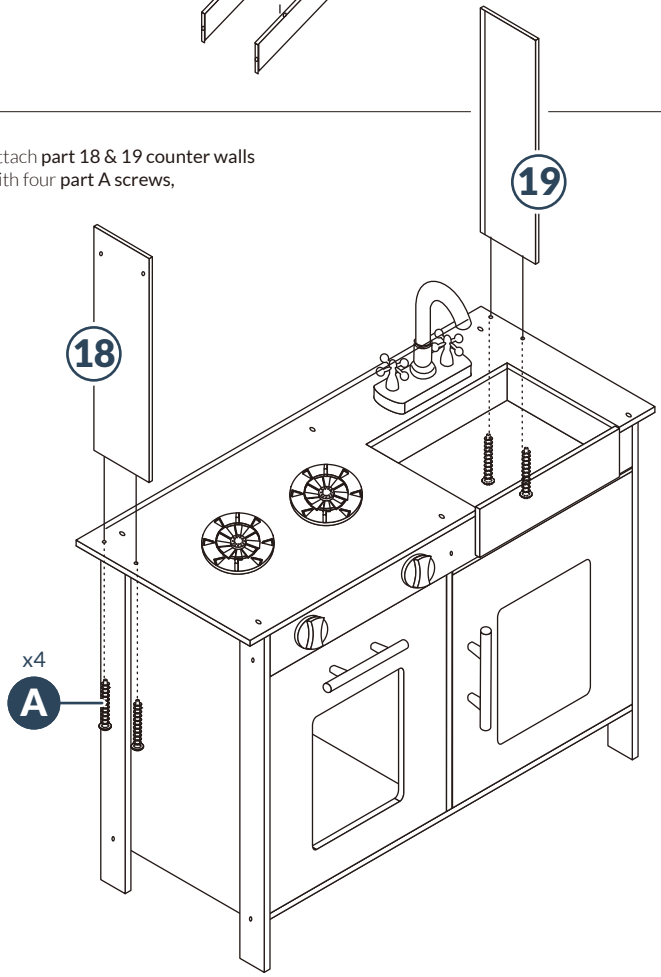


15

Attach three **part K utensil hangers** to **part 20 backsplash** with three **part F screws,**


Then attach **part 15 shelf** with two **part A screws.**

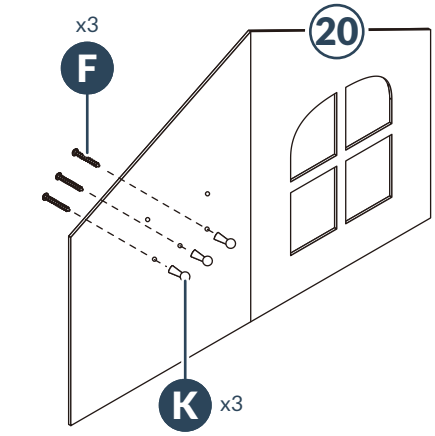

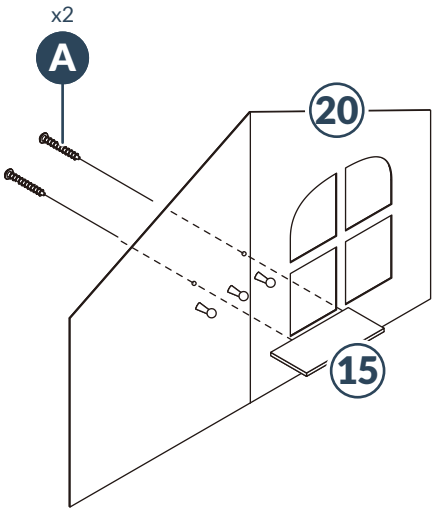


16

Insert **part 20 backsplash** between **part 18 & 19 counter walls.**

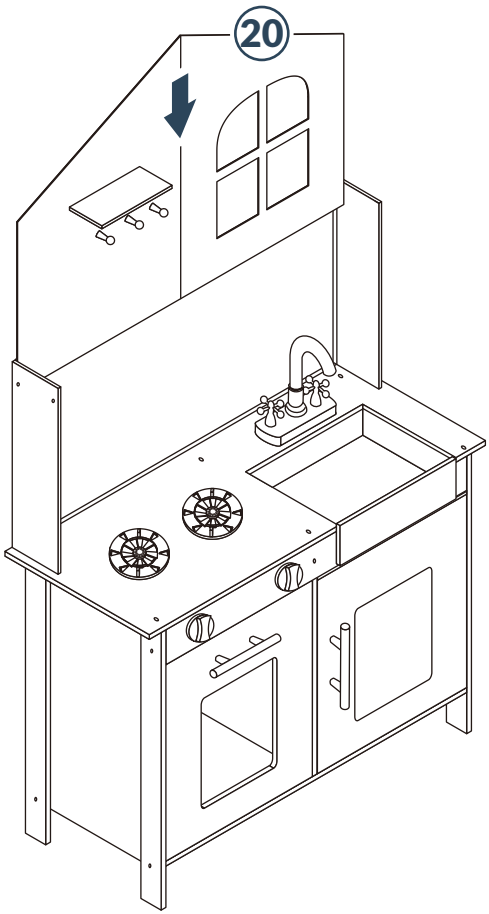

17 Attach the assembled roof to **part 18 & 19 counter walls** with four **part A screws.**
Place the provided accessories as desired.

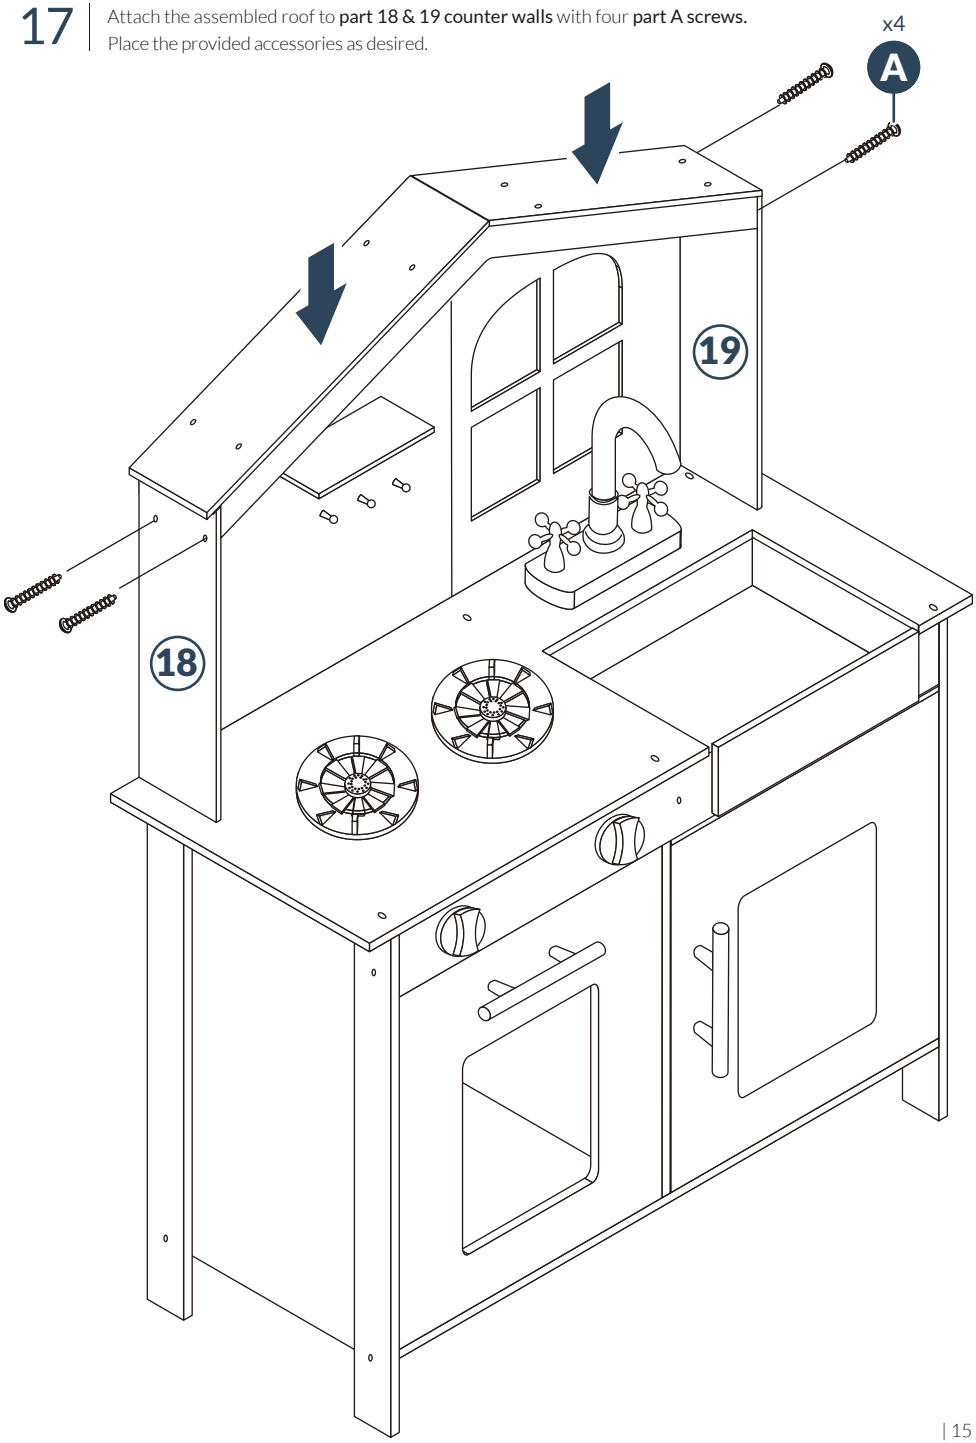

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.