CANYON LODGE®

SIGNATURE HEARTH SERIES BY MR. HEATER

CONNECTING THE EXHAUST ADAPTER


GEN 2 PELLET STOVES | FIRST STEP: BEFORE STOVE INSTALLATION

CHOOSE YOUR ADAPTER	SUPPLIED	FIT ON STOVE
DuraVent 3PVL-AD	Sold individually	Fits well
DuraVent 3PVL-ADS	Sold individually	Fits well
DuraVent 3PVL-ADK	Included in kit	Loose; screw may be needed
Selkirk 3VP-PC	Alternative adapter	Fits well

Prepare before installing the stove: Keep it unplugged. Clean and dry the mating surfaces.Use ***high-temperature RTV*** suitable for the exhaust connection. Match the adapter to its own vent systeml do not mix DuraVent and Selkirk components.

A : SEALANT LOCATION

Adapter only - before fitting to stove

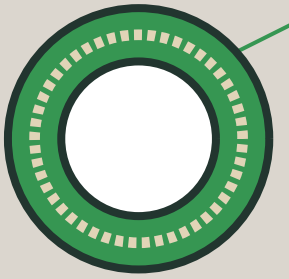


Green: high-temp RTV
Fill the gap between the two walls all the way around

Dashed: rope gasket
Leave in this same gap.

Two dark rings = inner and outer adapter walls

B : FASTENER

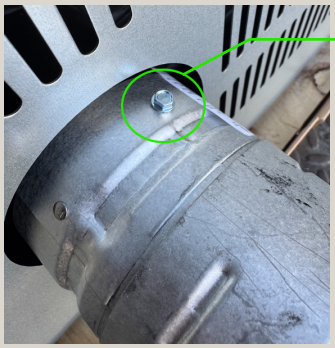

Fastener:
#8 self-tapping sheet-metal screw
Drill a pilot hole first.

Needed only if the adapter fits loosely.

Fastening method under review.

Reference photo - fastening detail under review

1 Seal the connection and seat the adapter

Leave the rope gasket in place. Fill the gap between both walls with high-temperature RTV, all the way around. Seat the stove outlet against the gasket.

2 Check the fit - screw only if loose

Only a loose adapter needs a retaining screw. Drill a pilot hole through both adapter walls and the stove outlet, then install a #8 self-tapping sheet-metal screw. Pilot-hole reference: #29 bit (0.136 in).

3 Allow the RTV to cure before heating

Wait the full cure time on the RTV label before applying heat. Verify the connection is secure and sealed. Install the stove and complete vent system according to the stove manual before operating.

Canyon Lodge • 4560 W 160th St. Cleveland, OH 44135 • 1-833-766-5951