
BEST CHOICE PRODUCTS

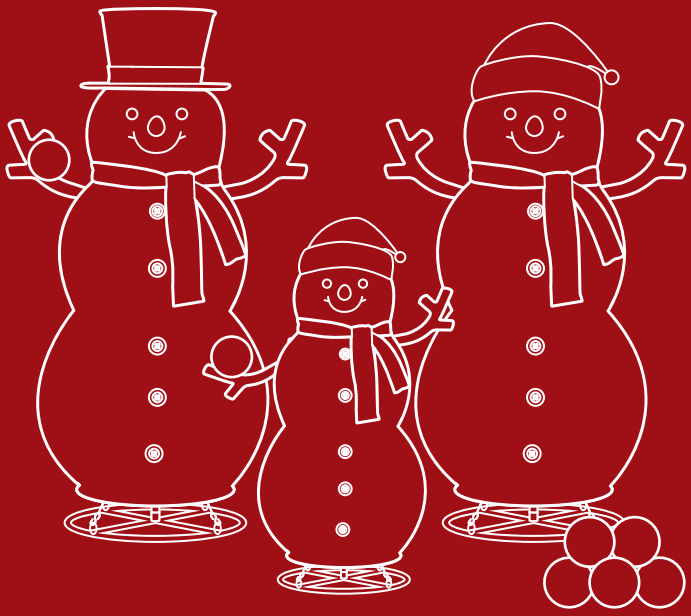

INSTRUCTION MANUAL

3pc Pop-up Snowman Family

Ver. 1

SKY11854

NOTICE

Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

1 PERSON ASSEMBLY


UP TO 25 MIN. ASSEMBLY

WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figure.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

HARDWARE

1 STAKE



11 PCS

PARTS

A SNOWMAN BODY




3 PCS

B BASE STAND



3 PCS


C TOP POLE

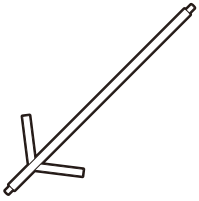

3 PCS


PARTS

D BOTTOM POLE

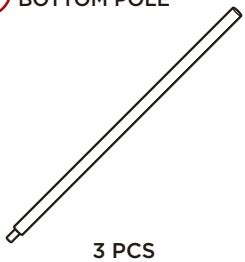


3 PCS

E RIGHT ARM

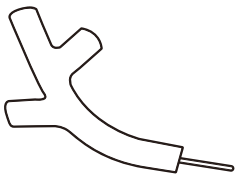

1 PC

F LEFT ARM

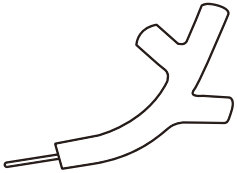


3 PCS

G SCARF




3 PCS

H SNOW BALL PILE

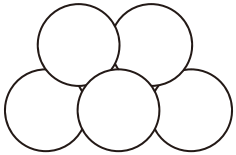


1 PC

I RIGHT ARM W/ SNOW BALL

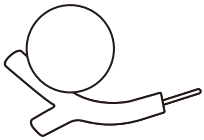

2 PCS


J ADAPTER

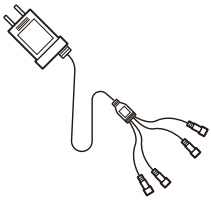

1 PC


PRODUCT ASSEMBLY

1 Locate the **part A snowman body** and turn it upside down with the snowman's hat on the ground.

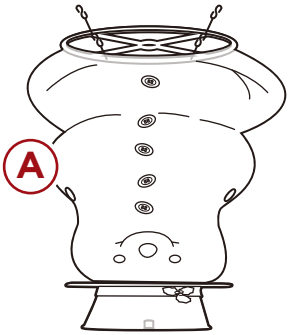


PRODUCT ASSEMBLY

2 Insert the **part C top pole** through the bottom opening of the **part A snowman body.** Insert the top of the pole into the opening in the snowman's hat, then thread the lower end of the pole through the metal ring in the center of the snowman body.

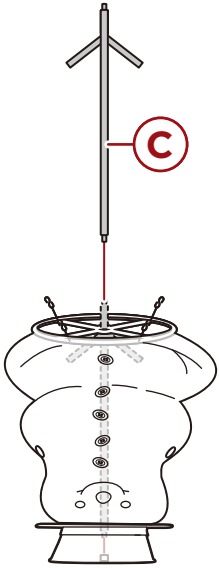


3 Flip the **part A snowman body** upright and insert the **part D bottom pole** into the **part C top pole** through the metal ring in the snowman's bottom.

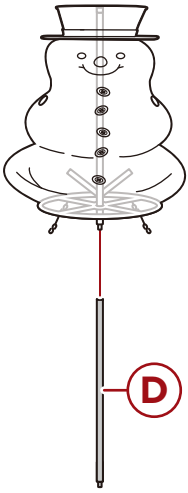


PRODUCT ASSEMBLY

4 Insert the **part D bottom pole** into the **part B base stand.**

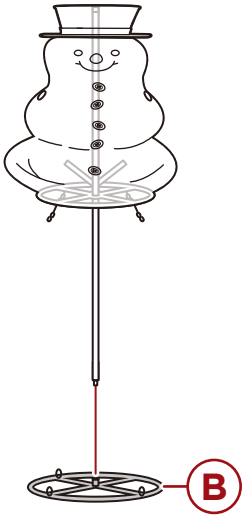


5 Locate the openings on either side of the **part A snowman body** and insert the **part I & F arms.** Connect the arms to the branches of the **part C top pole.**

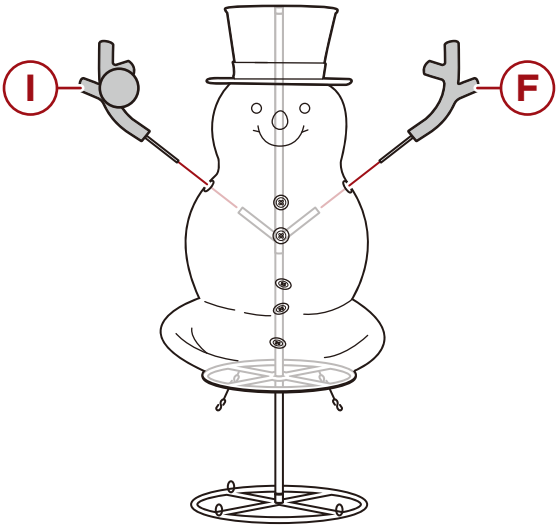


PRODUCT ASSEMBLY

6 Use both hands to grip the hooks at the bottom of the **part A snowman body** and pull downward to the **part B base stand,** secure the hooks.

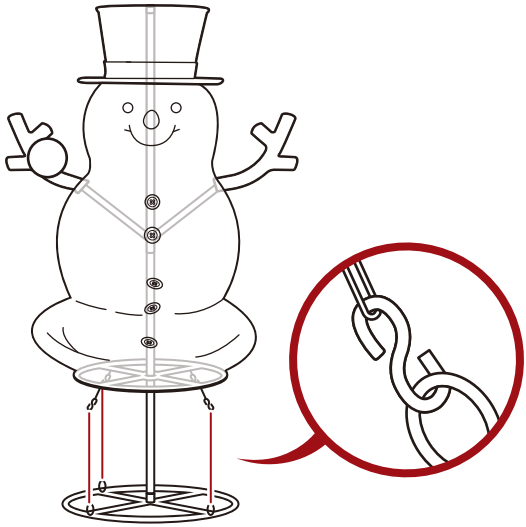


7 Wrap the **part G scarf** around the snowman's neck.

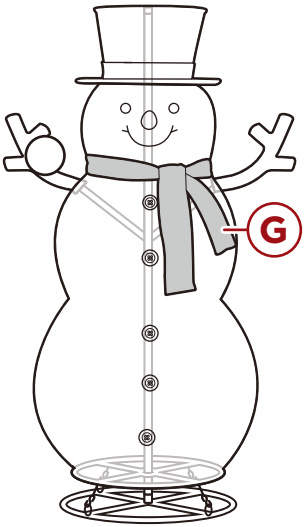

PRODUCT ASSEMBLY

8 Secure the snowman figure to the ground with four **part 1 stakes.**

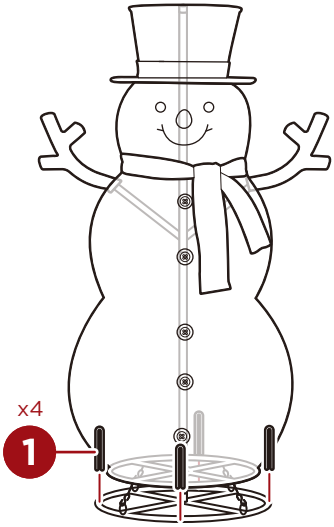


REPEAT STEPS

1-8

TO ASSEMBLE REMAINING 2 SNOWMEN

Stake Requirements:
Large Snowman – 4 Stakes
Small Snowman – 3 Stakes

9 Locate the white plug on each figures and connect them to the white plugs on the **part J power adapter.**

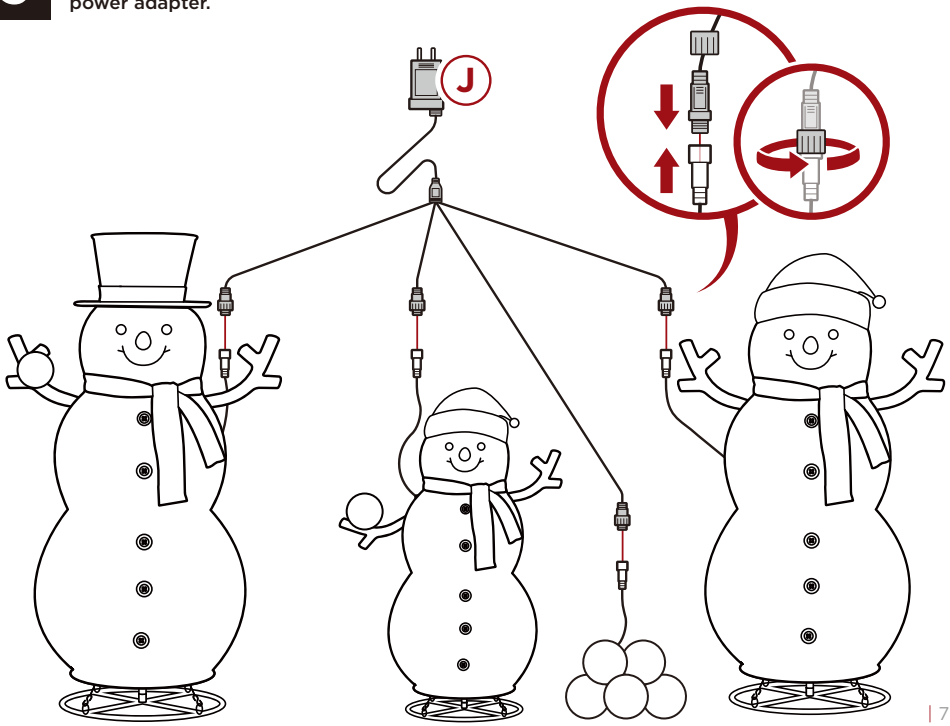

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.


Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

BEST CHOICE PRODUCTS

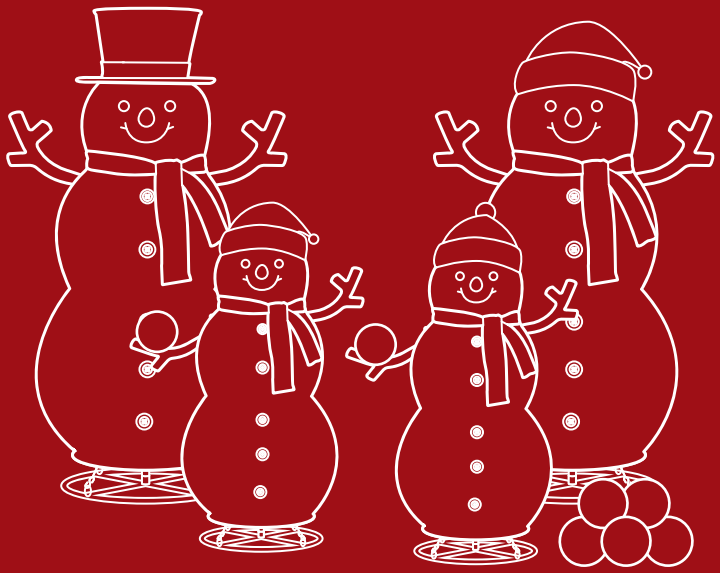

INSTRUCTION MANUAL

4pc Pop-up Snowman Family

Ver. 1

SKY11855

NOTICE

Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

1 PERSON ASSEMBLY


UP TO 25 MIN. ASSEMBLY

WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figure.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

HARDWARE

1 STAKE



16 PCS

PARTS

A SNOWMAN BODY




4 PCS

B BASE STAND



4 PCS


C TOP POLE

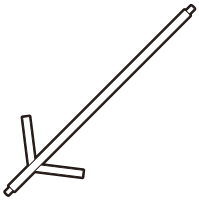

4 PCS


PARTS

D BOTTOM POLE

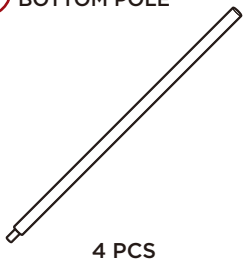


4 PCS

E RIGHT ARM

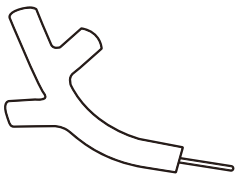

2 PCS

F LEFT ARM

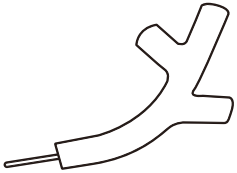


4 PCS

G SCARF




4 PCS

H SNOW BALL PILE

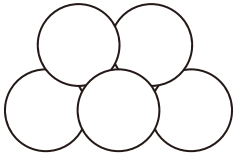


1 PC

I RIGHT ARM W/ SNOW BALL

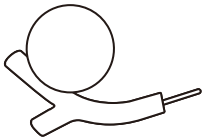

2 PCS


J ADAPTER

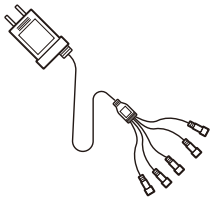

1 PC


PRODUCT ASSEMBLY

1 Locate the **part A snowman body** and turn it upside down with the snowman's hat on the ground.

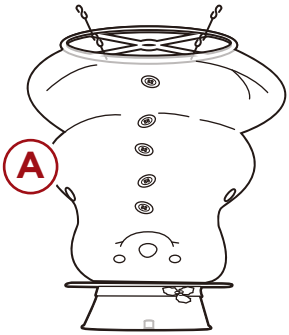


PRODUCT ASSEMBLY

2 Insert the **part C top pole** through the bottom opening of the **part A snowman body.** Insert the top of the pole into the opening in the snowman's hat, then thread the lower end of the pole through the metal ring in the center of the snowman body.

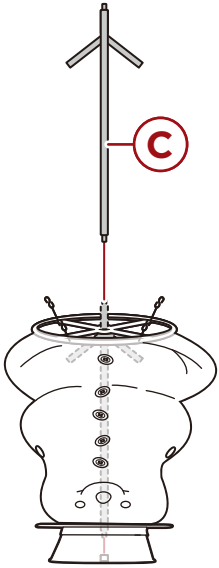


3 Flip the **part A snowman body** upright and insert the **part D bottom pole** into the **part C top pole** through the metal ring in the snowman's bottom.

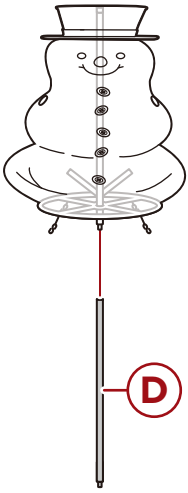


PRODUCT ASSEMBLY

4 Insert the **part D bottom pole** into the **part B base stand.**

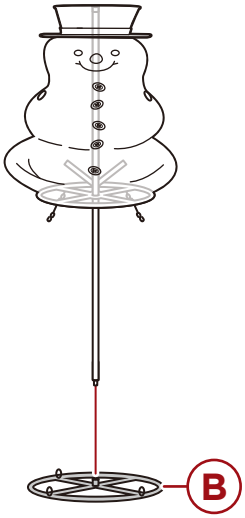


5 Locate the openings on either side of the **part A snowman body** and insert the **part E & F arms.** Connect the arms to the branches of the **part C top pole.**

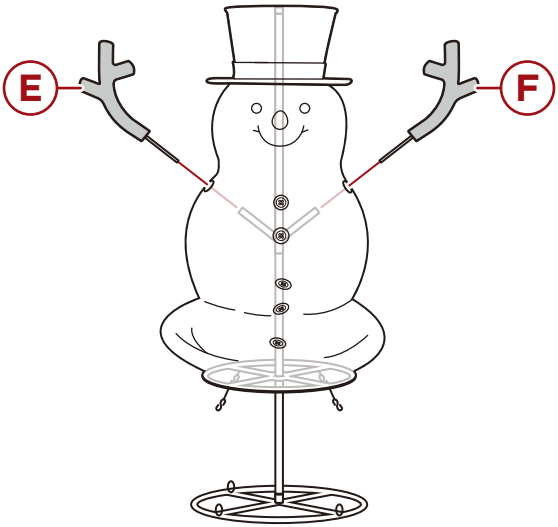


PRODUCT ASSEMBLY

6 Use both hands to grip the hooks at the bottom of the **part A snowman body** and pull downward to the **part B base stand,** secure the hooks.

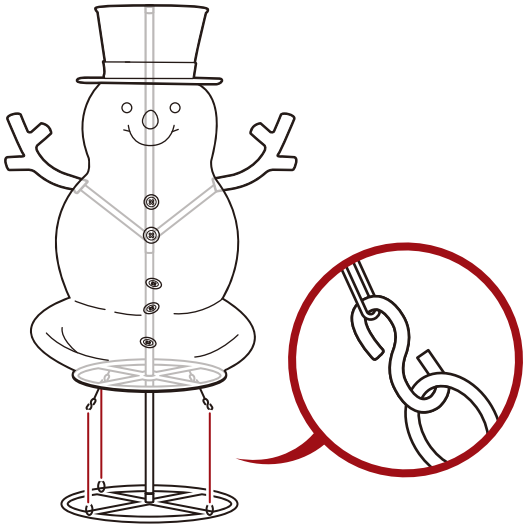


7 Wrap the **part G scarf** around the snowman's neck.

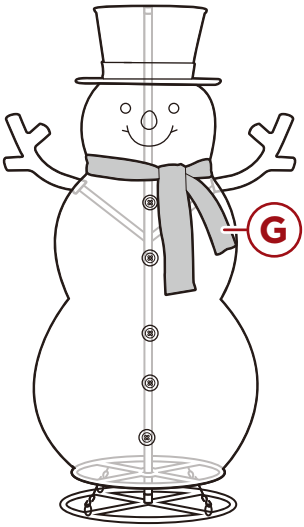

PRODUCT ASSEMBLY

8 Secure the snowman figure to the ground with four **part 1 stakes.**

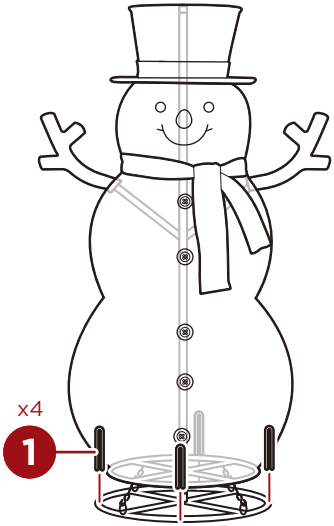


REPEAT STEPS

1-8

TO ASSEMBLE REMAINING 3 SNOWMEN

Stake Requirements:
Large Snowman – 4 Stakes
Small Snowman – 3 Stakes

9 Locate the white plug on each snowman body and connect them to the white plugs on the **part J power adapter.**

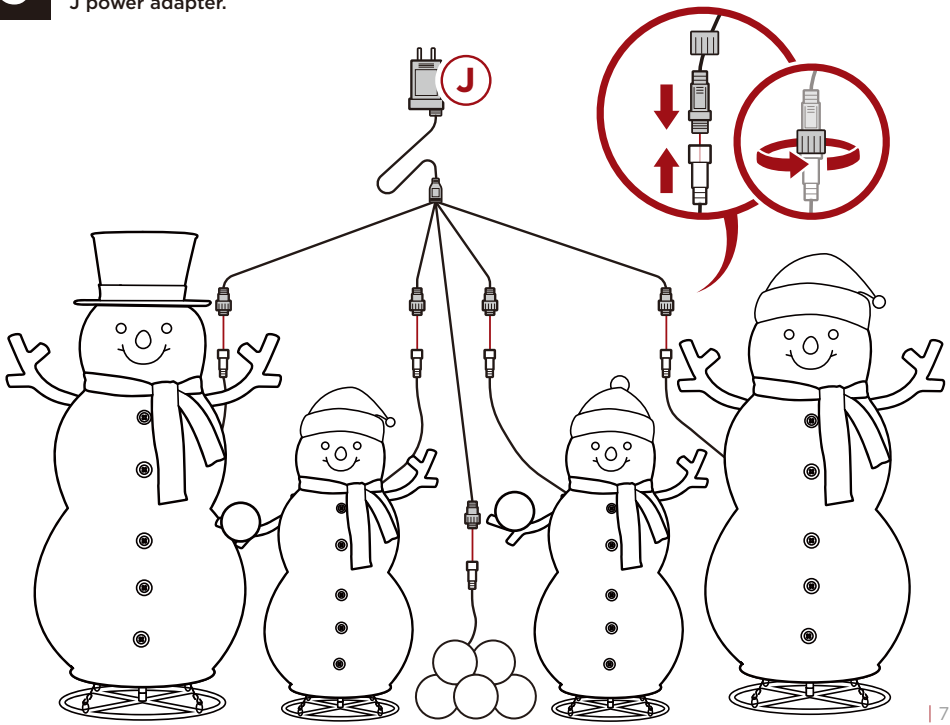

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.