
BEST CHOICE PRODUCTS

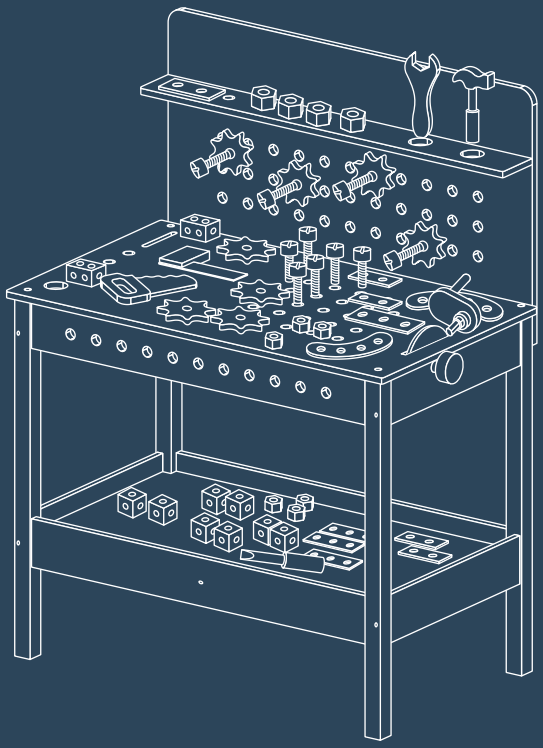

INSTRUCTION MANUAL

Kids Pretend Play Wooden Workbench Tool Set

Ver. 1

SKY11767

⚠ WARNING

ADULT ASSEMBLY REQUIRED

⚠ WARNING

CHOKING HAZARD - Small parts.
Not for children under 3 years old.

NOTICE | *Please retain these instructions for future reference.*

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush, and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED



PHILLIPS SCREWDRIVER



POWER DRILL *(RECOMMENDED)*

3+ 3 YEARS OLD & UP

1 PERSON ASSEMBLY

UP TO 45 MIN. ASSEMBLY

HARDWARE

A LONG SCREW



15 PCS

B SHORT SCREW



15 PCS


C DOWEL



20 PCS


PARTS

1 PEGBOARD

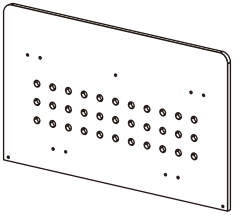

1 PC

2 BOTTOM SHELF FRAME




2 PCS

3 TOP SHELF




1 PC

4 WORKBENCH FRONT




1 PC

5 BOTTOM SHELF SUPPORT




1 PC

6 UPPER LEFT LEG SUPPORT

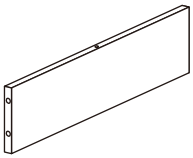


1 PC

7 UPPER RIGHT LEG SUPPORT

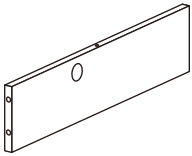


1 PC

8 LOWER LEG SUPPORT

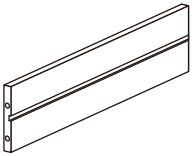

2 PCS

9 WORKBENCH TOP




1 PC

10 BOTTOM SHELF




1 PC

11 FRONT LEFT LEG

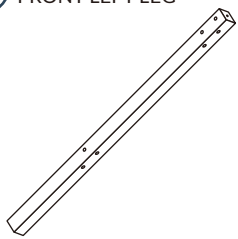


1 PC

12 REAR LEFT LEG

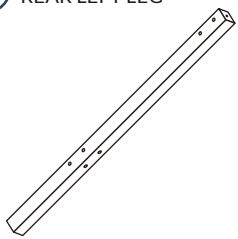


1 PC

13 FRONT RIGHT LEG

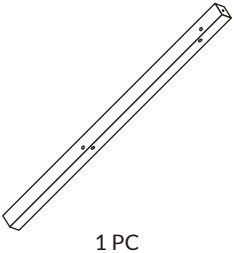

1 PC

14 REAR RIGHT LEG

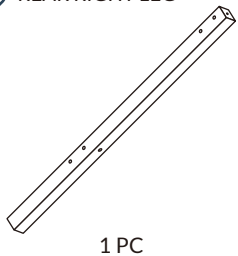


1 PC

15 SPACER




1 PC

16 CIRCULAR SAW BLADE

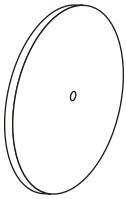


1 PC

17 KNOB



1 PC

18 MOUNTING BLOCK

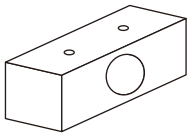


1 PC

PRODUCT ASSEMBLY


1 Insert two **part C dowels** to the **part 11 front left leg.**

Attach **part 6** and **part 8 leg supports** to the **part 11 front left leg** using two **part A long screws.**

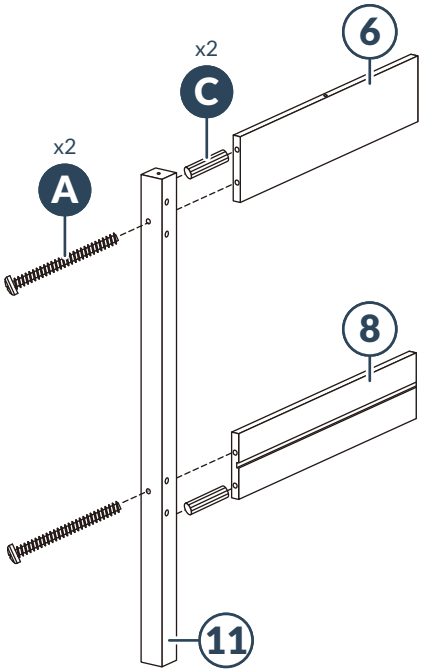


2 Insert two **part C dowels** to the **part 12 rear left leg.**

Attach **part 12 rear left leg** to the **part 6** and **part 8 leg supports** using two **part A long screws.**

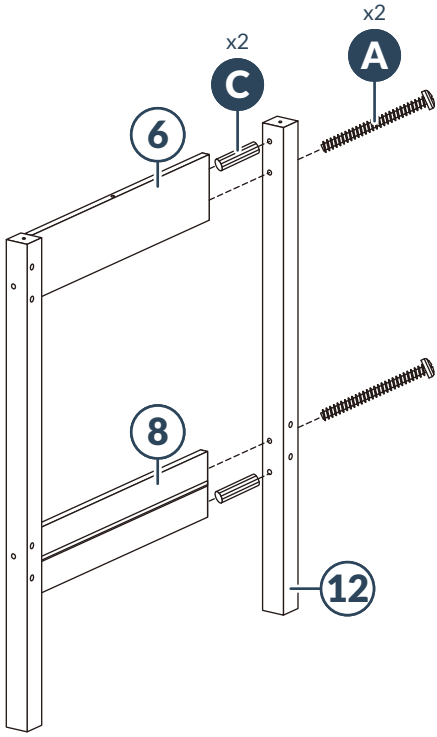

3

Attach two **part 2 bottom shelf frames** to the **part 5 bottom shelf support** using two **part B short screws,**

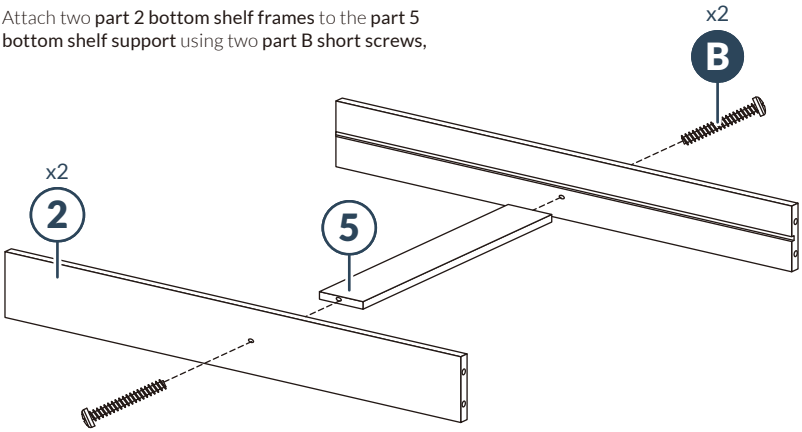


4

Insert one **part C dowel** into each of the **part 2 bottom shelf frame** (two dowels total).


Attach the assembled bottom shelf frame to **part 11** and **part 12 legs** using two **part A long screws.**

Insert one **part C dowel** into **part 4 workbench front.**

Attach the **part 4 workbench front** to **part 11 leg** using one **part A long screw.**

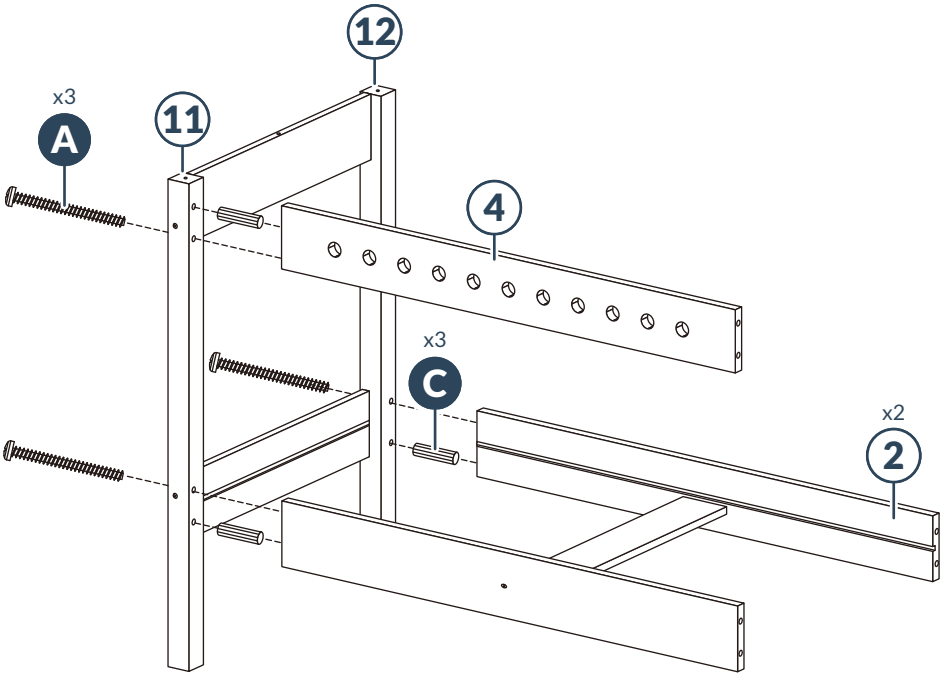


5 Slide **part 10 bottom shelf** into the designated grooves between the **part 2 bottom shelf frames** until fully seated.

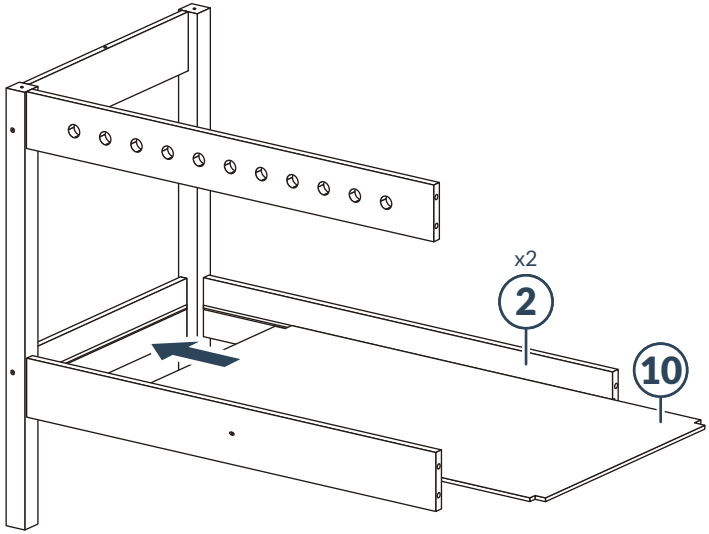


6 Attach **part 16 circular saw blade** and **part 17 knob** to **part 7 upper right leg support.**

Then secure the saw blade assembly using **part 15 spacer** and one **part A long screw.**

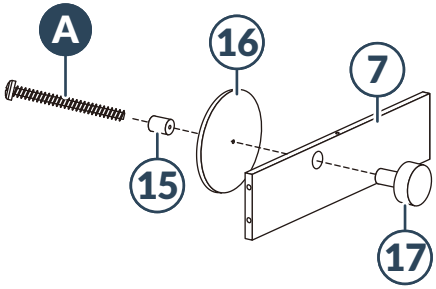

7 Insert two **part C dowels** to the **part 13 front right leg.**


Attach **part 7** and **part 8 leg supports** to the **part 13 front right leg** using two **part A long screws.**

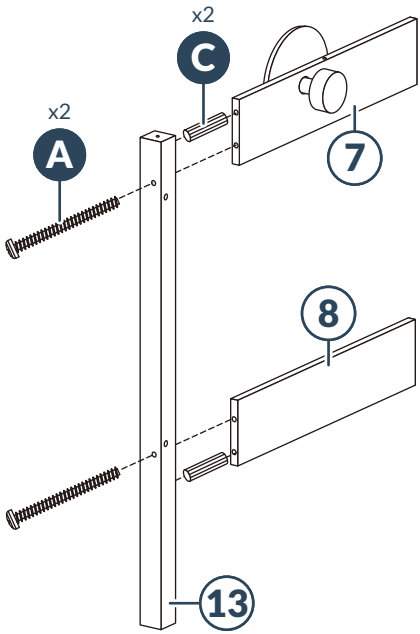

8

Insert two **part C dowels** to the **part 14 rear right leg.**


Attach **part 14 rear right leg** to the **part 7** and **part 8 leg supports** using two **part A long screws.**

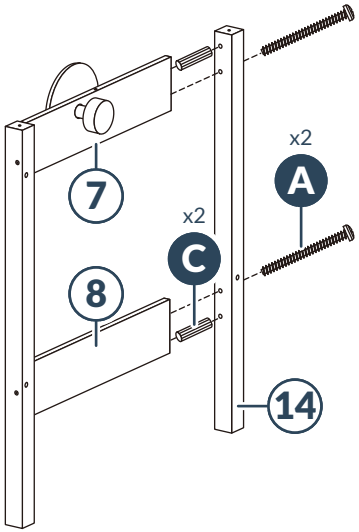


9

Insert one **part C dowel** into each of the **part 2 bottom shelf frame and part 4 workbench front** (three dowels total).

Attach the assembled right legs using three **part A long screws.**

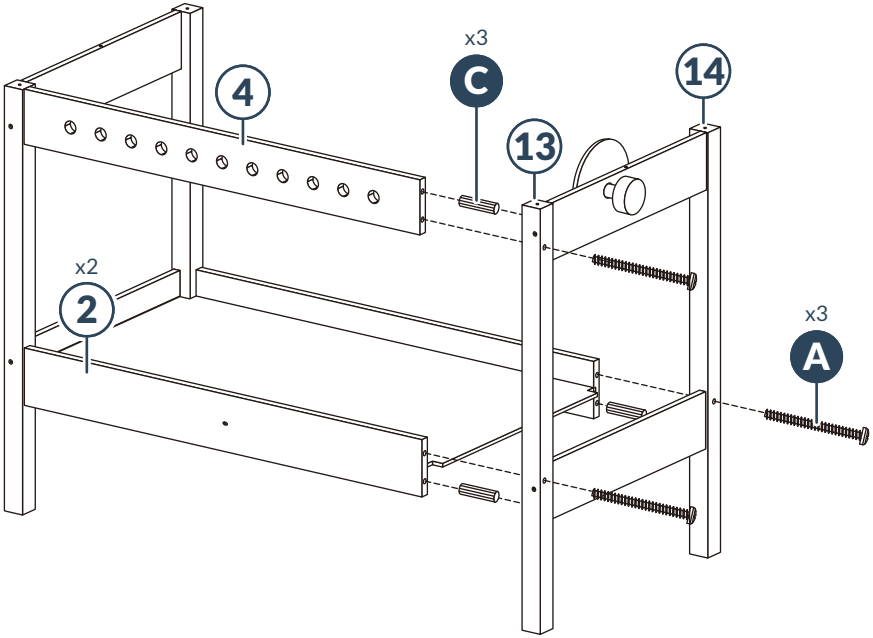


10 | Insert two **part C dowel** into each of **part 6** and **part 7 upper leg support** (two dowels total).
Attach **part 9 workbench top** to the legs using four **part B short screws** (one screw per leg).

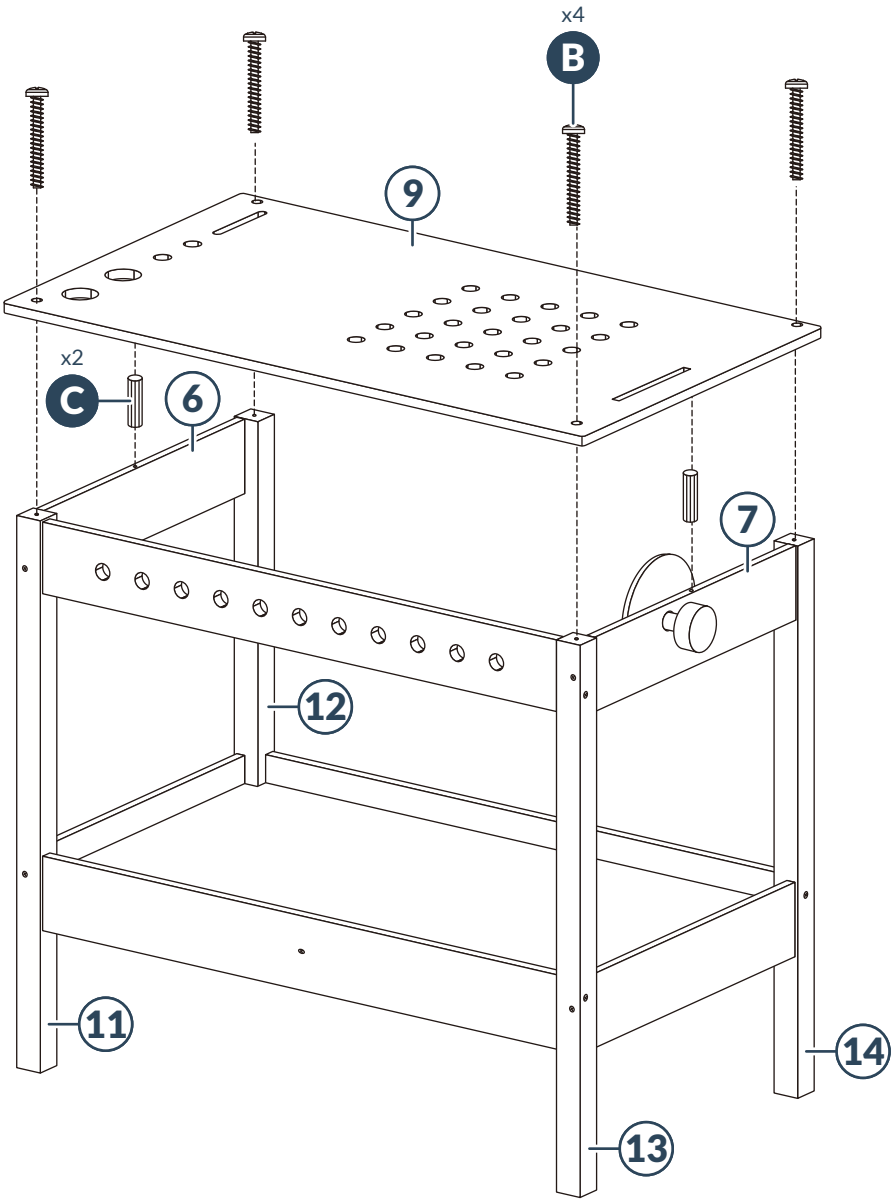

11

Insert **part 18 mounting block** to the **part 15 spacer.**


Then secure the **part 18 mounting block** to **part 9 workbench top** using two **part B short screws.**

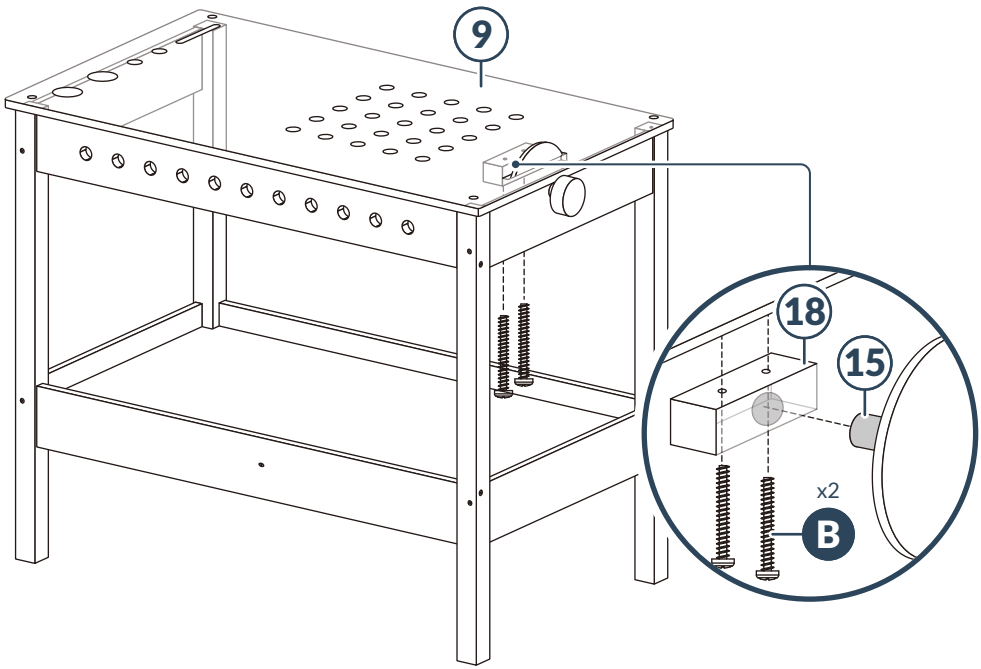

12

Insert two **part C dowels** to the **part 3 top shelf.**


Attach **part 3 top shelf** to the **part 1 pegboard** using three **part B short screws.**

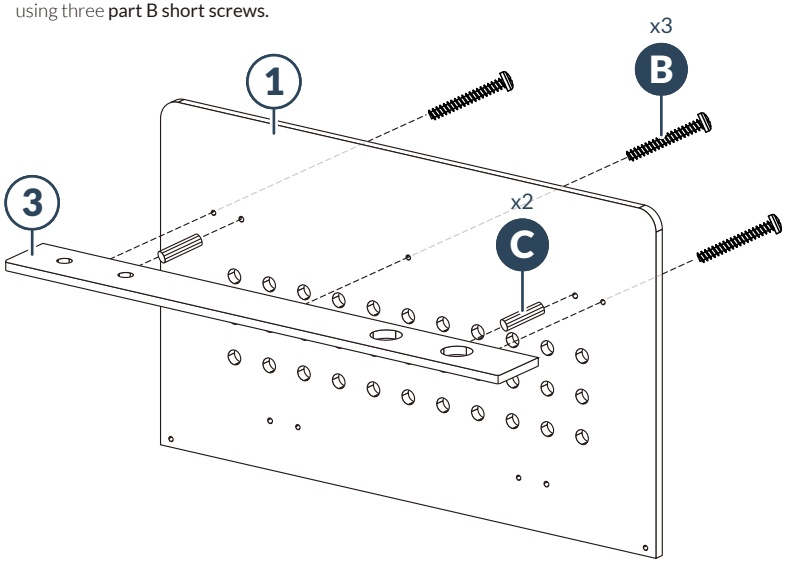


13 Turn the workbench so the rear side is facing you.

Align **part 1 pegboard** with the rear frame, then insert two **part C dowels** into the center holes of **part 9 workbench top.**


Secure **part 1 pegboard** to **part 9 workbench top** using two **part B short screws**. Then secure the pegboard to the rear legs using two additional **part B short screws.**

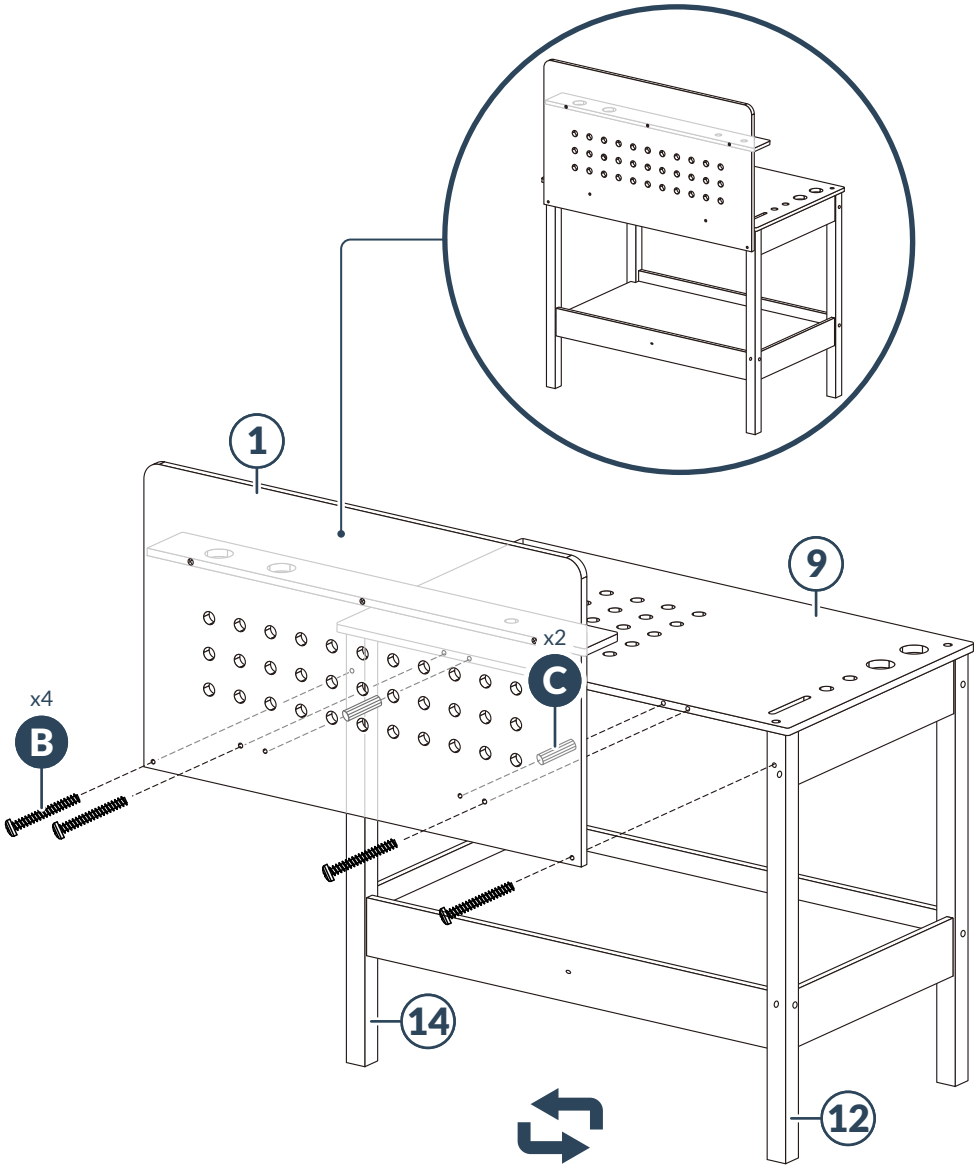

14 Arrange the accessories as desired.

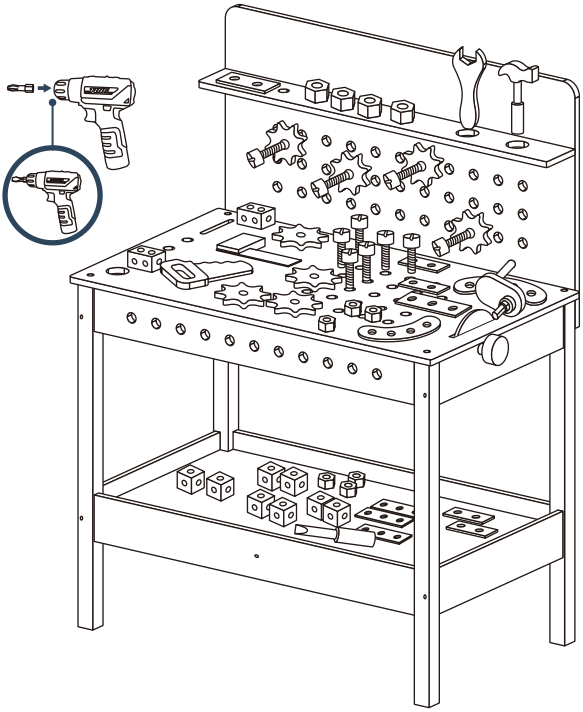

ACCESSORIES

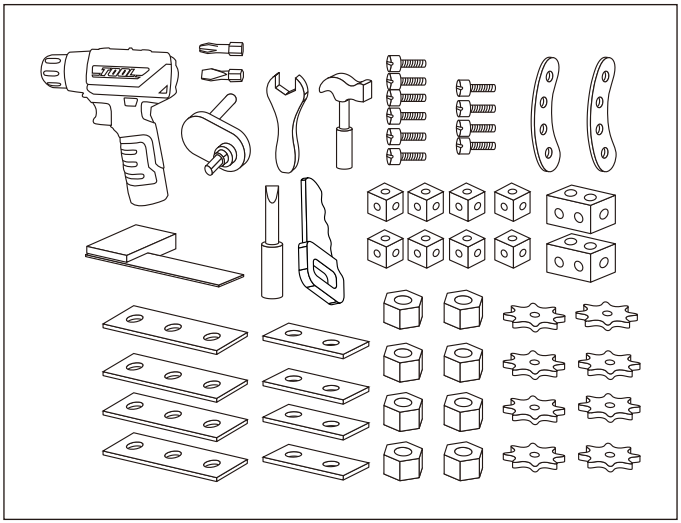

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.