ASSEMBLY INSTRUCTIONS



CARROW COLLECTION

ITEM#: U5862-13P2

DESCRIPTION : CARROW AUTO GLIDE RECLINER W/PWR HR & FR, STEREO, MASSAGE


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose during shipment. Identify and count all items and compare with the parts list shown below. It is recommended to have two people during assembling and to remove the back and base of the furniture out from the box. Please follow the drawings below to assemble the item

Parts List

NO.	DESCRIPTION	SKETCH	Q'TY
A	Seat		1 PC
B	Backrest		1 PC
C	Left Side Facing (LSF) wing		1 PC
D	Right Side Facing (RSF) wing		1 PC
E	Power Cable 29V-2A		1 PC
F	Transformer 29V-3.0A		1 PC
G	Plug		1 PC

WEIGHT CAPACITY (PER SEAT) : 350LBS

Please follow the drawings below to assemble the item

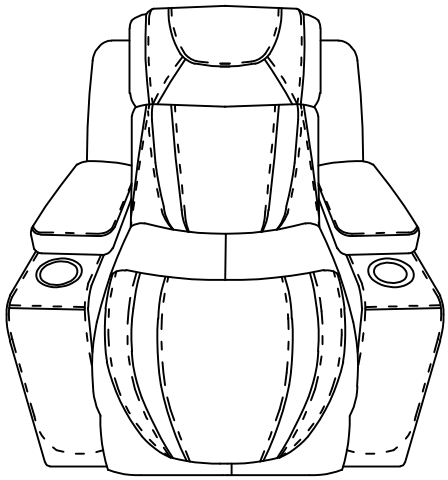


ASSEMBLY INSTRUCTIONS

CARROW COLLECTION


ITEM#: U5862-13P2

DESCRIPTION : CARROW AUTO GLIDE RECLINER W/PWR HR & FR, STEREO, MASSAGE


STEP 1: Attach the Backrest (B) by align and insert the metal bracket on the Backrest (B) to the metal bracket of the Seat (A).

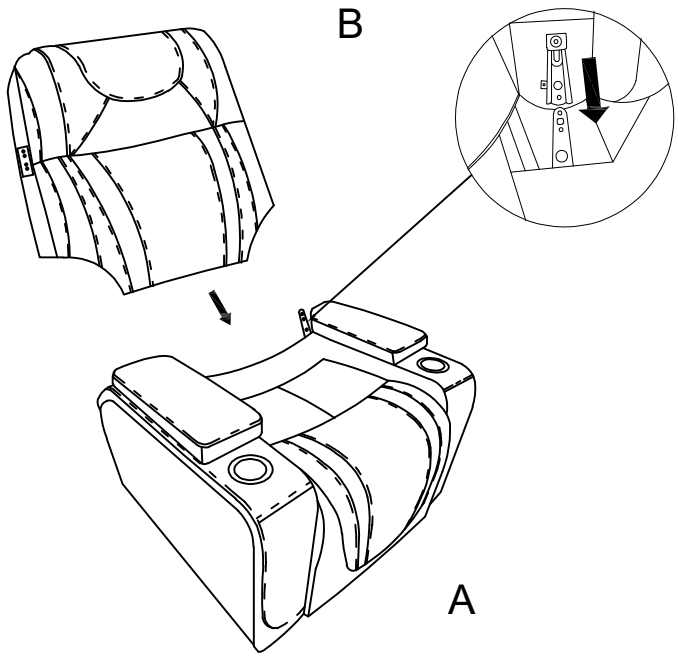

STEP 2: Attach the the wings by inserting metal bracket on the LSF wing (C) and RSF wing (D) into the metal bracket on the Backrest (B).

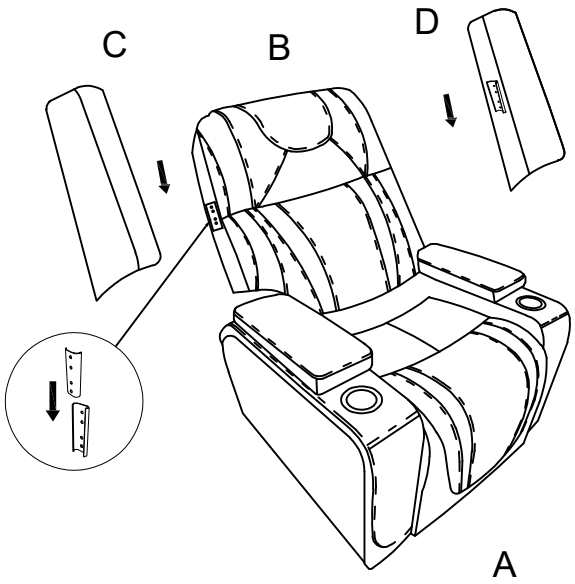

STEP 3: Connect the four power wires from the Backrest (B) to the matching size and color wires on the Seat (A).

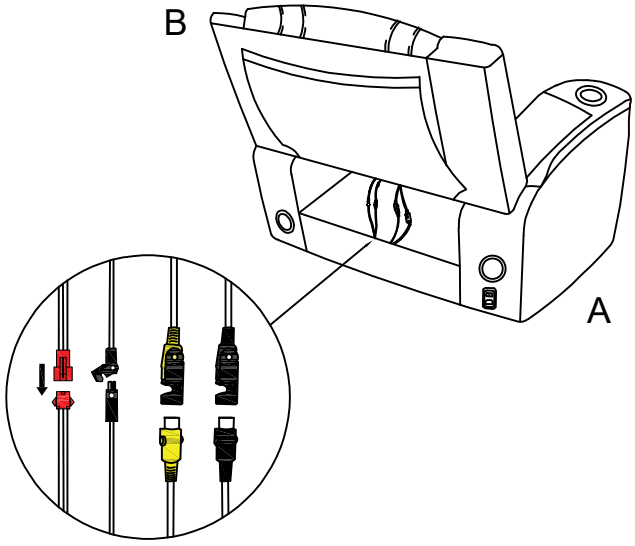


ASSEMBLY INSTRUCTIONS

CARROW COLLECTION


ITEM#: U5862-13P2

DESCRIPTION : CARROW AUTO GLIDE RECLINER W/PWR HR & FR, STEREO, MASSAGE

STEP 4: Locate the Power cable 29V-2A (E) at the bottom of the Seat (A). Connect the Power cable 29V-2A (E) to the power socket on Seat (A). Connect the Transformer 29V-3.0A (F) to the power wire on the seat (A) and then connect the Plug (G) to the Transformer 29V-3.0A (F).

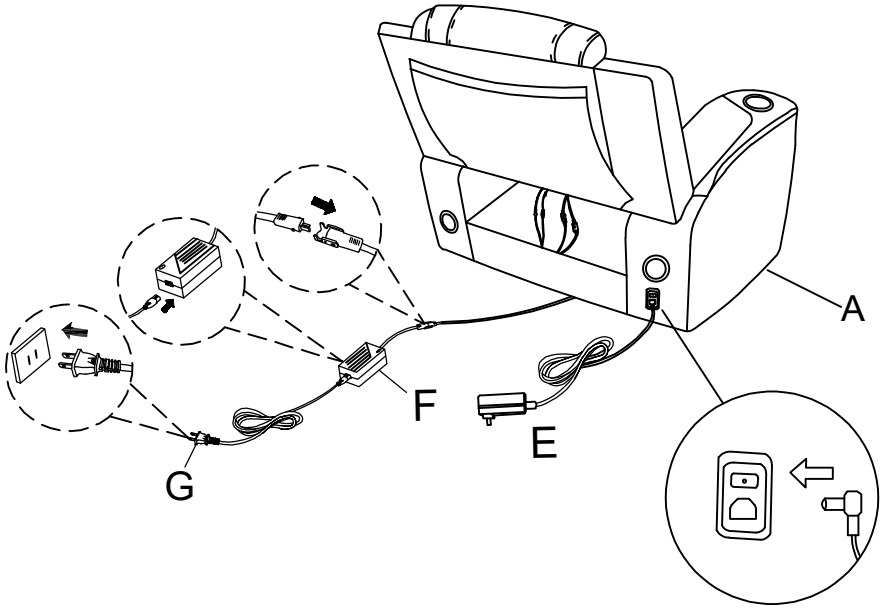

Use the hand control to adjust the headrest and extend the footrest.

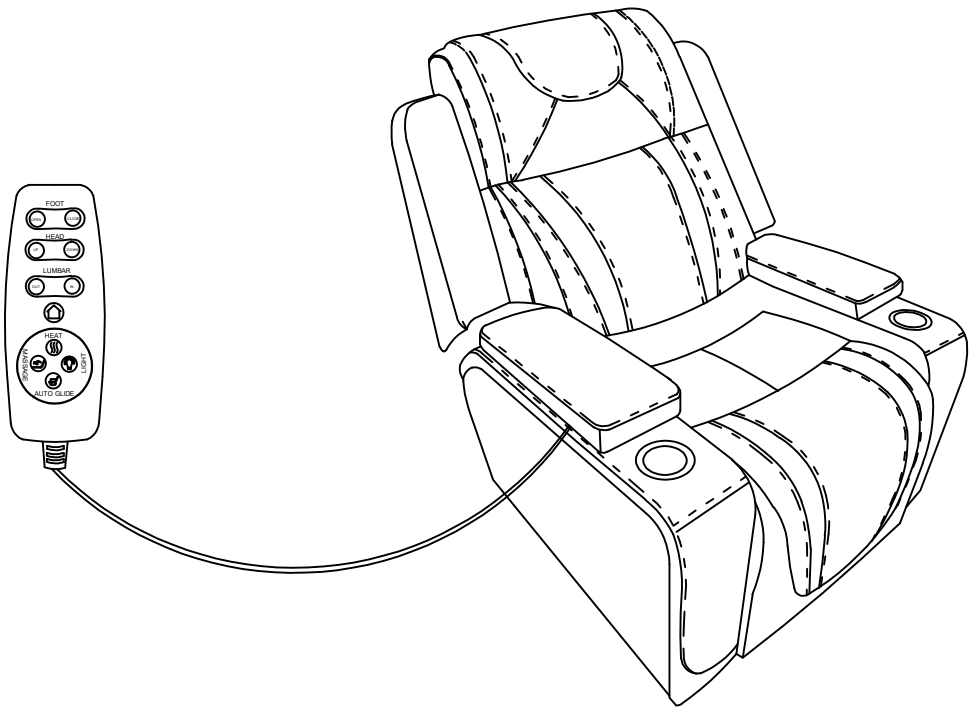

ASSEMBLY INSTRUCTIONS


CARROW COLLECTION

ITEM#: U5862-13P2

DESCRIPTION : CARROW AUTO GLIDE RECLINER W/PWR HR & FR, STEREO, MASSAGE

Hand Control Functions:



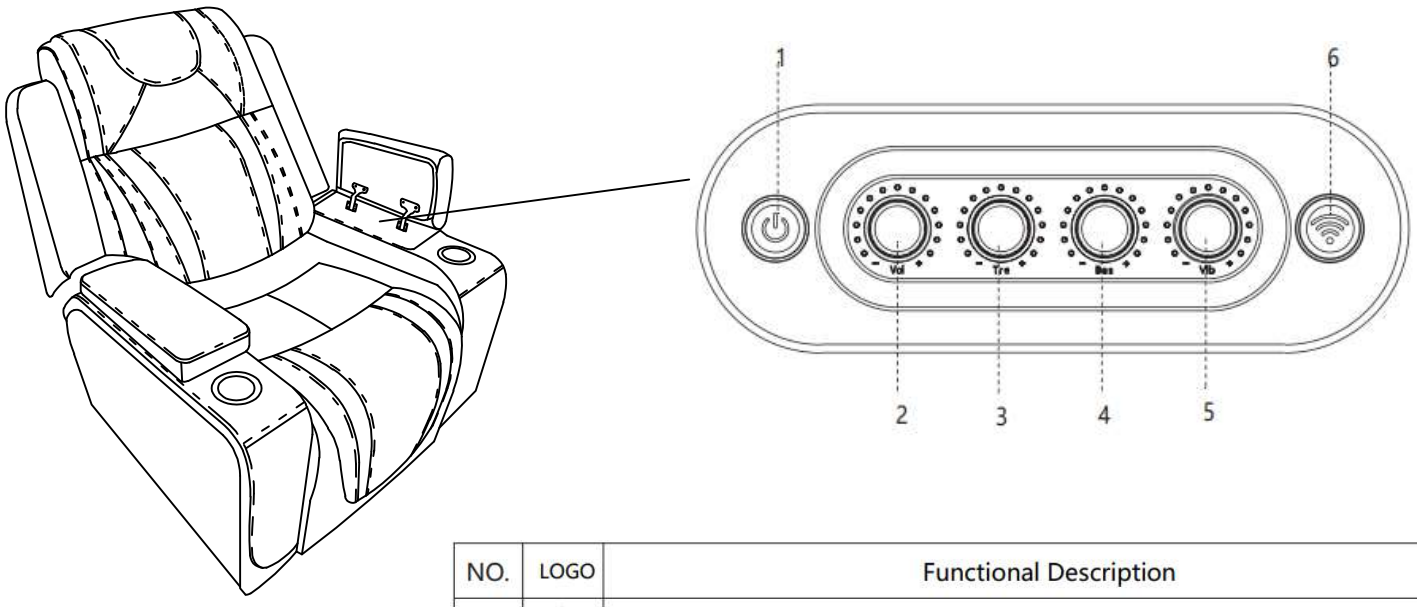

NO.	LOGO	Functional Description
1		After connecting the power, press to turn on. After turning on, press to turn off.
2	- Vol +	volume adjustment (clockwise to increase, counterclockwise to decrease)
3	- Tre +	Treble adjustment (clockwise to increase, counterclockwise to decrease)
4	- Bas +	Bass adjustment (clockwise to increase, counterclockwise to decrease)
5	- Vib +	adjust the intensity(clockwise to increase, counterclockwise to decrease)
6		Networking button (click to turn on/off broadcast mode, long press for 3 seconds in host mode to forcibly disconnect from device Bluetooth connection)