
BEST CHOICE
PRODUCTS

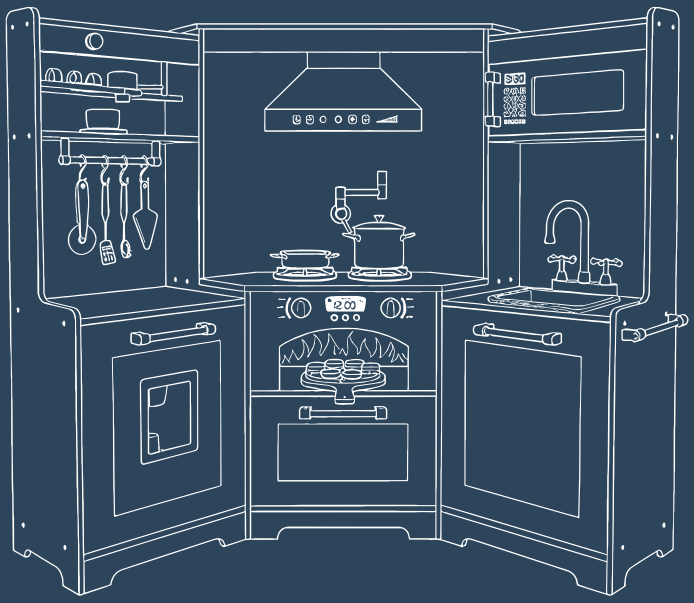

INSTRUCTION MANUAL

Pretend Play Corner Kitchen

Ver. 2

SKY6910 + SKY12499 + SKY12534 + SKY12535

⚠ WARNING

ADULT ASSEMBLY REQUIRED

⚠ WARNING

CHOKING HAZARD - Small parts.
Not for children under 3 years old.

ⓘ NOTICE | *Please retain these instructions for future reference.*

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- This product is intended for residential use only.

⚠WARNING

- This product requires adult assembly and supervision when in use.
- This product contains small parts. May result in choking hazard for children under 3 years.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals and substance.
- Be aware that some parts are heavy or have sharp edges.
- Do not use this item in a way inconsistent with manufacturer's instructions as this could void the product warranty.

WARNINGS REGARDING BATTERIES

The following safety hazards may result in serious injury or death:

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged/
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device etc.)
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



PHILLIPS
SCREWDRIVER



4 AA BATTERIES
(FOR BURNERS)



2 AAA BATTERIES
(FOR HOOD BOX)



3 YEARS
OLD & UP



2 PERSON
ASSEMBLY



UP TO 120 MIN.
ASSEMBLY

HARDWARE

A SCREW I



50 PCS

B SCREW II



3 PCS

C SCREW III



27 PCS

D SCREW IV



4 PCS

E SCREW V



4 PCS

F SCREW VI



24 PCS

G SCREW VII



4 PCS

H SHELF SUPPORT



4 PCS

I DOWEL




16 PCS

J DOOR CATCH



4 PCS


K DOOR INSERT



4 PCS


PARTS

1 BASE PANEL I

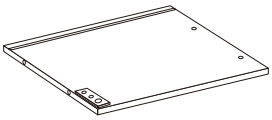


1 PC

2 FRONT LEGS I

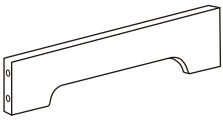


2 PCS

3 SIDE PANEL I



1 PC

4 COUNTERTOP




1 PC

5 LONG DIVIDER I




1 PC

6 BACK PANEL I

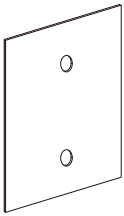


2 PCS

7 BASE PANEL II

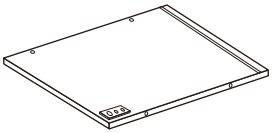


1 PC

8 LONG DIVIDER II




1 PC

9 SINK COUNTER




1 PC

10 SIDE PANEL II




1 PC

11 BASE PANEL III




1 PC

12 FRONT LEGS II




1 PC

13 FLAME PANEL




1 PC

14 BACK PANEL II

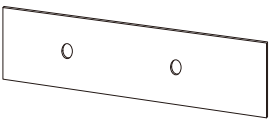


1 PC

15 OVEN

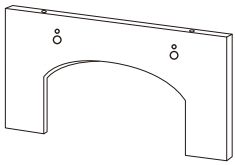


1 PC

16 ESPRESSO MACHINE BOTTOM




1 PC

17 TRAY




1 PC

18 ESPRESSO MACHINE TOP




1 PC

19 ESPRESSO MACHINE FRONT




1 PC

20 LOWER SHELF




1 PC

21 BACK PANEL

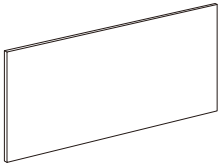


2 PCS

22 MICROWAVE BOTTOM




1 PC

23 MICROWAVE TOP




1 PC

24 STOVETOP




1 PC

25 CENTER BACKSPLASH

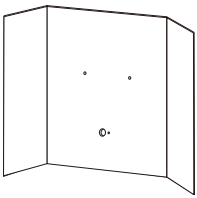


1 PC

26 RANGE HOOD BOTTOM




1 PC

27 RANGE HOOD BODY

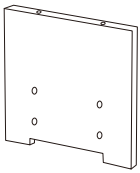


1 PC

28 RANGE HOOD CANOPY

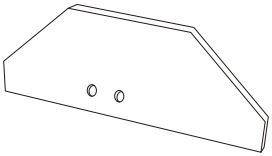


1 PC

29 CENTER TOP PANEL




1 PC

30 REFRIGERATOR DOOR




1 PC

31 CABINET DOOR

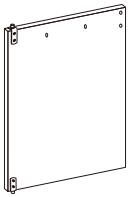


1 PC

32 MICROWAVE DOOR

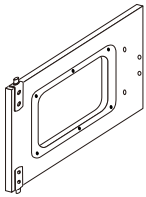


1 PC

33 STORAGE DOOR

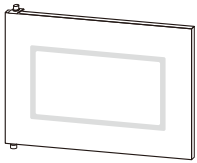

1 PC

34 BASE SUPPORT

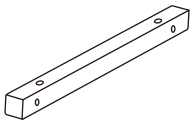

2 PCS

35 COUNTERTOP BACK




1 PC

36 CENTER TOP MOLDING



1 PC

37 MICROWAVE UPPER PANEL



1 PC

38 BACK SUPPORT




1 PC

39 SPOUT




1 PC

40 ICE DISPENSER

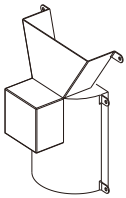


1 PC

41 ROD HOLDER



12 PCS

42 CONTROL KNOB



2 PCS

43 KNOB WASHER




2 PCS

44 HOLDER




3 PCS

45 RANGE HOOD CONTROL BOX




2 PCS

46 FAUCET

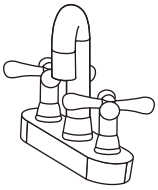

1 PC

47 POT FILLER FAUCET

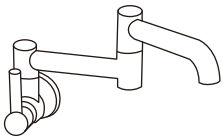

1 PC

48 LONG ROD



2 PCS

49 HANDLE I



3 PCS

50 HANDLE II




1 PC

51 BURNER



2 PCS

52 SINK

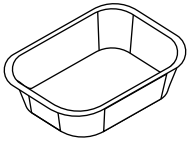


1 PC

53 CUP & SAUCER




1 SET

54 PORTAFILTER




1 PC

55 KITCHEN UTENSIL

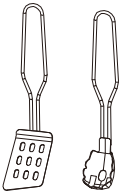


1 SET

56 SAUCEPAN



1 PC

57 DUTCH OVEN

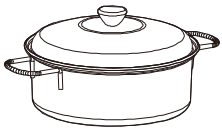

1 PC

59 CAPSULES




1 SET


PRODUCT ASSEMBLY


1

Attach one **part K door insert** to the **part 30 refrigerator door** using two **part F screws.**

Attach two **part 41 rod holders** to one **part 49 handle,** then secure the handle assembly to **part 30 refrigerator door** using two **part C screws.**

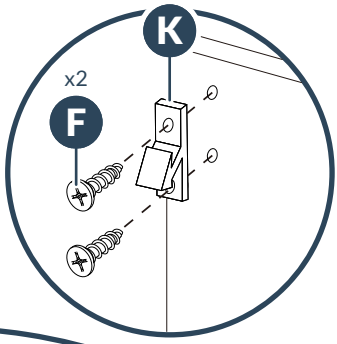


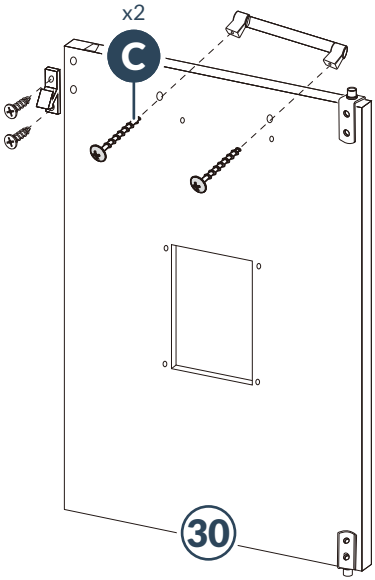


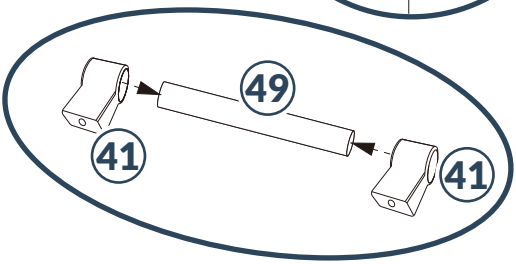


2

Attach the **part 40 ice dispenser** to **part 30 refrigerator door** using six **part F screws.**

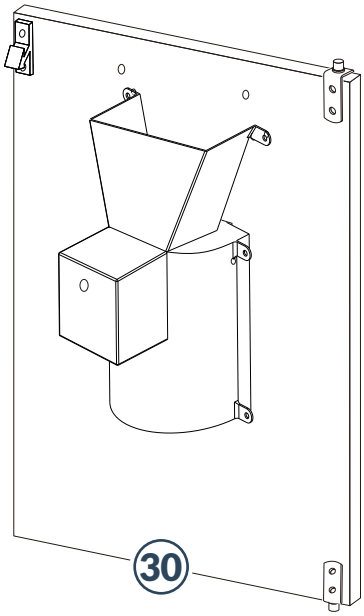


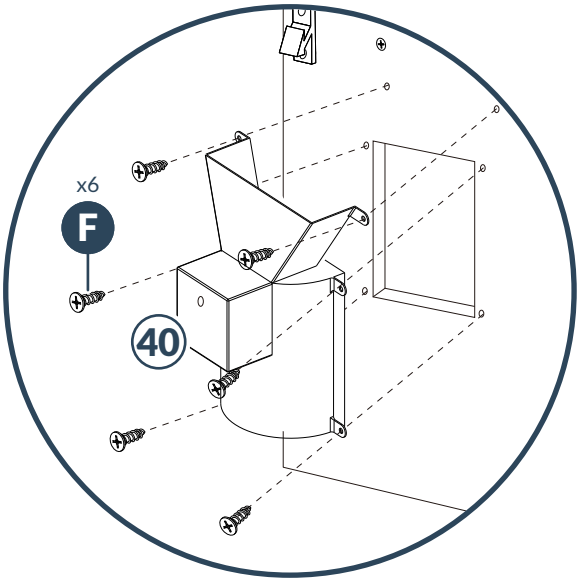

3 Attach one **part K door insert** to the **part 31 cabinet door** using two **part F screws.**
Attach two **part 41 rod holders** to one **part 49 handle,** then secure the handle assembly to **part 31 cabinet door** using two **part C screws.**

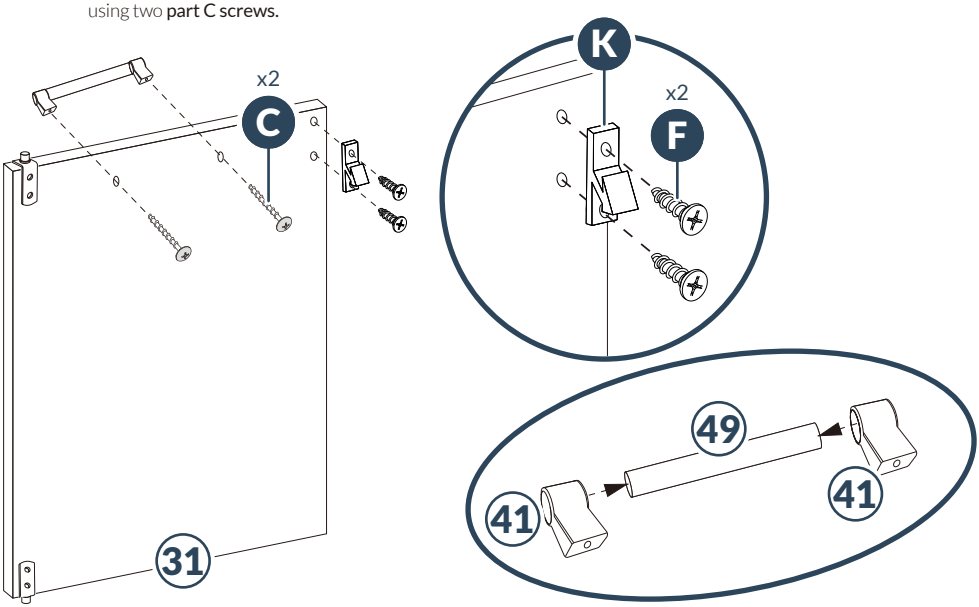


4 Attach one **part K door insert** to the **part 32 microwave door** using two **part F screws.**
Attach two **part 41 rod holders** to one **part 50 handle,** then secure the handle assembly to **part 32 microwave door** using two **part C screws.**

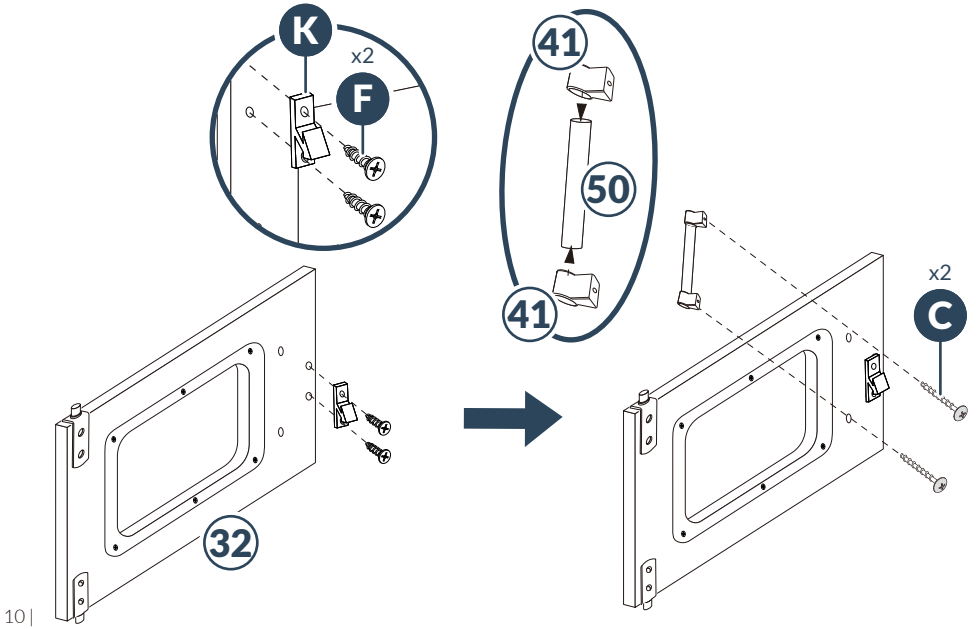

5

Attach one **part K door insert** to the **part 33 storage door** using two **part F screws.**


Attach two **part 41 rod holders** to one **part 49 handle,** then secure the handle assembly to **part 33 storage door** using two **part C screws.**

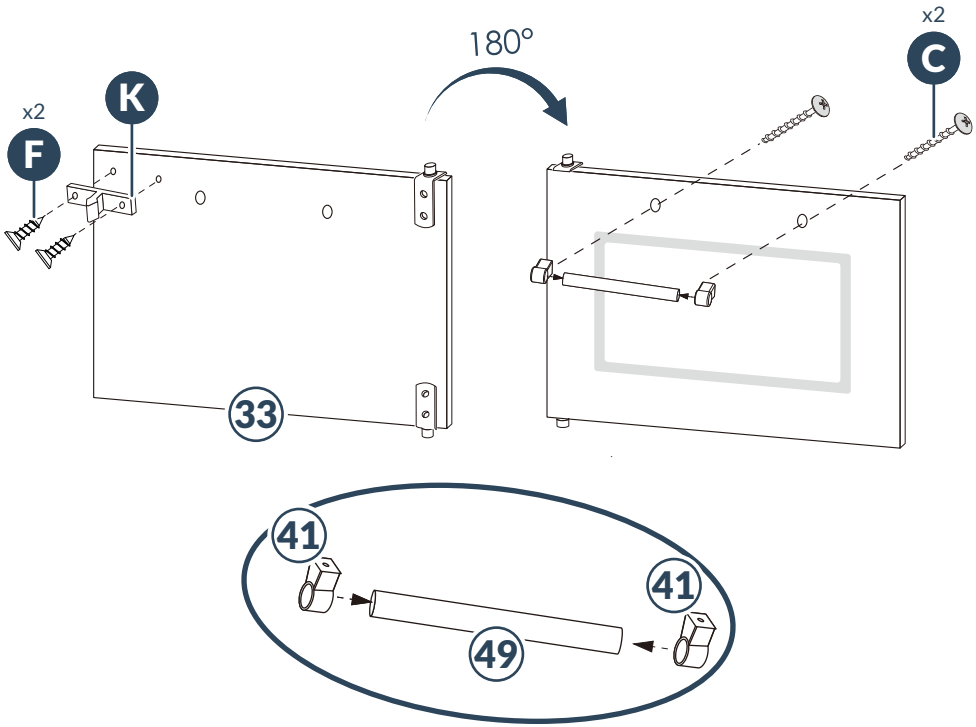


6

Attach one **part J door catch** to **part 35 center divider** using two **part F screws.**


Attach two **part 41 rod holders** to one **part 48 long rod,** then secure the rod assembly to **part 16 espresso machine bottom** using two **part D screws.**

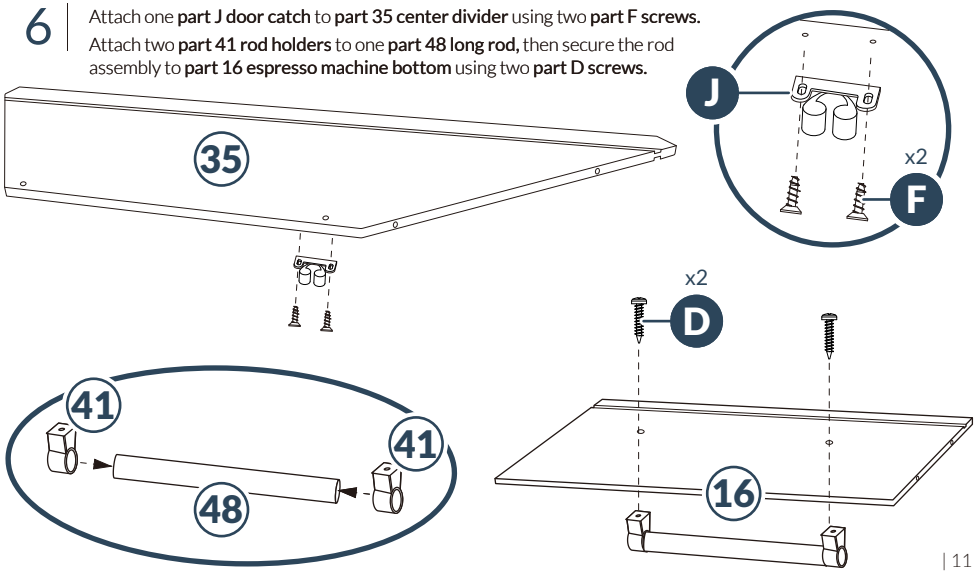


7 Attach one **part J door catch** to **part 5 long divider** using two **part F screws.**
Attach two **part J door catches** to **part 8 long divider** using four **part F screws,** two screws per door catch.
Attach two **part H shelf supports** to **part 8 long divider** using two **part G screws,** one screw per shelf support.
Attach a **part 34 base support** to each long divider using four **part C screws,** two screws per base support.

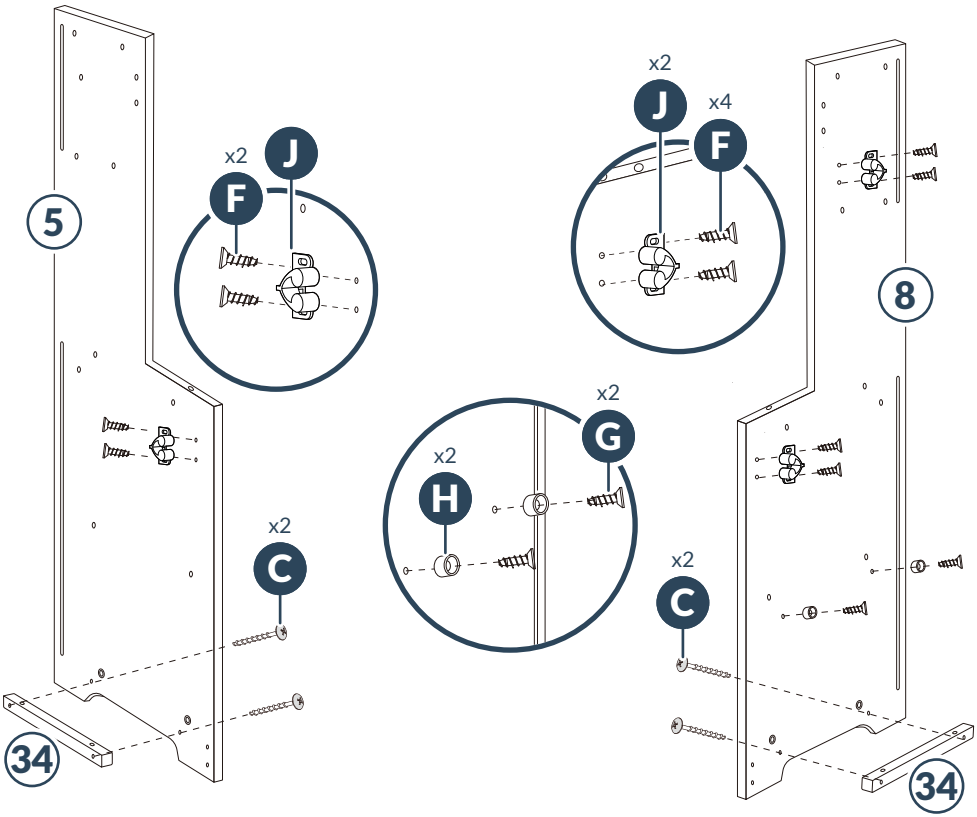


8 Attach two **part 41 rod holders** to one **part 48 long rod,** then secure the rod assembly to **part 10 side panel** using two **part C screws.**
Attach two **part H shelf supports** to **part 10 side panel** using two **part G screws,** one screw per shelf support.

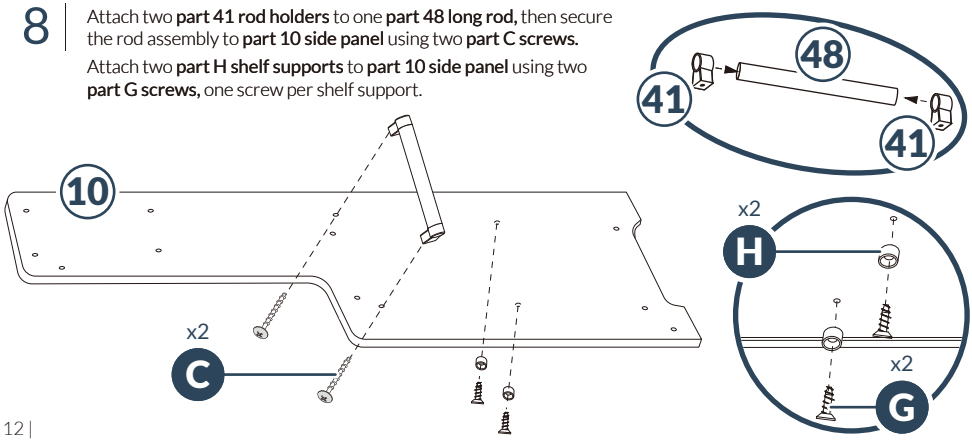


9 Attach the **part 1 base panel** to **part 3 side panel** using two **part A screws.**

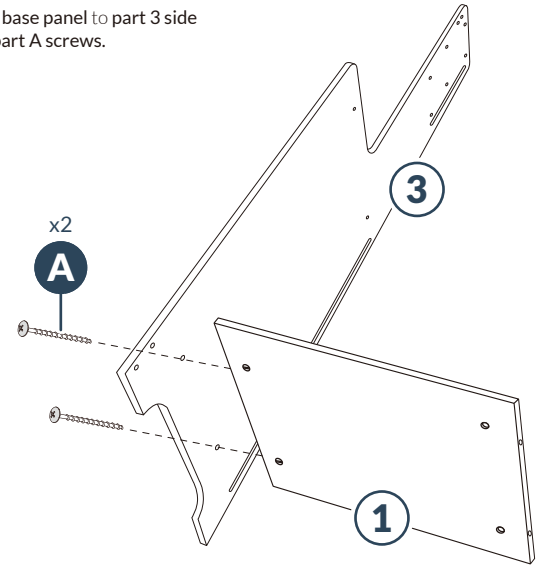

10 Insert two **part I dowels** into one **part 2 front legs,** then attach the front legs to **part 5 long divider** using one **part A screw.**

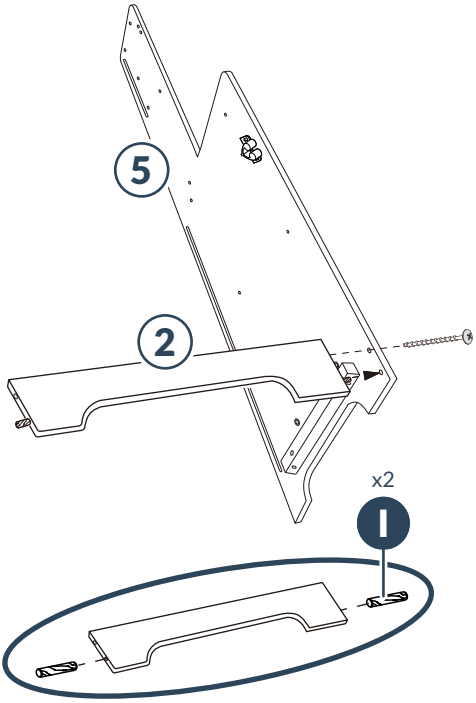


11 Insert two **part I dowels** into one **part 2 front legs,** then attach the front legs to **part 8 long divider** using one **part A screw.**

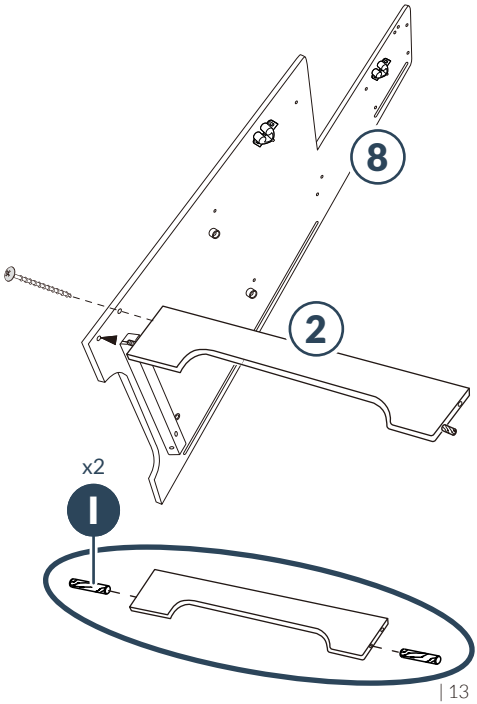


12

Attach **part 5 long divider** to **part 11 base panel** using two **part A screws.**

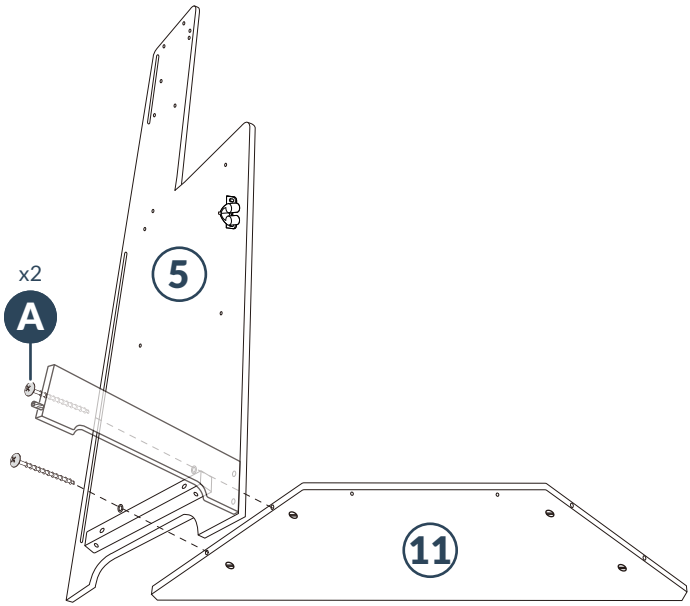


13

Attach **part8 long divider** to **part 11 base panel** using two **part A screws.**

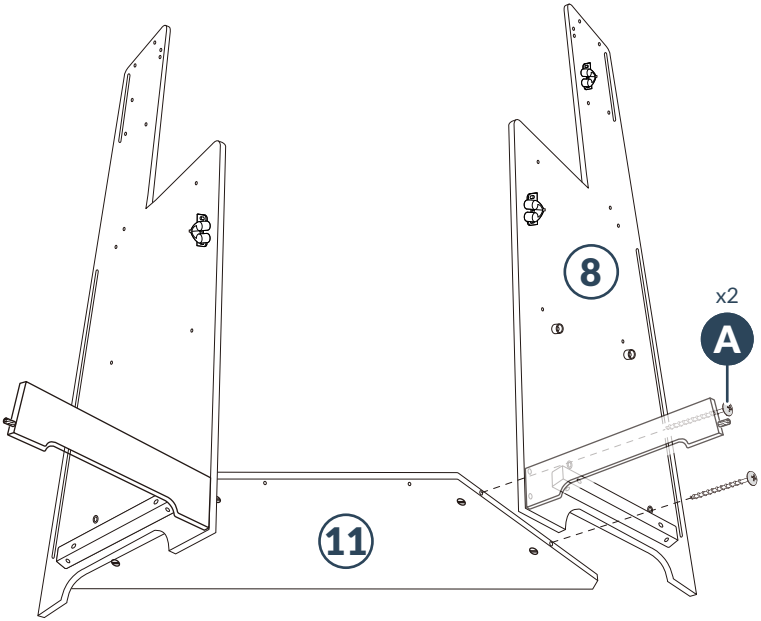


14

Attach **part 1 base** to the left side of **part 34 base support** using two **part C screws.**
Secure **part 3 side panel** to **part 2 front legs** using one **part A screw,**
Attach **part 12 front legs** to **part 11 base** using two **part C screws.**

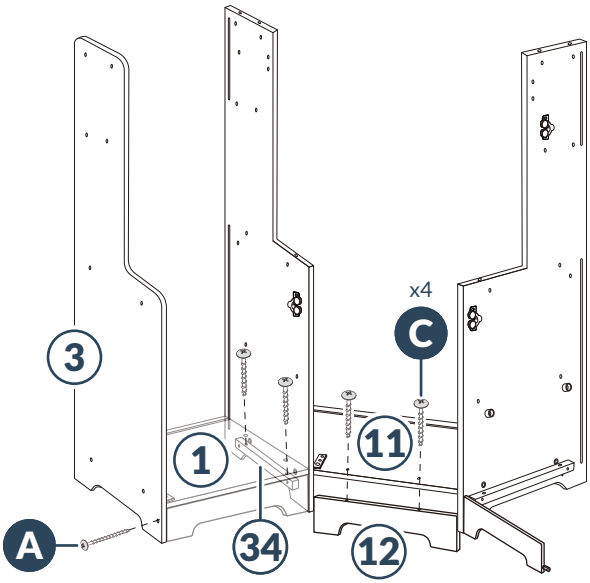


15

Attach **part 7 base** to the right side of **part 34 base support** using two **part C screws.**

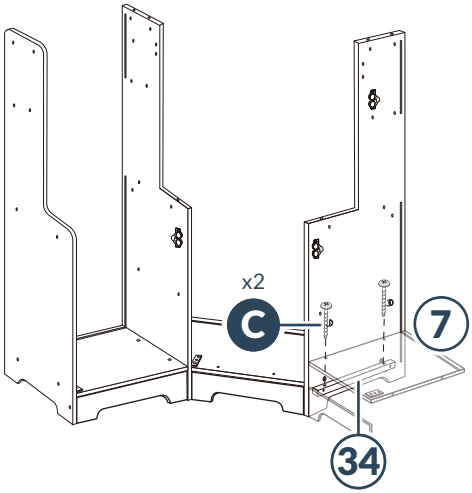


16

Slide the **part 6 & 14 back panels** into the assembly as shown.

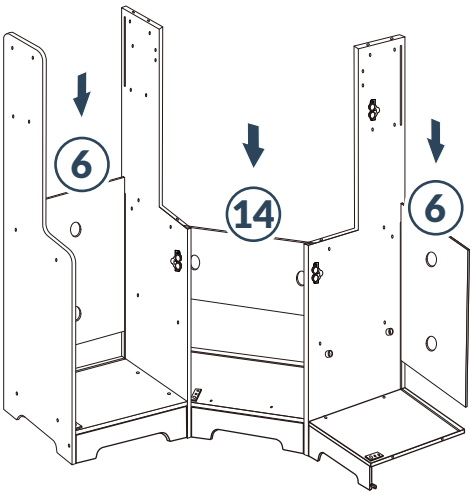


17

Attach **part 4 countertop** to the left section using four **part A screws.**
Insert the top peg on **part 30 refrigerator door** into the receiver underneath **part 4 countertop.**
Then insert the bottom peg into the receiver on top of **part 1 base panel.**

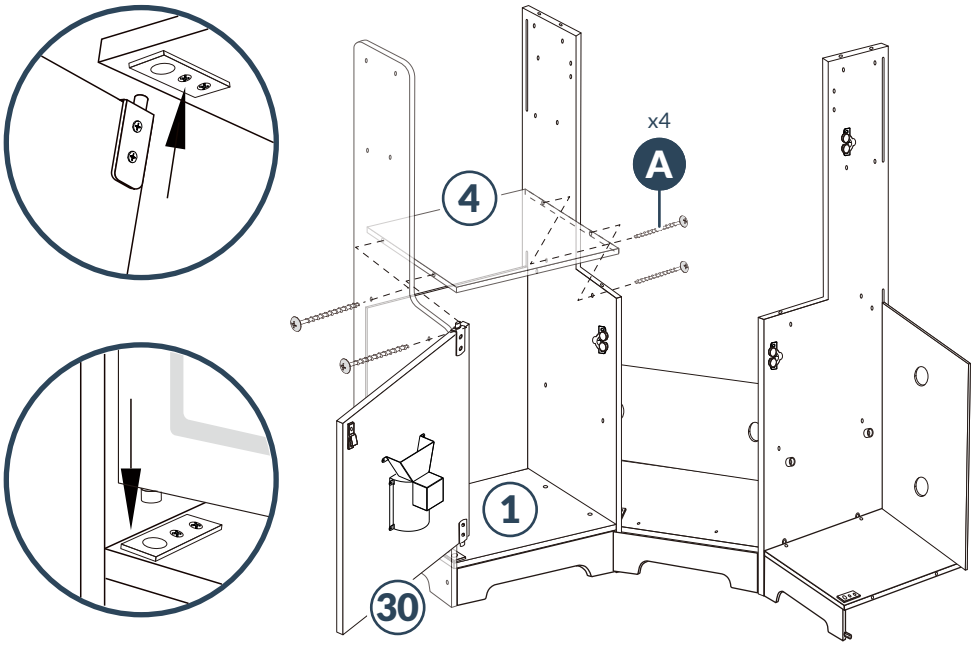


18


Insert four **part I dowels** into **part 19 espresso machine front panel,** then insert three **part I dowels** into **part 17 tray.**
Install **part 17 tray** and **part 19 epresso machine front panel** to the left section as shown.

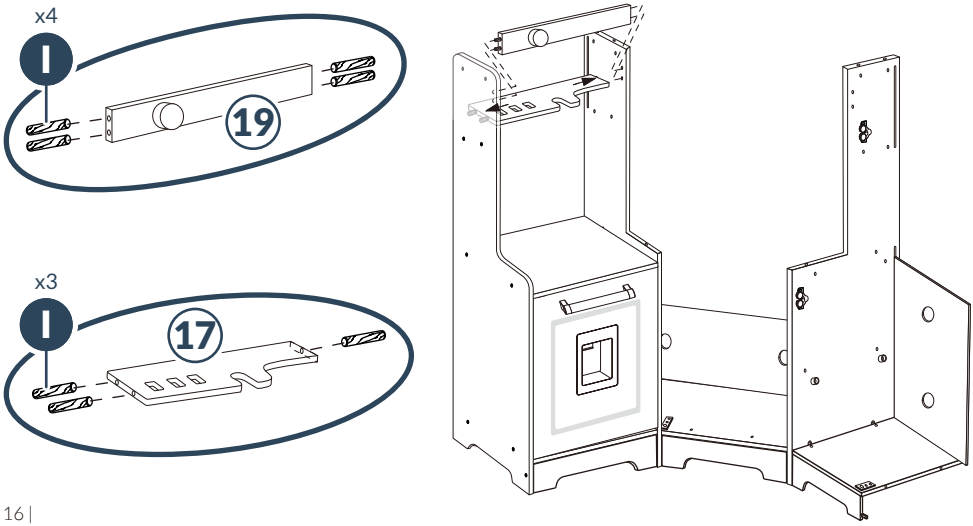

19 Attach **part 16 espresso machine bottom** using four **part A screws.**

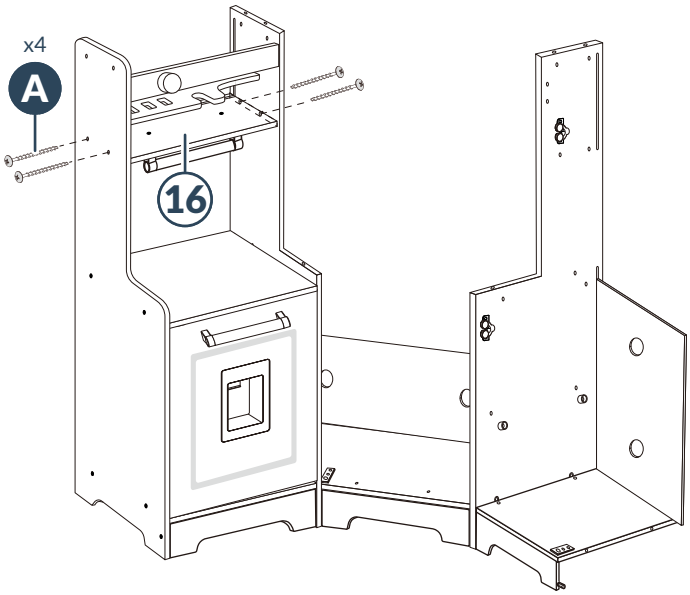


20 Slide the **part 21 back panel** into the assembly as shown.
Assemble **part 39 spout** to **part 18 epresso machine top** using one **part C screw.**
Then attach and secure **part 18 espresso machine top** using four **part A screws.**

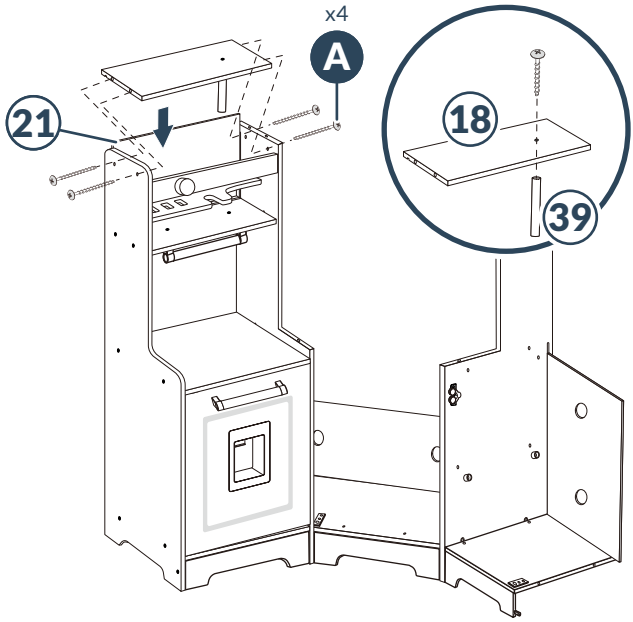

21

Insert two **part I dowels** into **part 15 oven,** then attach two **part 42 control knobs** to the oven with two **part 43 knob washers** and two **part 44 holders.**

Attach the **part 15 oven** to **part 35 center divider** using two **part A screws.**

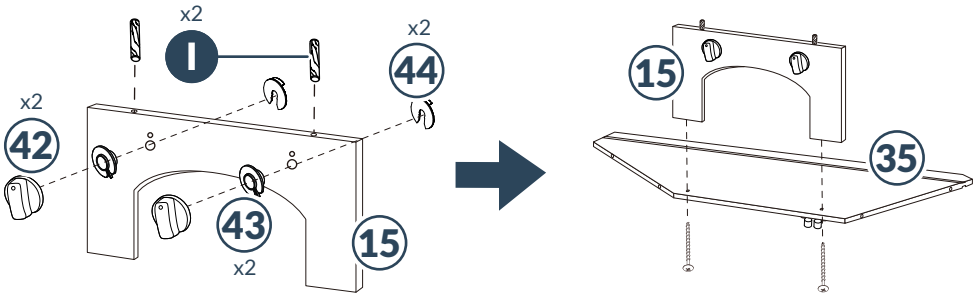


22

Attach **part 35 center divider** to the middle section using four **part A screws.**


Insert the top peg on **part 33 storage door** into the receiver underneath **part 35 center divider.**

Then insert the bottom peg into the receiver on top of **part 11 base panel.**

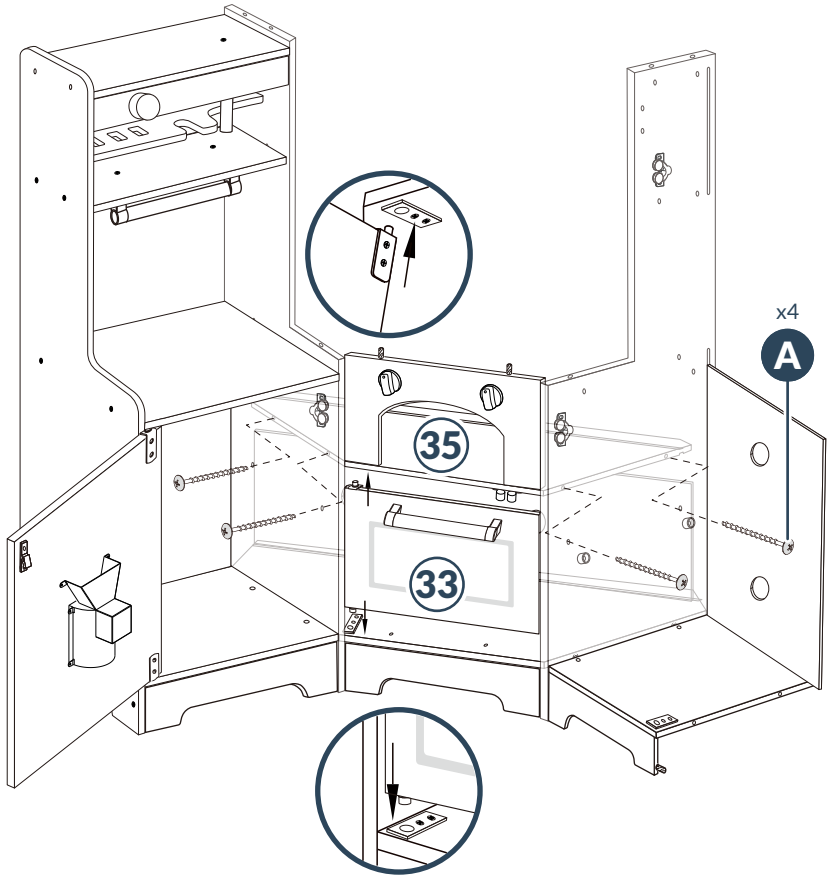


23

Attach the **part 46 faucet** to **part 9 sink counter** using two **part C screws.**

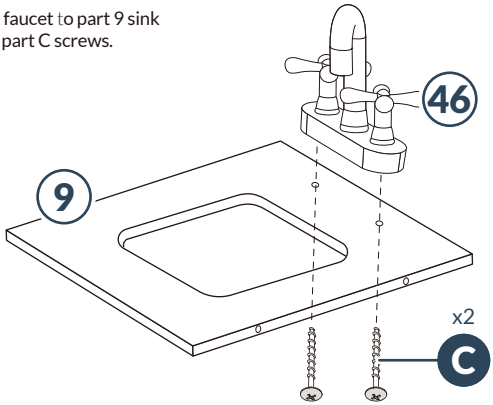


24


Attach **part 9 sink counter** to the right section using two **part A screws.**
Insert the top peg on **part 31 cabinet door** into the receiver underneath **part 9 sink counter.**
Then insert the bottom peg into the receiver on top of **part 7 base panel.**

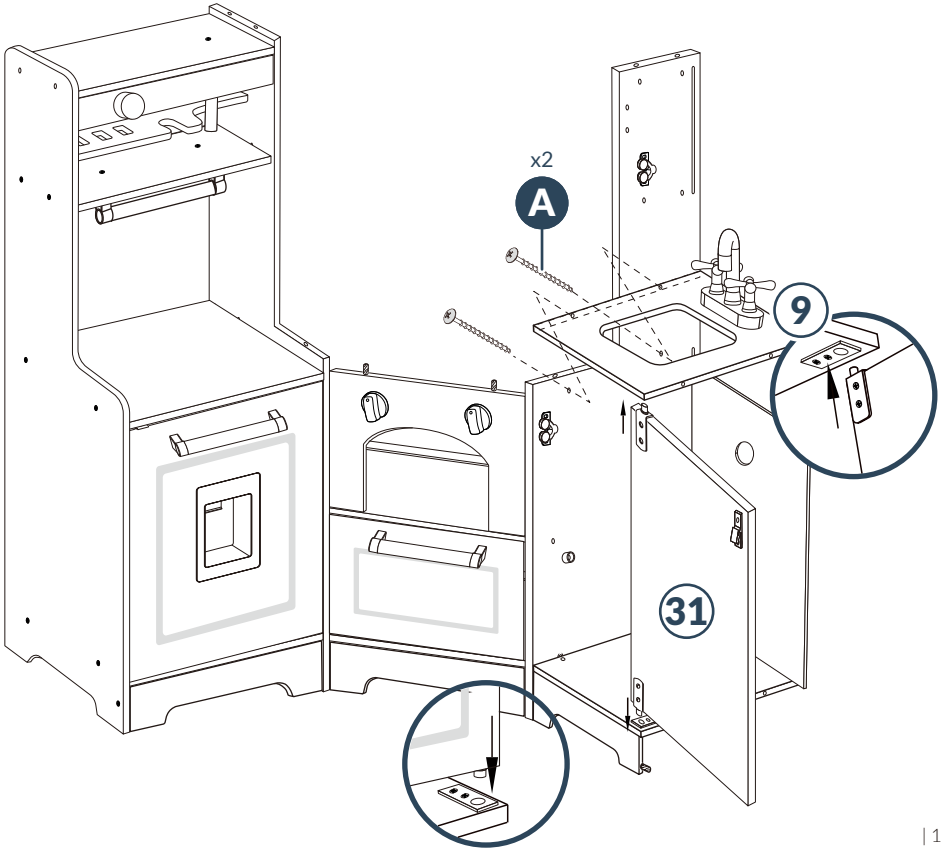

25 Slide **part 13 flame panel** into the middle section, then attach **part 10 side panel** to the right section using five **part A screws.**

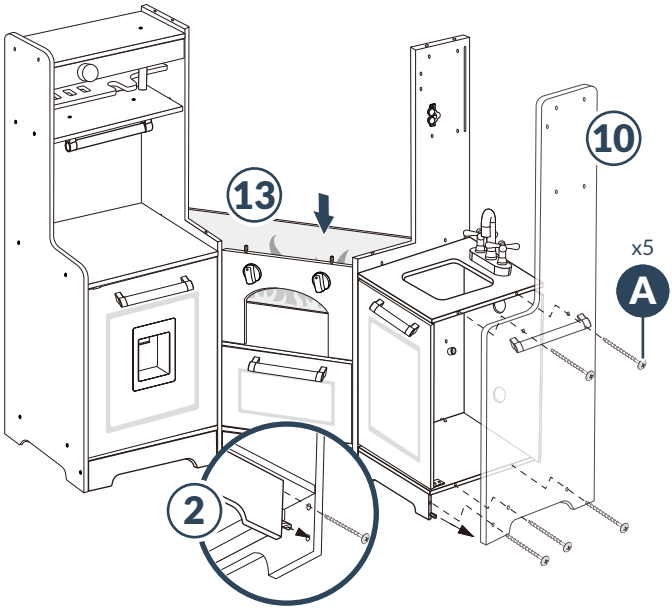


26 Assemble the **part 38 back support** to the **part 24 stovetop** using one **part B screw.**
Attach **part 24 stovetop** to the middle section using two **part A screws** and two **part B screws.**

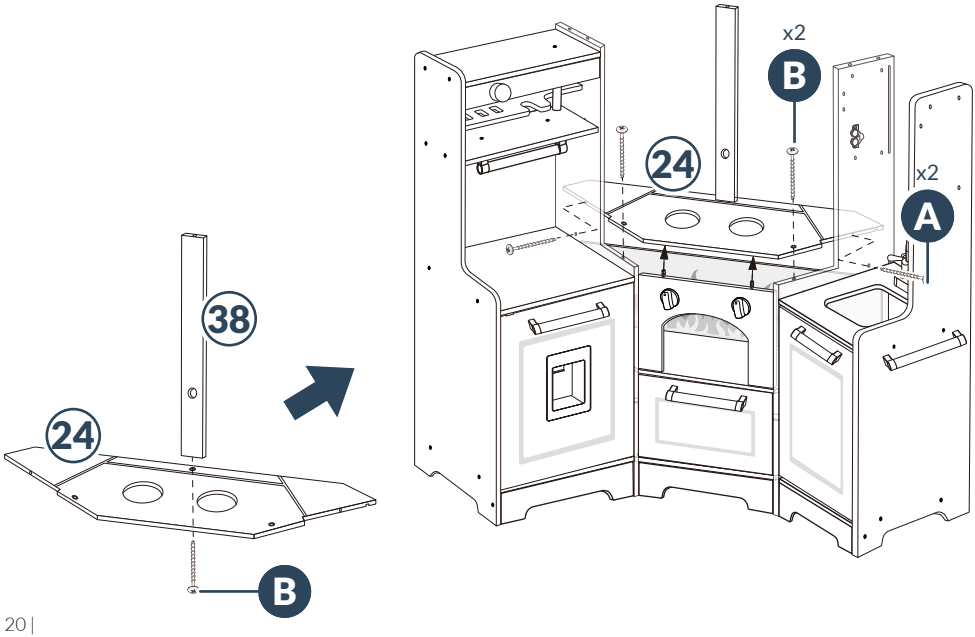


27

Attach the **part 22 microwave bottom** to the right section using four **part A screws.**

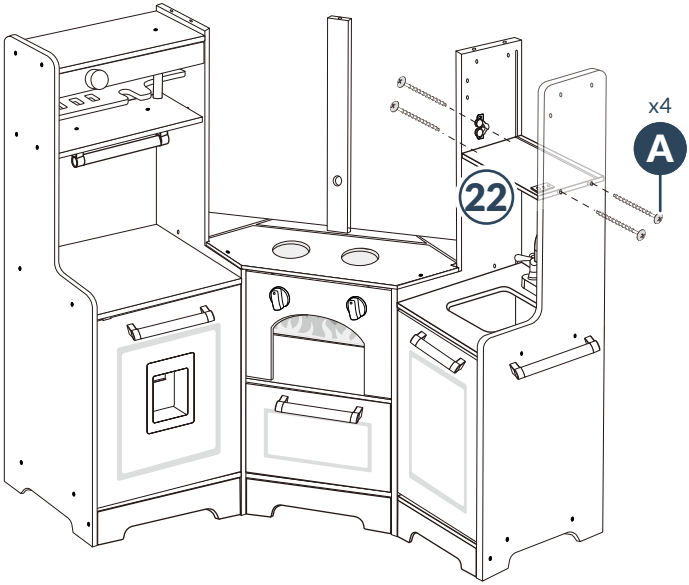


28

Slide the **part 21 back panel** into the assembly as shown.
Insert the bottom peg on **part 32 microwave door** into the receiver on top of **part 22 microwave bottom.**

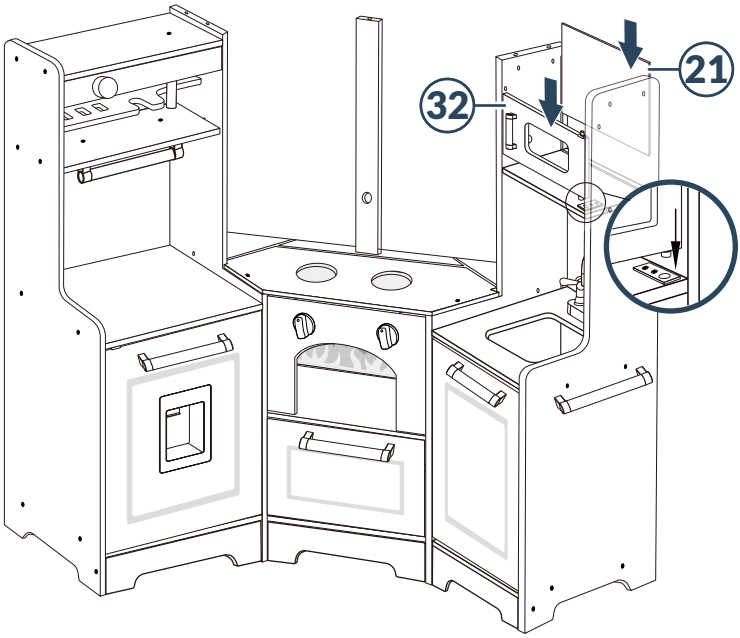


29 Attach the **part 37 microwave upper panel** using two **part I dowels** and one **part A screw.**
Insert the top peg on **part 32 microwave door** into the receiver underneath**part 37 microwave upper panel.**

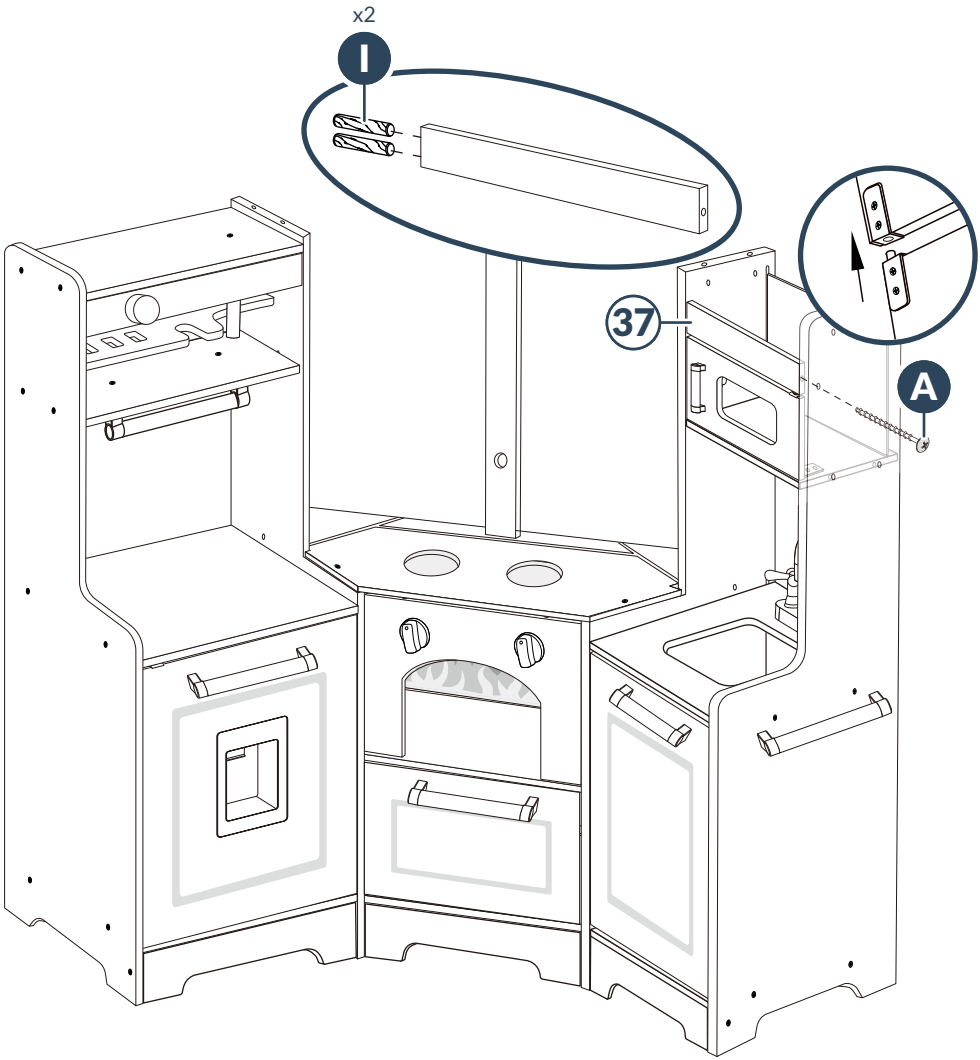


30

Attach the **part 23 microwave top panel** using four **part A screws.**

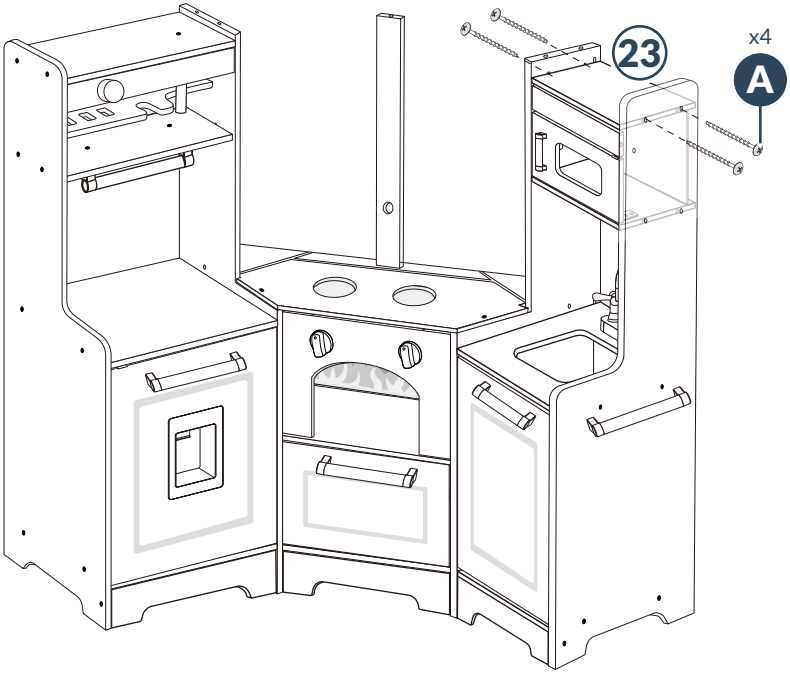

31


Slide the **part 25 center backsplash** into the assembly as shown.

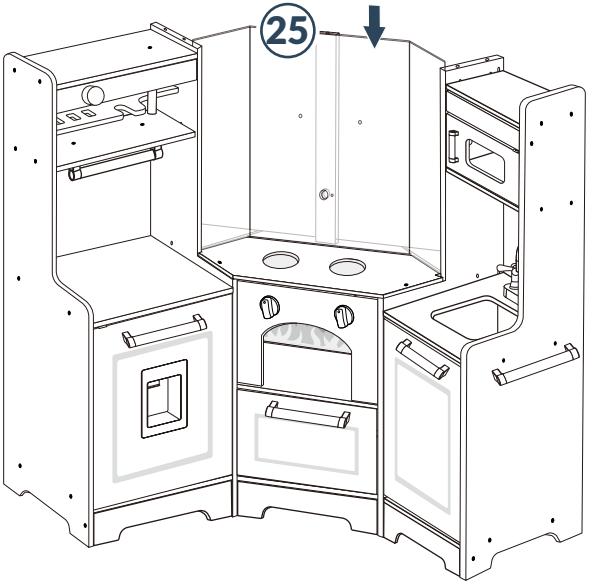



32 Install two AAA batteries *(not included)* into the **part 45 range hood control box,** then attach it to the **part 26 range hood bottom** using two **part F screws.**


Attach the **part 27 range hood body** to **part 28 range hood canopy** using four **part E screws.**


Insert the **part 26 range hood bottom** into **part 28 range hood canopy** using two **part C screws.**

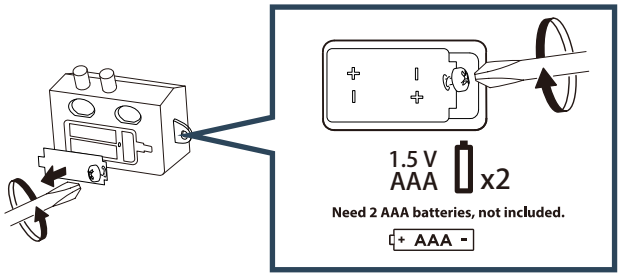

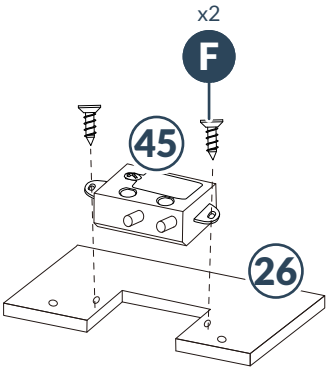

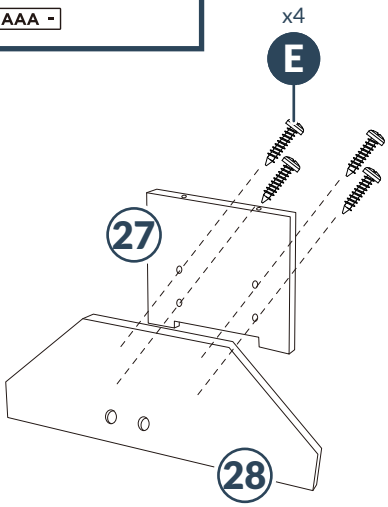


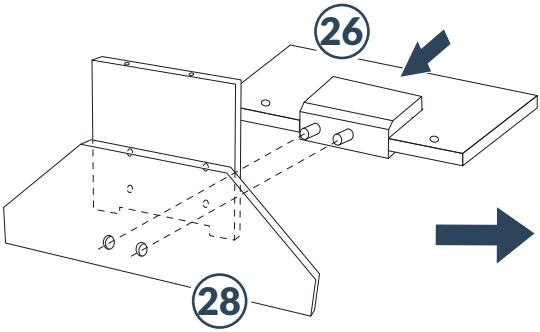

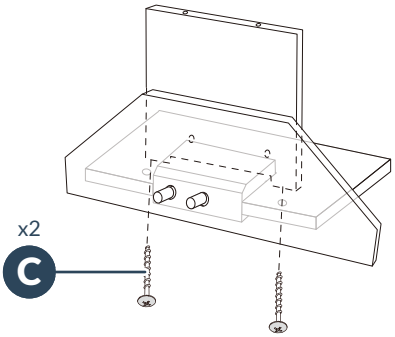


33

Secure the **part 26 range hood bottom** to **part 25 center backsplash** using two **part D screws.**

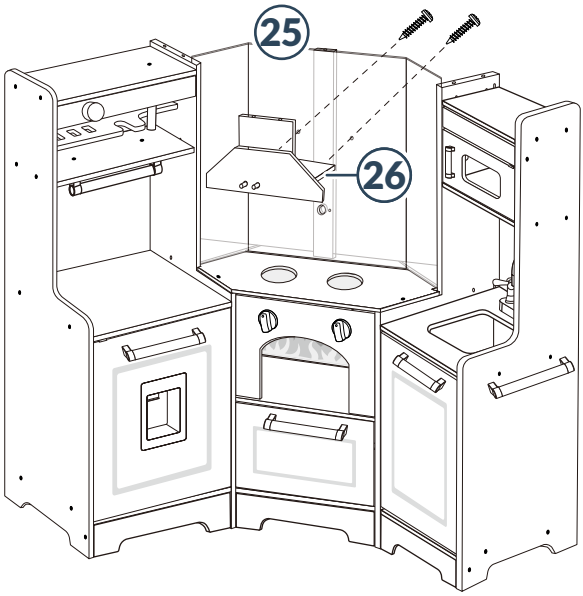


34

Attach the **part 29 center top panel** using five **part A screws** and two **part C screws.**

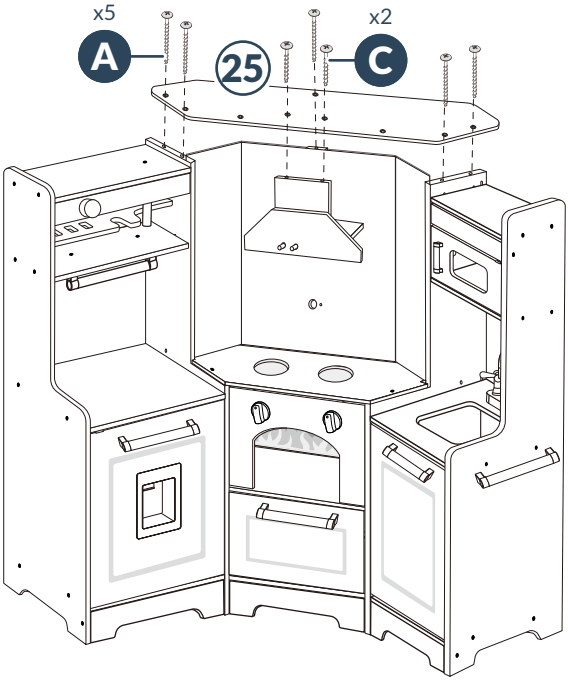

35 Insert one **part I dowels** into **part 36 center top molding,** then attach it underneath the center top panel using two **part C screws.**

Slide **part 20 lower shelf** into the lower right cabinet.

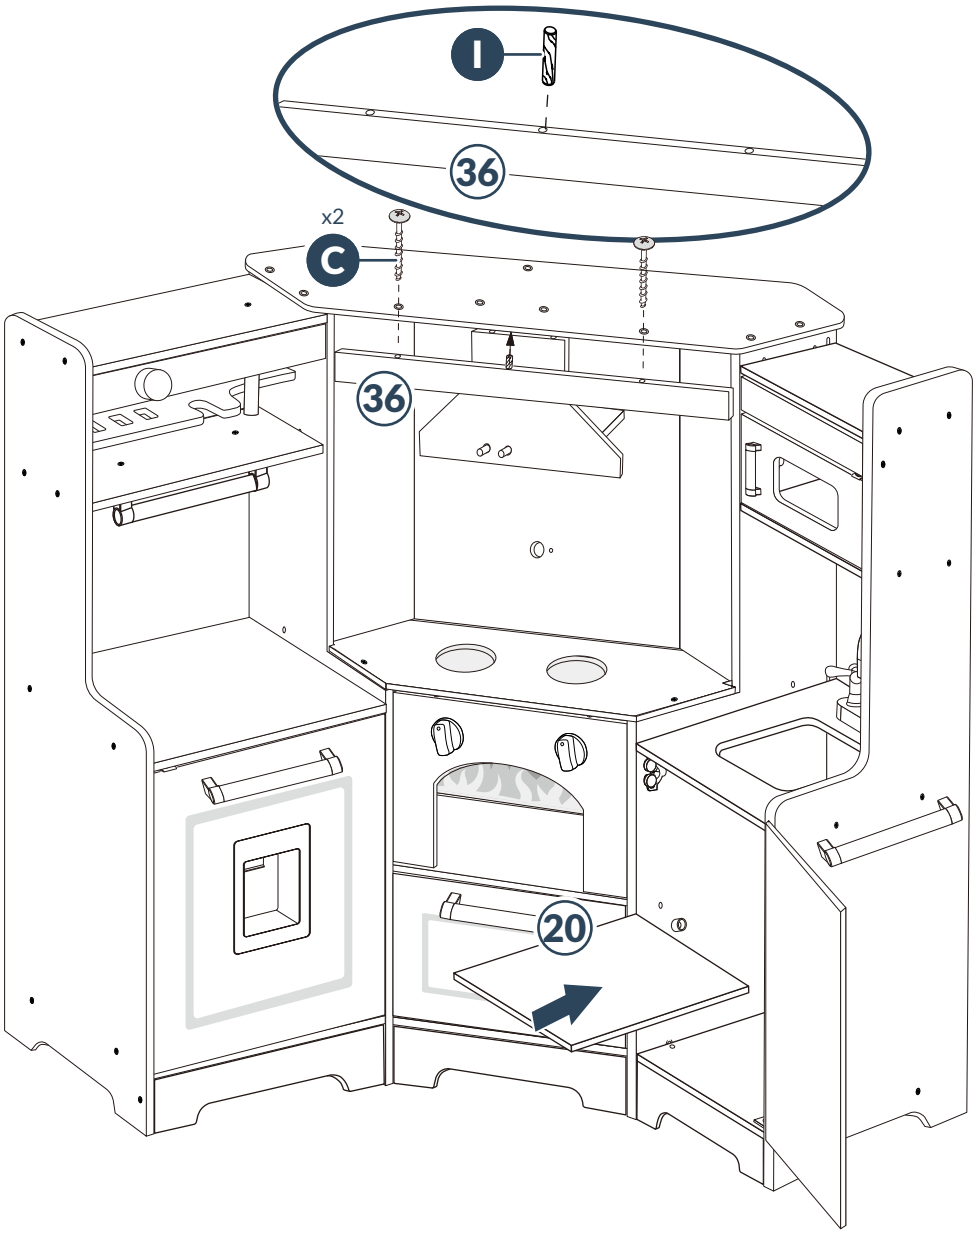


36 Install two AA batteries ***(not included)*** into each **part 51 burner,** then place then into the opening of the stovetop.

Attach the **part 47 pot filler faucet** to the center backsplash with one **part 44 holder.**

Place the **part 52 sink** into the opening of the sink counter.

Arrange the rest of the accessories as desired.

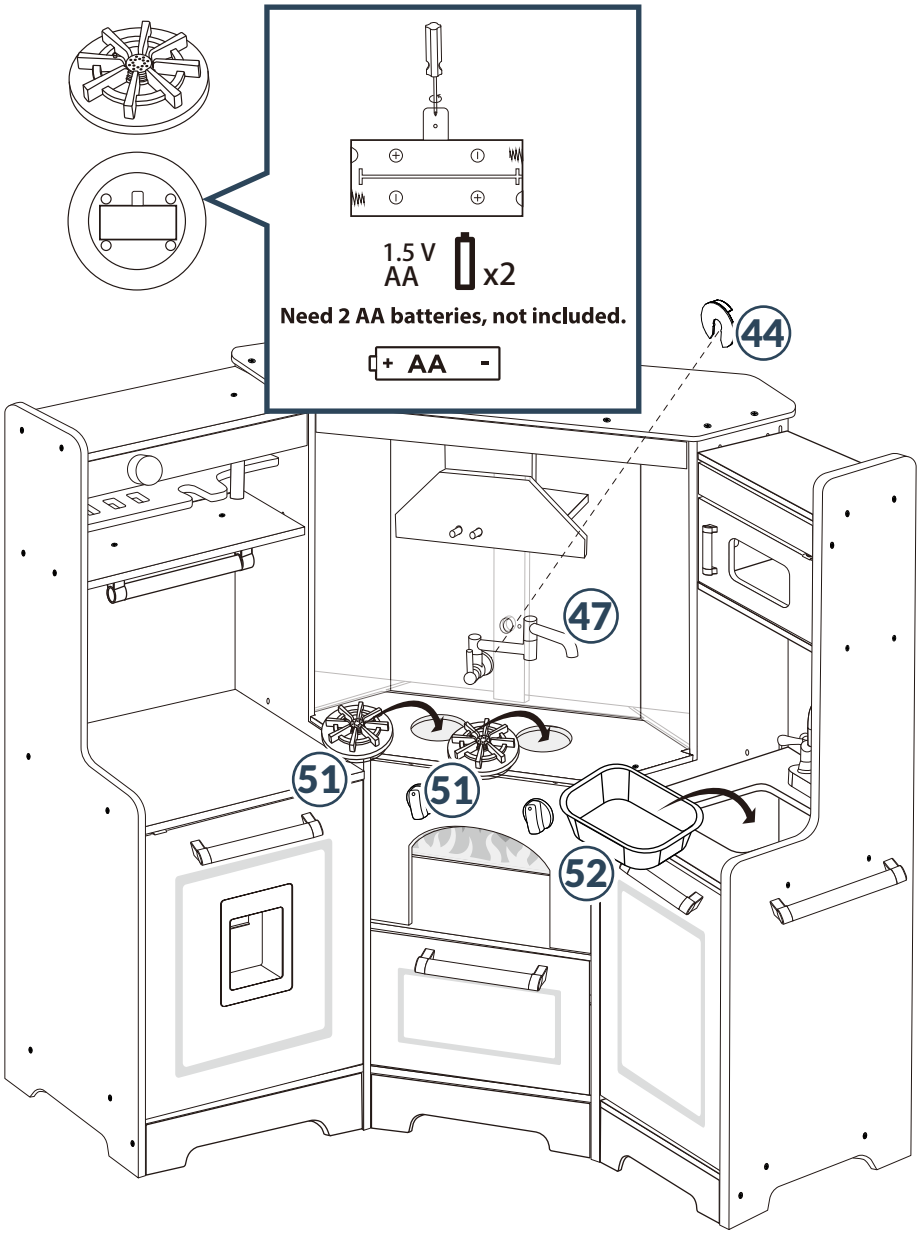

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.