
BEST CHOICE PRODUCTS

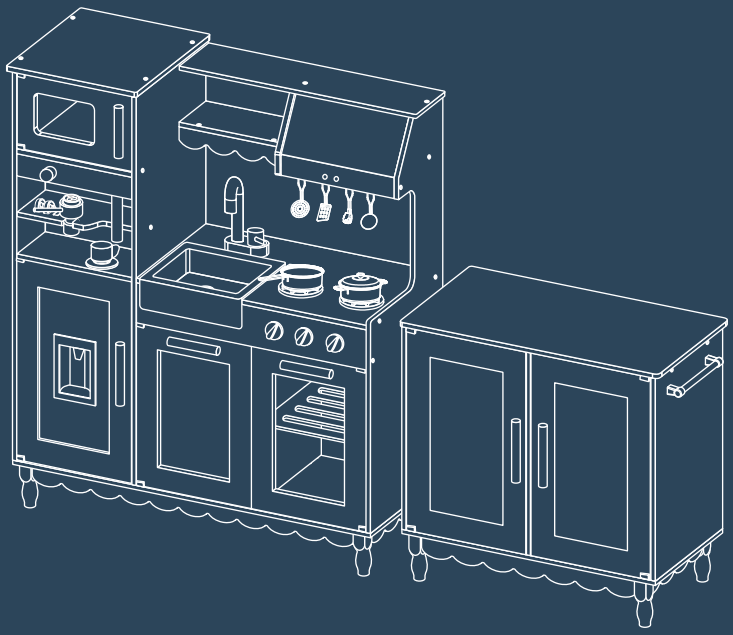

INSTRUCTION MANUAL

Cottage Espresso Kitchen with Island

Ver. 1

SKY11939 + SKY11940

⚠ WARNING

ADULT ASSEMBLY REQUIRED

⚠ WARNING

CHOKING HAZARD - Small parts.
Not for children under 3 years old.

NOTICE | *Please retain these instructions for future reference.*

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- This product is intended for residential use only.

⚠WARNING

- This product contains small parts. May result in choking hazard for children under 3 years.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy or have sharp edges.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Strangulation Hazard – Hooks may catch on clothing or accessories.
- Do not allow children to climb or sit on the play kitchen.
- Secure the product firmly to a wall using the provided anti-tip kit.
- Intended for children ages 3 and up only.
- Keep away from cribs, cords, or other furniture that could entangle the child.
- Hooks are for toy use only. Do not hang real kitchen utensils or heavy items.


TOOLS REQUIRED



SCREWDRIVER
(NOT PROVIDED)



HAMMER
(NOT PROVIDED)



POWER DRILL
(RECOMMENDED)



4 AA BATTERIES
(NOT PROVIDED)



3 YEARS OLD & UP



2 PERSON ASSEMBLY



UP TO 150 MIN. ASSEMBLY

HARDWARE

A SCREW I



1 PC

B SCREW II



57 PCS

C SCREW III



31 PCS

D SCREW IV



2 PCS

E SCREW V



104 PCS

F DOWEL



77 PCS

G CAM BOLT




16 PCS

H CAM LOCK




16 PCS

I HINGE PEG




12 PCS

J UPPER HINGE RECEIVER



10 PCS

K UPPER HINGE



2 PCS

L SHELF SUPPORT



13 PCS

M DOOR INSERT



6 PCS

N DOOR CATCH




6 PCS

O BAR HOLDER



4 PCS

P COUNTER SUPPORT



13 PCS

Q S-HOOK




4 PCS

R WALL SPACER



1 PC


S WALL ANCHOR



1 PC

PARTS

1 BASE




1 PC

2 SKIRT FRONT




1 PC

3 SKIRT SIDE

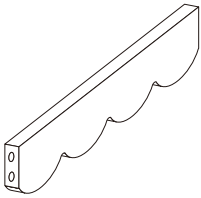


2 PCS

4 LEFT SIDE PANEL




1 PC

5 LONG DIVIDER




1 PC

6 SHORT DIVIDER




1 PC

7 UPPER RIGHT LEG SUPPORT




1 PC

8 ESPRESSO MACHINE BOTTOM

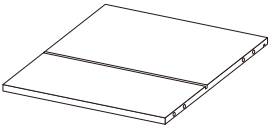


1 PC

9 TRAY




1 PC

10 ESPRESSO MACHINE TOP

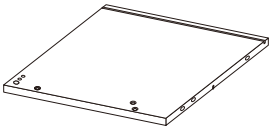


1 PC

11 ESPRESSO MACHINE FRONT




1 PC

12 CONTROL PANEL




1 PC

13 COUNTERTOP




1 PC

14 SHORT BACK




2 PCS

15 REFRIGERATOR BACK




1 PC

16 UPPER SHELF




1 PC

17 SHELF SKIRT




1 PC

18 HOOD STRIP




1 PC

19 HOOD BOTTOM




1 PC

20 UPPER MID PANEL




1 PC

21 HOOD

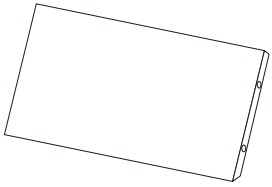

1 PC

22 COUNTERTOP BACK

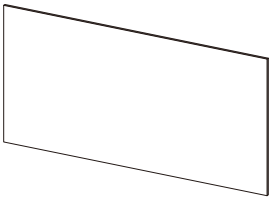

1 PC

23 LEG I



6 PCS

24 LEG II



1 PC

25 LEG III




1 PC

26 BASE SUPPORT




1 PC

27 UPPER SHELF BACK

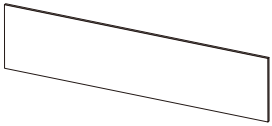


1 PC

28 TOP BOARD




1 PC

29 MICROWAVE BACK

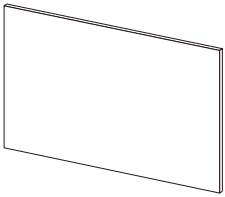


1 PC

30 ESPRESSO MACHINE BACK

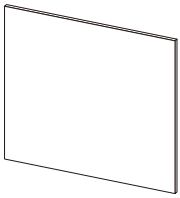


1 PC

31 MICROWAVE TOP

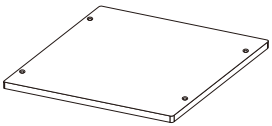


1 PC

32 REFRIGERATOR DOOR




1 PC

33 CUPBOARD DOOR

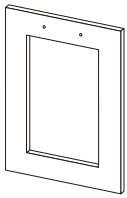


1 PC

34 OVEN DOOR

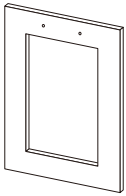


1 PC

35 MICROWAVE DOOR

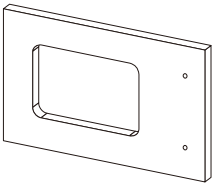


1 PC

36 OVEN TRAY

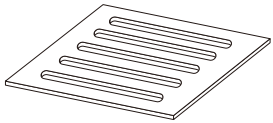


1 PC

37 ISLAND BASE




1 PC

38 ISLAND FRONT SKIRT



2 PCS

39 ISLAND SIDE SKIRT

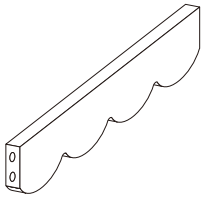

2 PCS

40 ISLAND LEFT SIDE




1 PC

41 ISLAND DIVIDER




1 PC

42 ISLAND RIGHT SIDE



1 PC

43 ISLAND LEFT BACK




1 PC

44 ISLAND RIGHT BACK




1 PC

45 ISLAND TOP




1 PC

46 ISLAND LEFT FRONT




1 PC

47 ISLAND RIGHT FRONT




1 PC

48 ISLAND SHELF

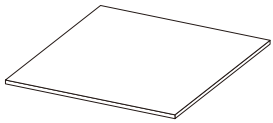


2 PCS

49 HOOD CENTER

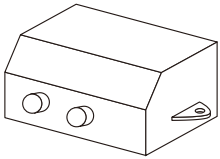


1 PC

50 LONG BAR




2 PCS

51 SPOUT




1 PC

52 SHORT BAR




6 PCS

53 BURNER




2 PCS

54 FAUCET




1 PC

55 ICE DISPENSER

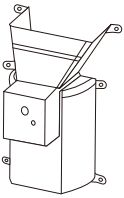


1 PC

56 SINK

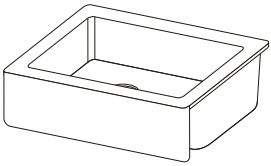


1 PC

57 UTENSIL SET

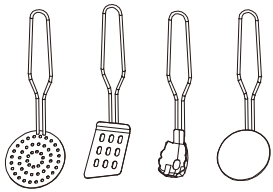


1 SET

58 SAUCEPAN




1 PC

59 DUTCH OVEN




1 PC

60 PORTAFILTER

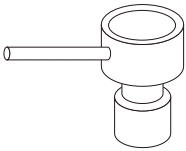

1 PC

61 CUP

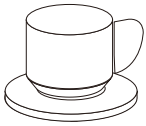


1 PC

62 CAPSULE SET



1 SET


63 ICE CUBE

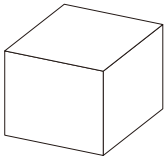

4 PCS

PRODUCT ASSEMBLY

1 Insert twelve **part G cam bolts** into six **part 23 legs,** two bolts per leg.
Insert one **part G cam bolt** each into **part 24** and **part 25 legs.**

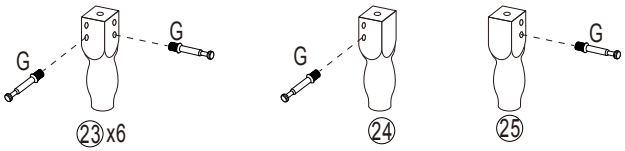


2 Insert one **part F dowel** into **part 24 leg,** then insert one **part H cam lock** into **part 3 side skirt,** connect the two pieces, turn the cam locks to secure, then set aside.

Insert one **part F dowel** into **part 25 leg,** then insert one **part H cam lock** into **part 3 side skirt,** connect the two pieces, turn the cam locks to secure, then set aside.


Insert two **part H cam locks** and two **part F dowels** into **part 2 front skirt.**

Connect the two **part 23 legs** to each side of the front skirt, then turn the cam locks to secure.

Insert one **part F dowel** and one **part H cam lock** into each **part 3 side skirt,** then connect them to **part 23 legs,** turn the cam locks to secure.

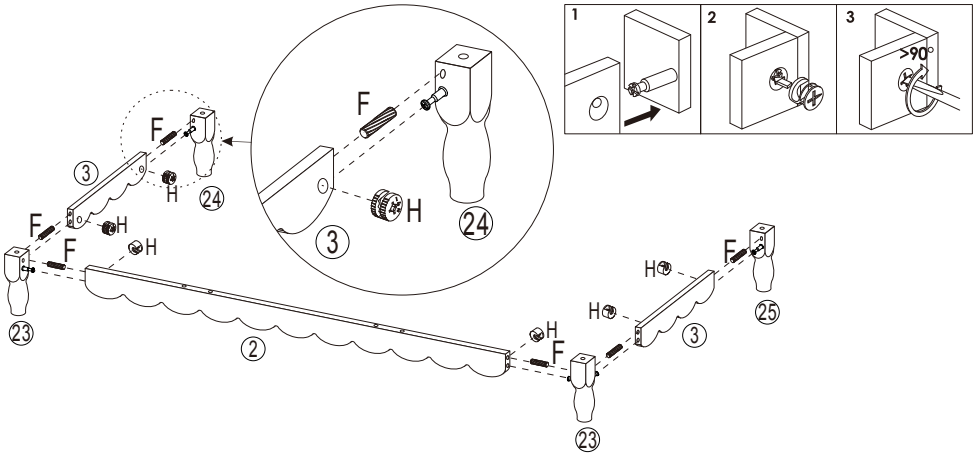


3 Attach three **part J upper hinge receivers** to **part 1 base** using six **part E screws,** two screws per receiver.

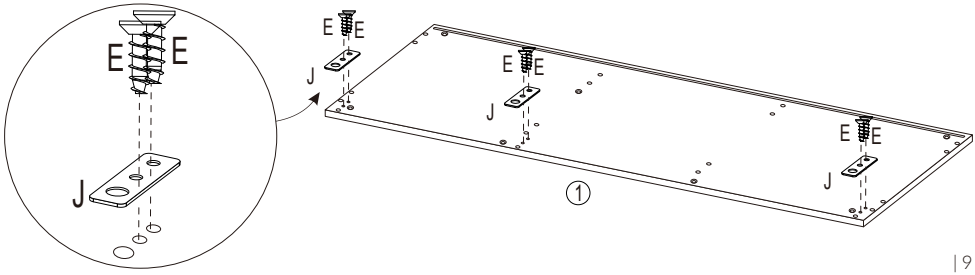


4

Insert two **part F dowels** into the top of **part 2 front skirt.**
Attach **part 26 base support** underneath **part 1 base** using one **part B screw.**
Attach **part 1 base** to the leg frame assembly using six **part B screws.**

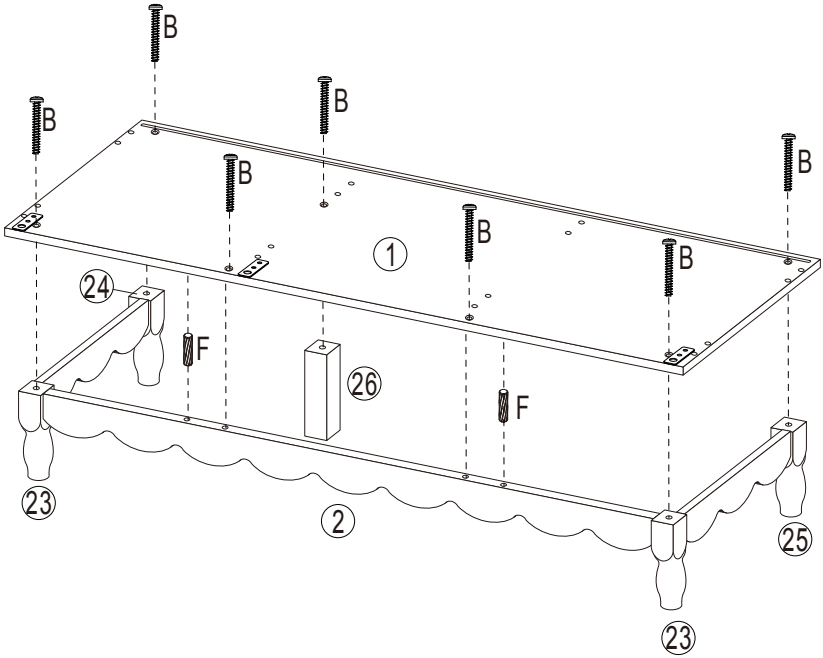

5


Attach one **part N door catch** to **part 6 short divide**r using two **part E screws.**
On the other side of the divider, attach another **part N door catch** using two **part E screws.**
Then attach two **part L shelf supports** to **part 6 short divider** using two **part E screws.**

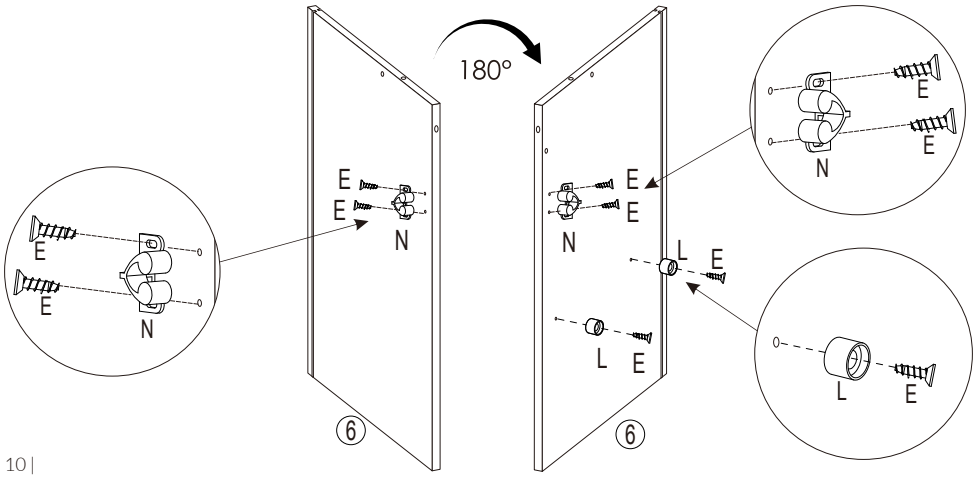


6 Use a hammer to attach three **part P counter supports** to the bottom of **part 13 countertop,** then secure each support using one **part E screw,** three screws total.

NOTE: Hammer is not included but highly recommended.

Flip **part 13 countertop upright,** then attach **part 54 faucet** using two **part C screws.**

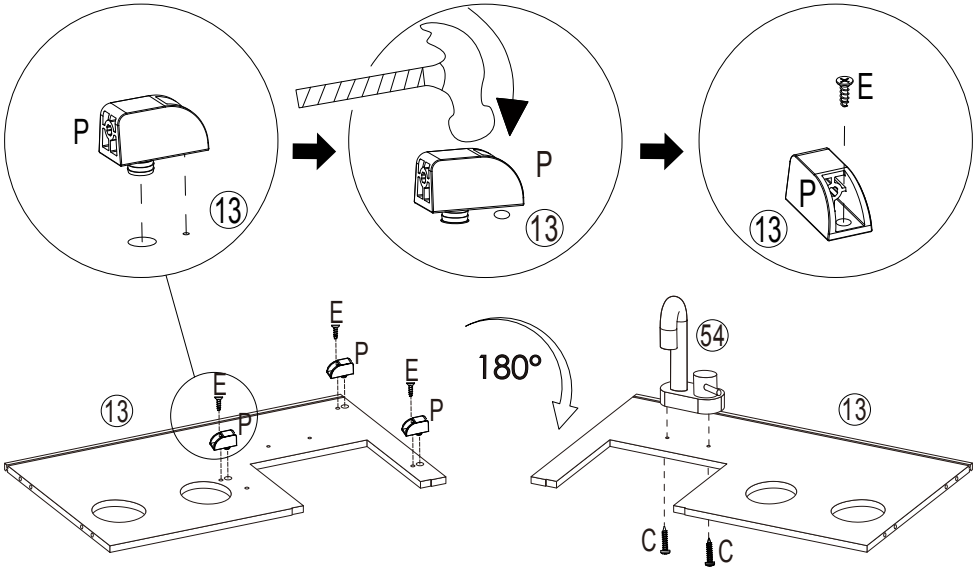


7 Insert one **part F dowel** into the top of **part 6 short divider.** Attach **part 6 short divider** to **part 13 countertop** by using one **part C screw** and securing it into **part P counter support** beneath the countertop. **NOTE:** Ensure that the screw is properly aligned and securely fastened into **part P counter support.**

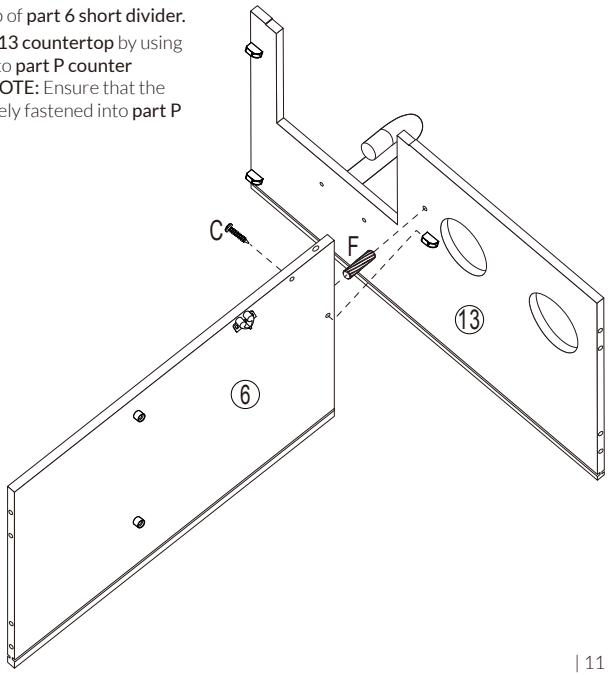

8 Use a hammer to attach one **part P counter support** to the back of **part 12 control panel,** then secure the support using one **part E screw.**

NOTE: Hammer is not included but highly recommended.


Attach two **part K upper hinges** to **part 12 control panel** using four **part E screws,** two screws per hinge.

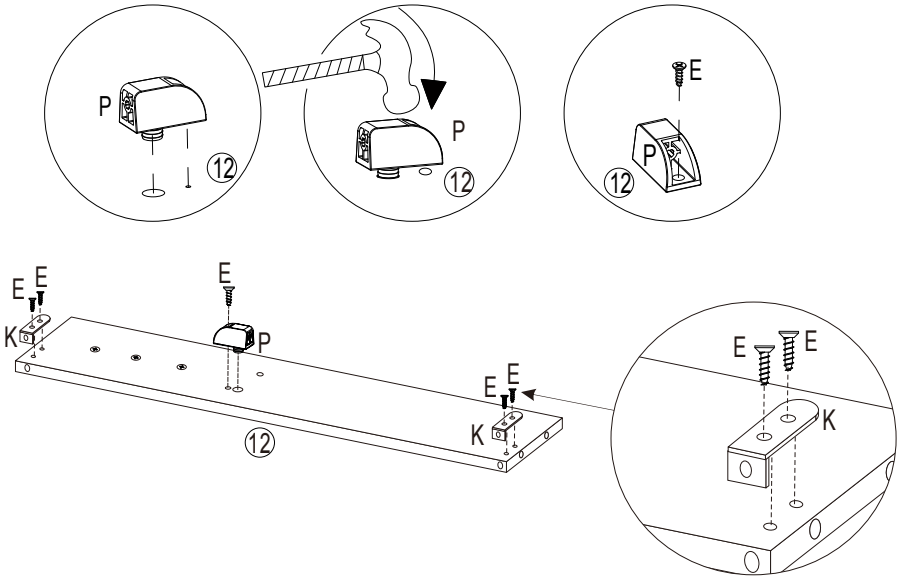

9 Insert one **part F dowel** into the back of **part 12 control panel**

Attach **part 12 control panel** to **part 6 short divider** by using one **part C screw** and securing it into part P counter support behind the control panel


NOTE: Ensure the screw is properly aligned and securely fastened into **part P counter support**.

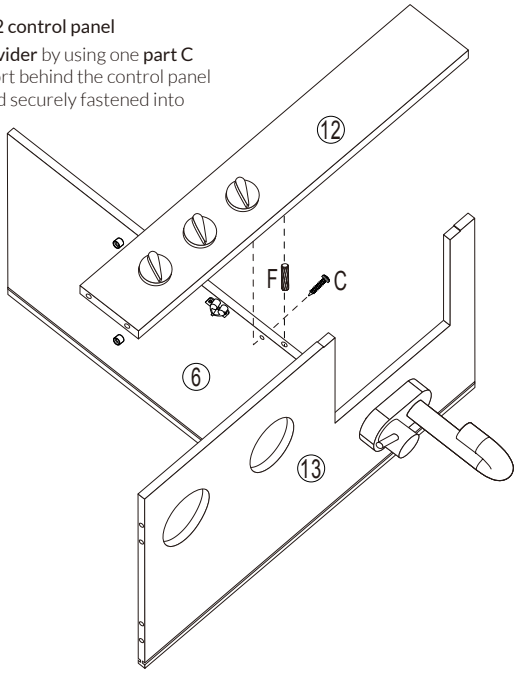


10

Insert four **part F dowels** into **part 21 hood.**


Insert two **part F dowels** into **part 17 shelf skirt,** then attach the hood strip to **part 16 upper shelf** using two **part B screws.**

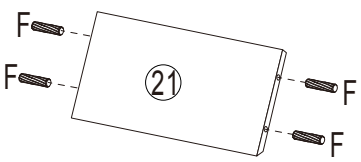

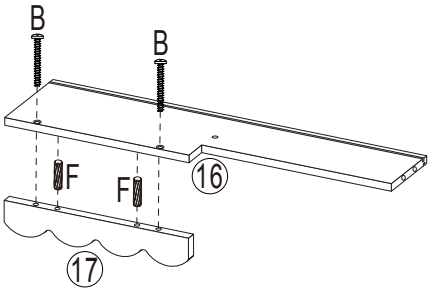

11


Attach two **part L shelf support** to **part 7 right side panel** using two **part E screws.**

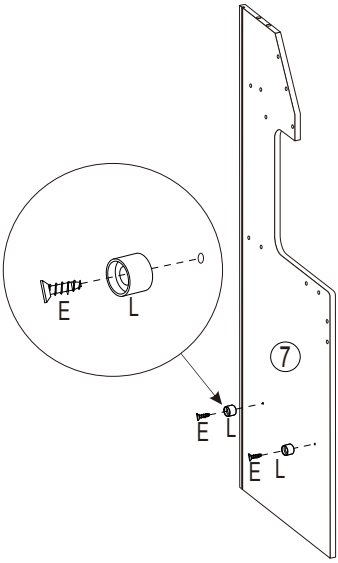

12

Insert three **part F dowels** into **part 7 right side panel.**


Attach **part 7 right side panel** to **part12 control panel** and **part 13 counter** using three **part B screws.**

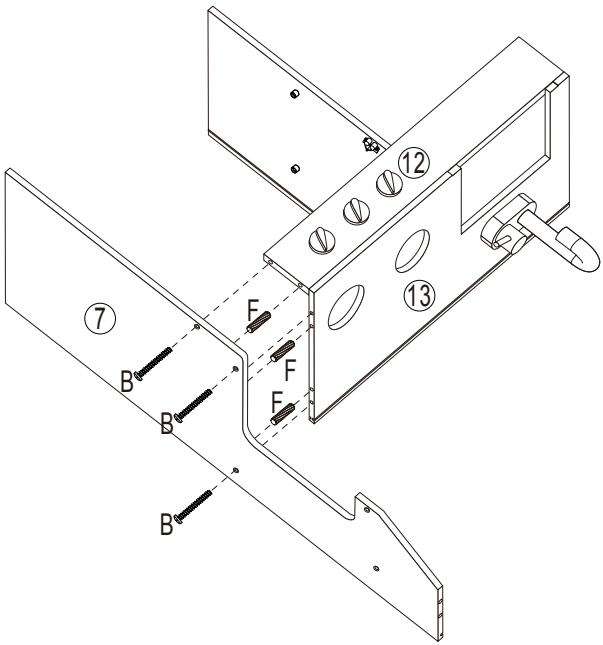

13

Attach four **part Q hooks** to **part 50 long bar.**

Attach two **part O bar holders** to **part 50 long bar,** then attach the bar assembly to **part 19 lower shelf** using two **part C screws.**

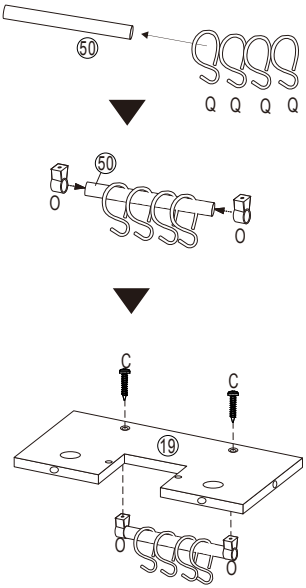


14

Insert two **part G cam bolts** to **part 18 hood strip.**

Attach **part 49 hood center** to **part 19 hood bottom** using two **part D screws.**

Insert two **part H cam locks** to **part 19 hood bottom,** then attach **part 18 hood strip** to the hood bottom.


NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

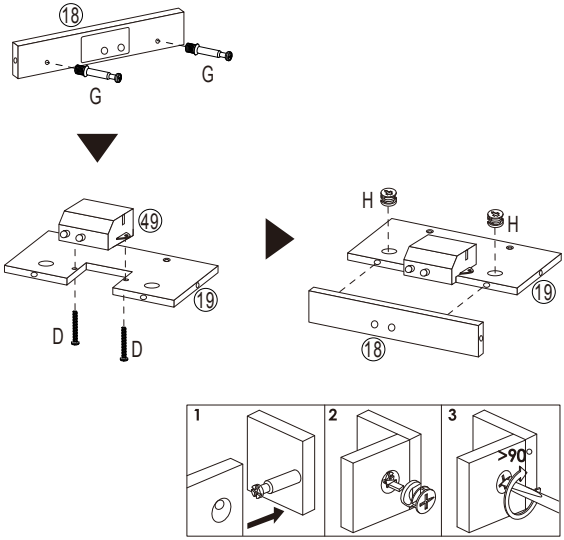

15


Attach **part 20 upper mid panel** to the hood assembly using two **part B screws.**

Slide **part 20 upper mid panel** to **part 16 upper shelf,** then secure it using one **part B screw.**

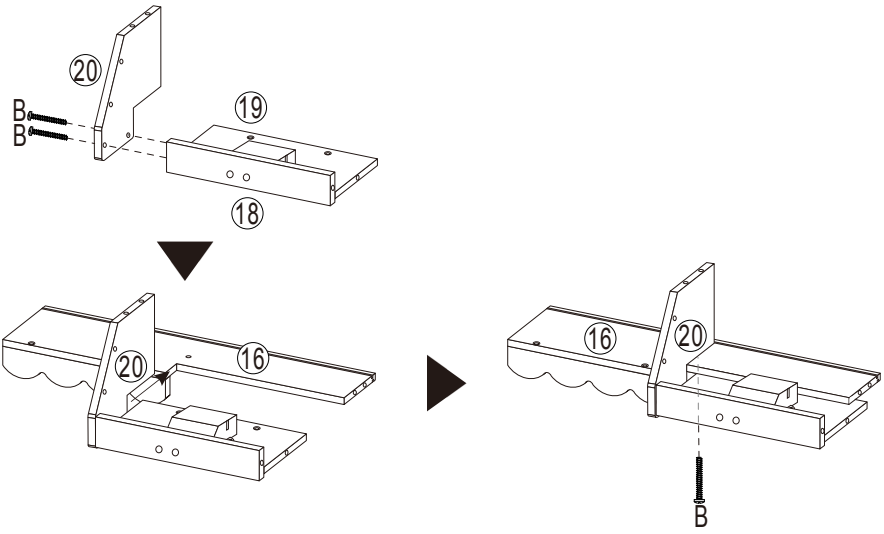


16

Attach **part 21 hood** to **part 20 upper mid panel.**
Insert two **part F dowels** to **part 16 upper shelf** and **part 19 hood bottom,** one dowel per panel.
Attach the upper shelf assembly to **part 7 right side panel** using two **part B screws.**

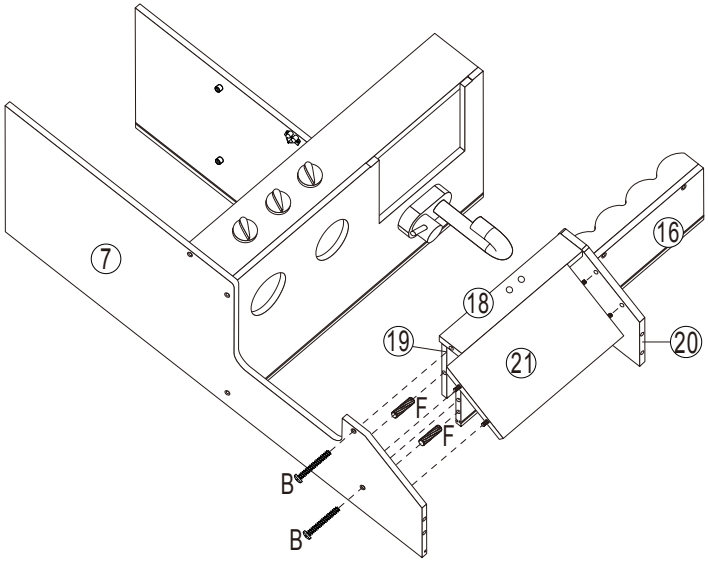


17

Insert two **part F dowels** to **part 28 top board,** then attach the board on top of the hood assembly using two **part B screws.**

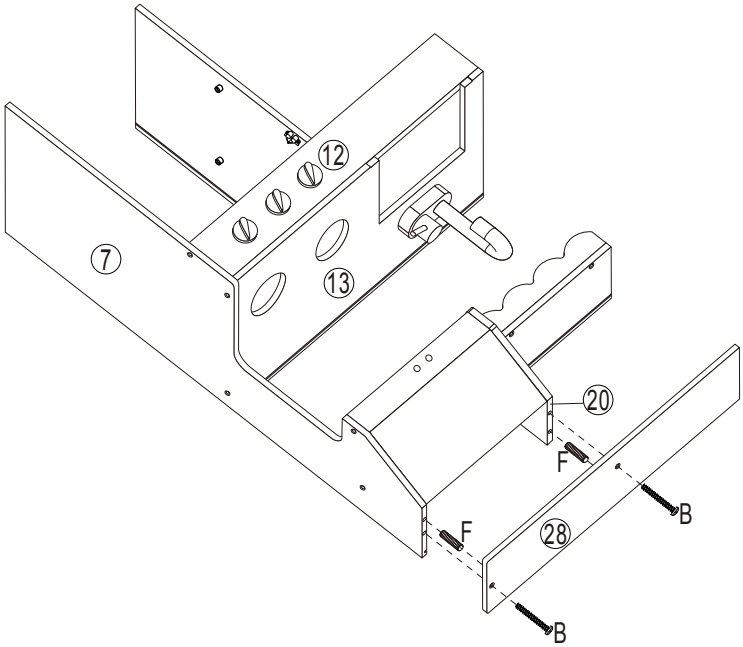


18

Slide in **part 22 countertop back** and **part 27 upper shelf back.**

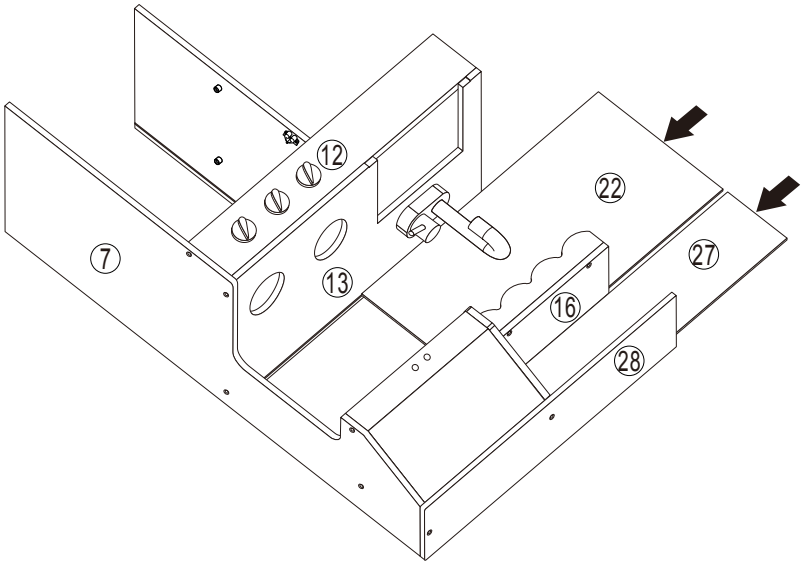


19

Attach one **part L shelf support** to **part 5 long divide**r using one **part E screw.**
On the other side of the divider, attach two **part N door catches** using four **part E screws.**

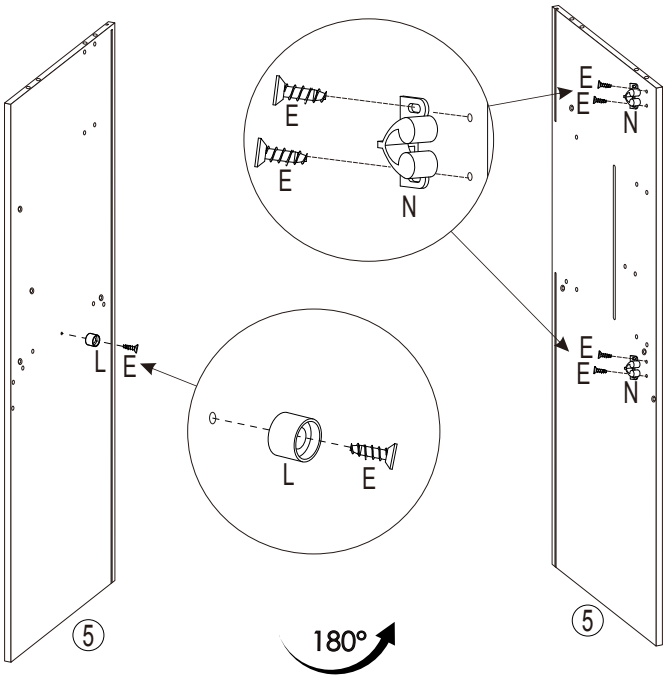


20

Attach one **part J upper hinge receiver** to **part 8 espresso machine bottom** using two **part E screws.**
Insert two **part F dowels** into **part 8 espresso machine bottom,** then attach to **part 5 long divider** using two **part B screws.**

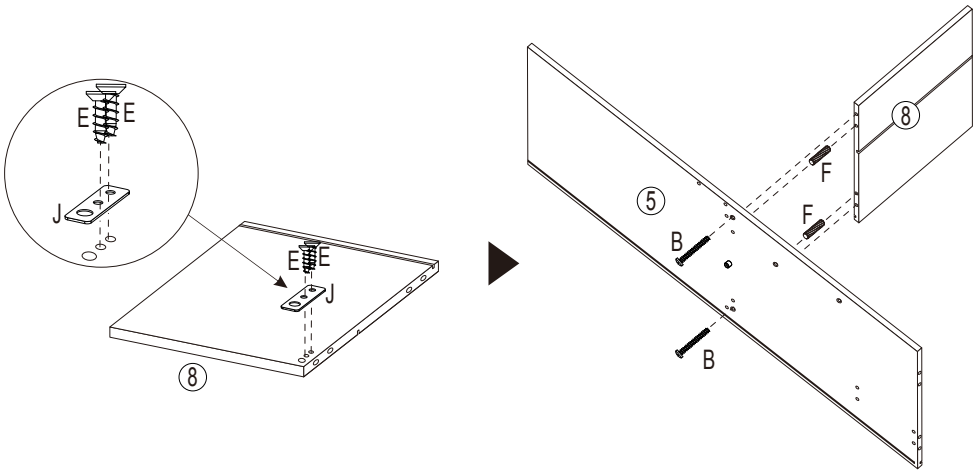

21


Insert five **part F dowels** into **part 5 long divider.**
Attach **part 5 long divider** to the countertop assembly using three **part B screws** and two **part C screws.**

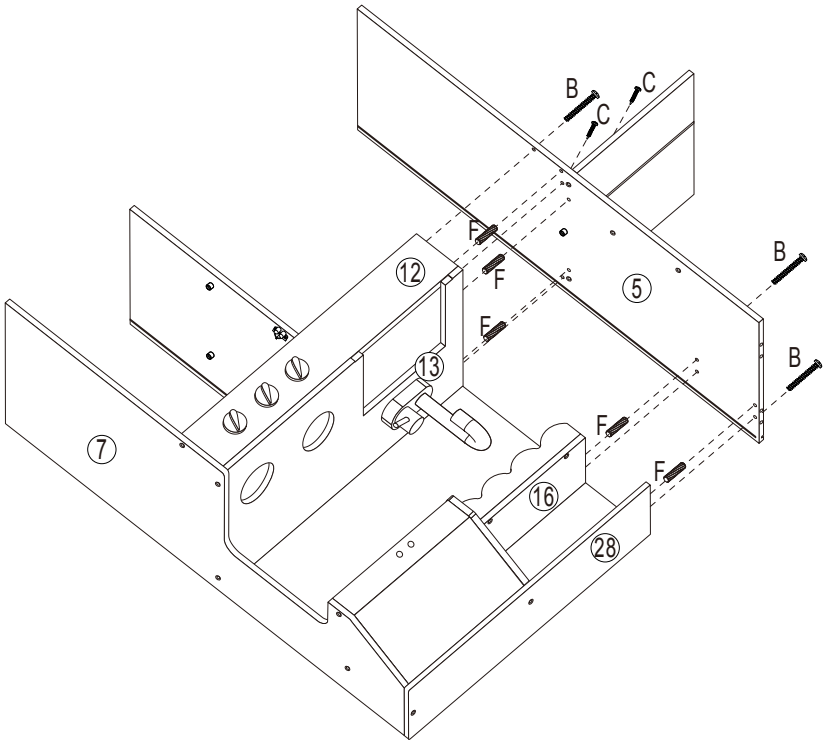

22


Attach on **part J hinger receiver** to **part 10 espresso machine top** using two **part E screws.**

Insert two **part F dowels** to **part 11 espresso machine front,** then attach espresso machine front and **part 51 spout** to espresso machine top using three **part B screws.**

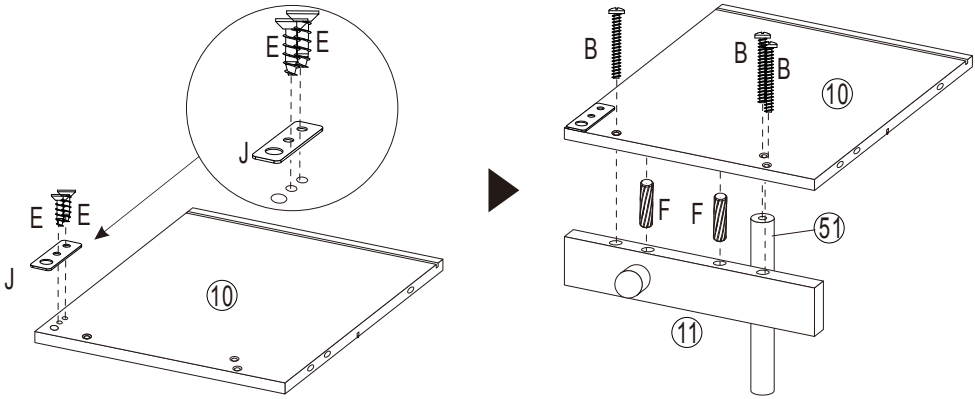


23

Insert a total of thre**e part F dowels** into the espresso machine assembly as shown below.
Attacht the espresso machine assembly to **part 5 long divider** using two **part B screws.**

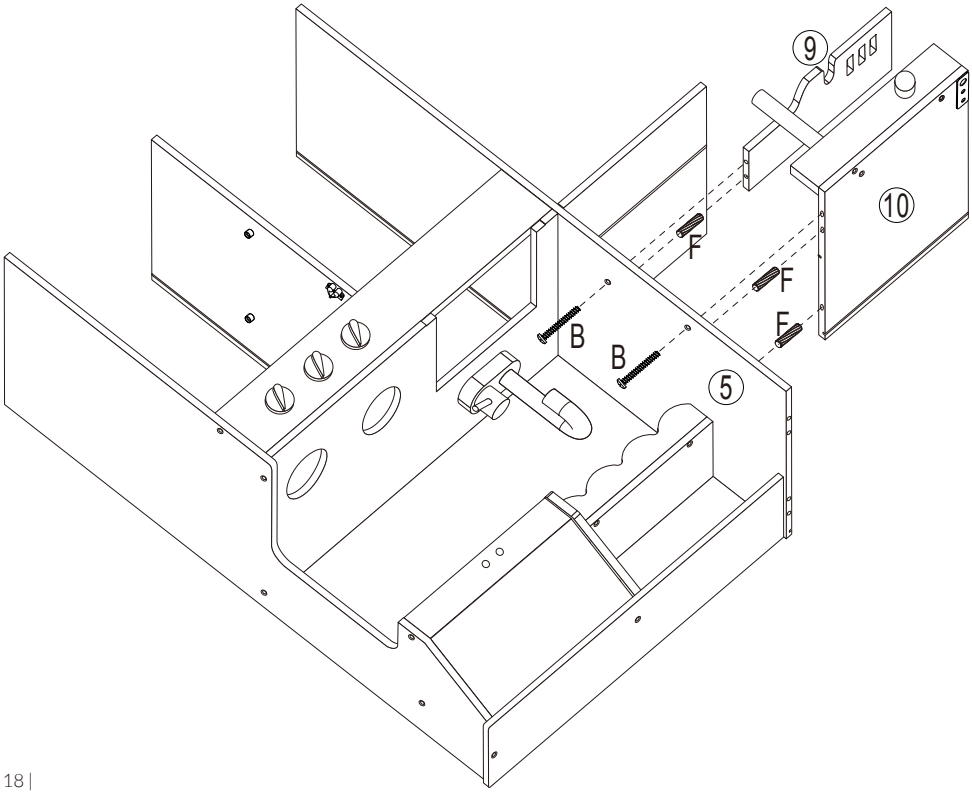


24

Slide in **part 30 espresso machine back.**

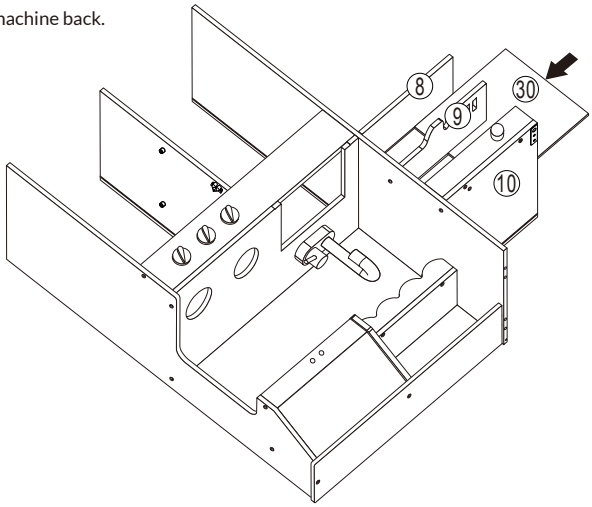


25

Insert a total of five **part F dowels** into the espresso machine assembly as shown below.
Attach **part 4 left side panel** to the espresso machine assembly using four **part B screws.**

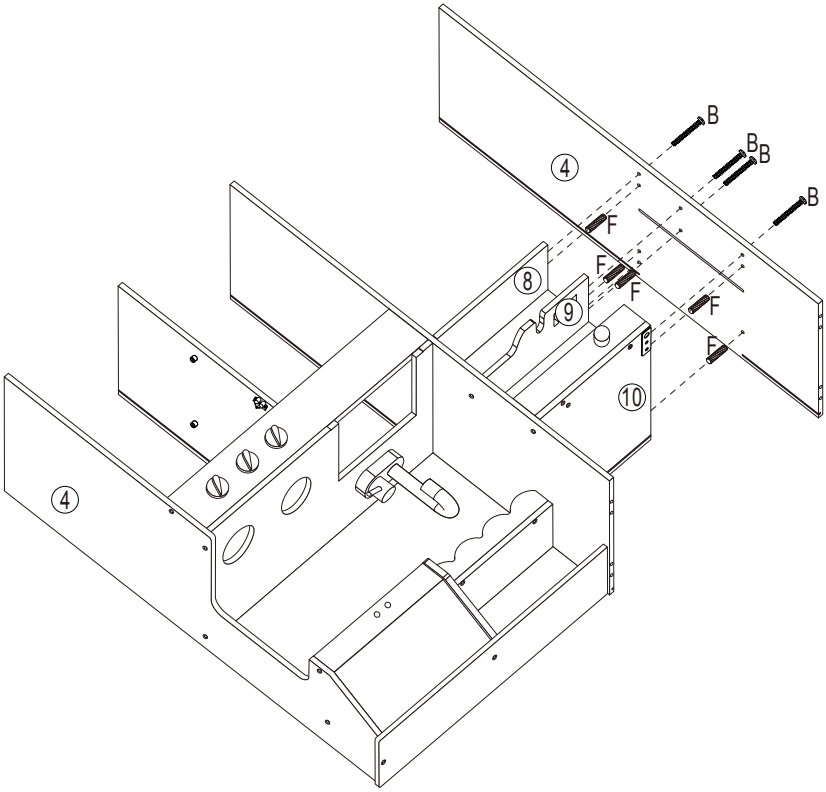


26

Slide in two **part 14 short back** and **one part 15 refrigerator back.**

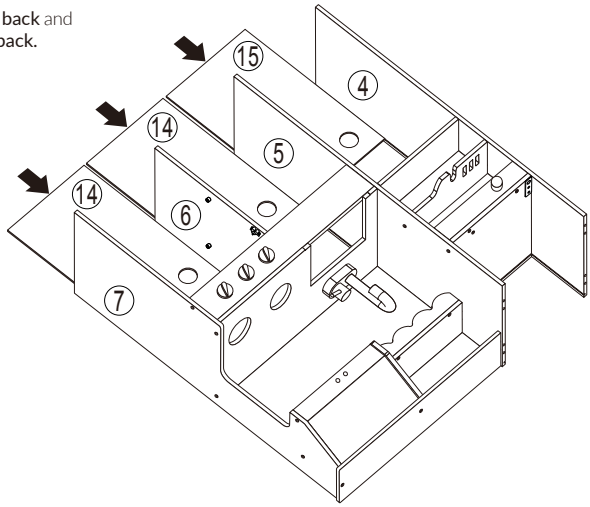


27

Insert eight **part F dowels** into **part 1 base,** then attach the base beneath the kitchen assembly using eight **part B screws.**

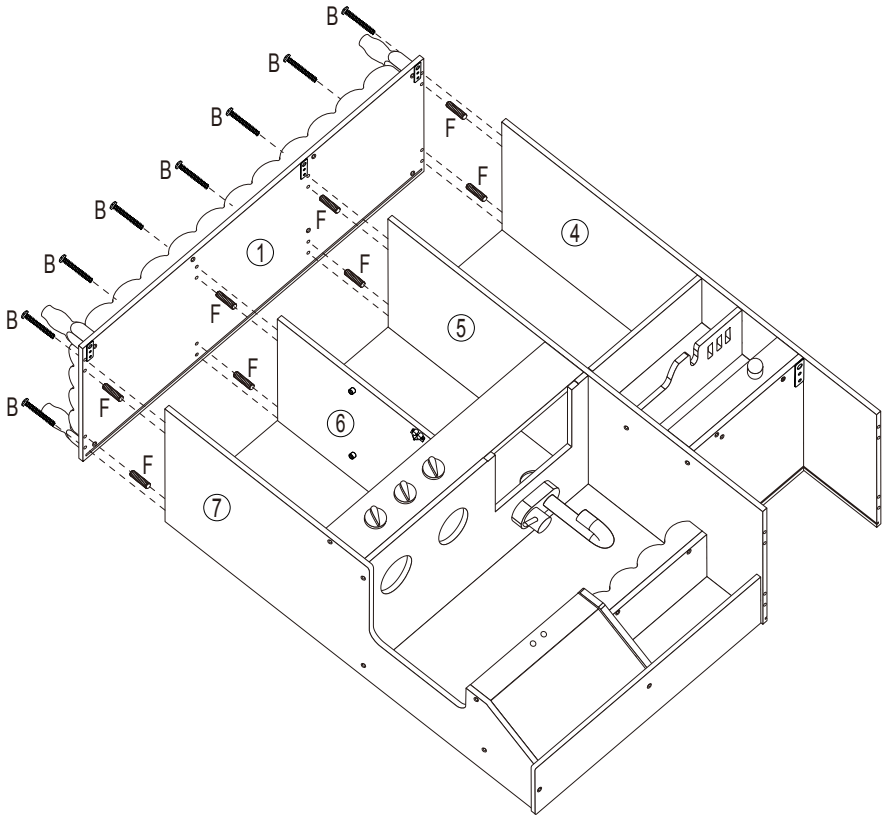


28

Slide in **part 29 microwave back.**

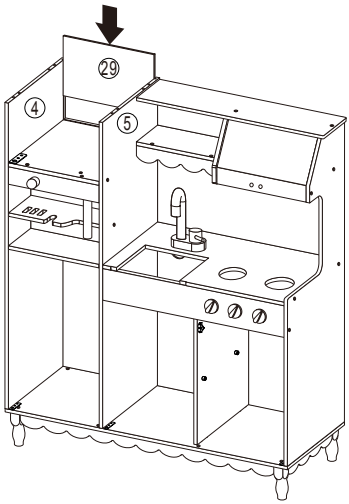

29


Attach one **part J upper hinge receiver** to **part 31 microwave top** using two **part E screws.**
Insert four **part F dowels** to **part 4 left side panel** and **part 5 long divider,** two dowels per panel.
Then attach **part 31 microwave top** using four **part B screws.**

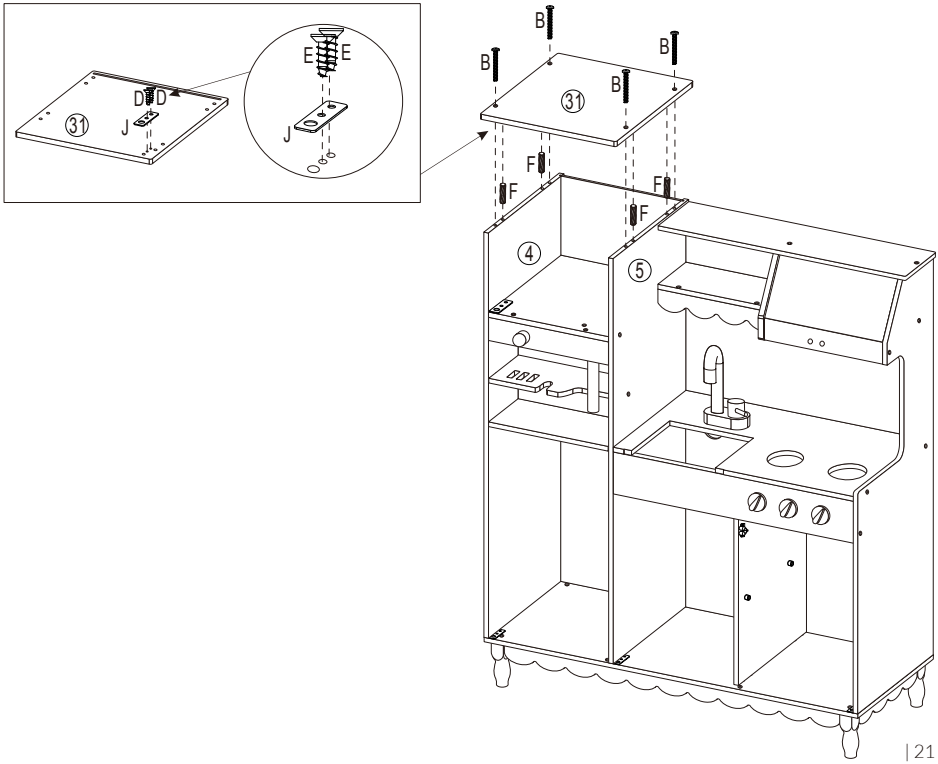

30

Attach one **part M door insert** and one **part I hinge peg** to the **part 35 micowave door** using four **part E screws.**


Flip the door and attach **part 52 short bar** using two **part C screws.**

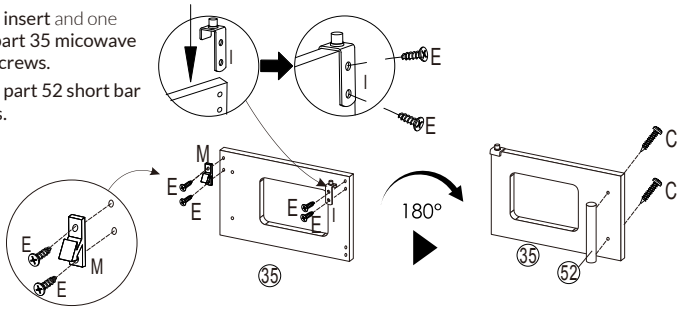


31

Insert the hinge peg on **part 35 microwave door** into the opening on **part 31 microwave top.**

Then insert one **part I hinge peg** into the opening on **part 10 espresso machine top,** and secure it to the **part 35 microwave door** using two **part E screws.**

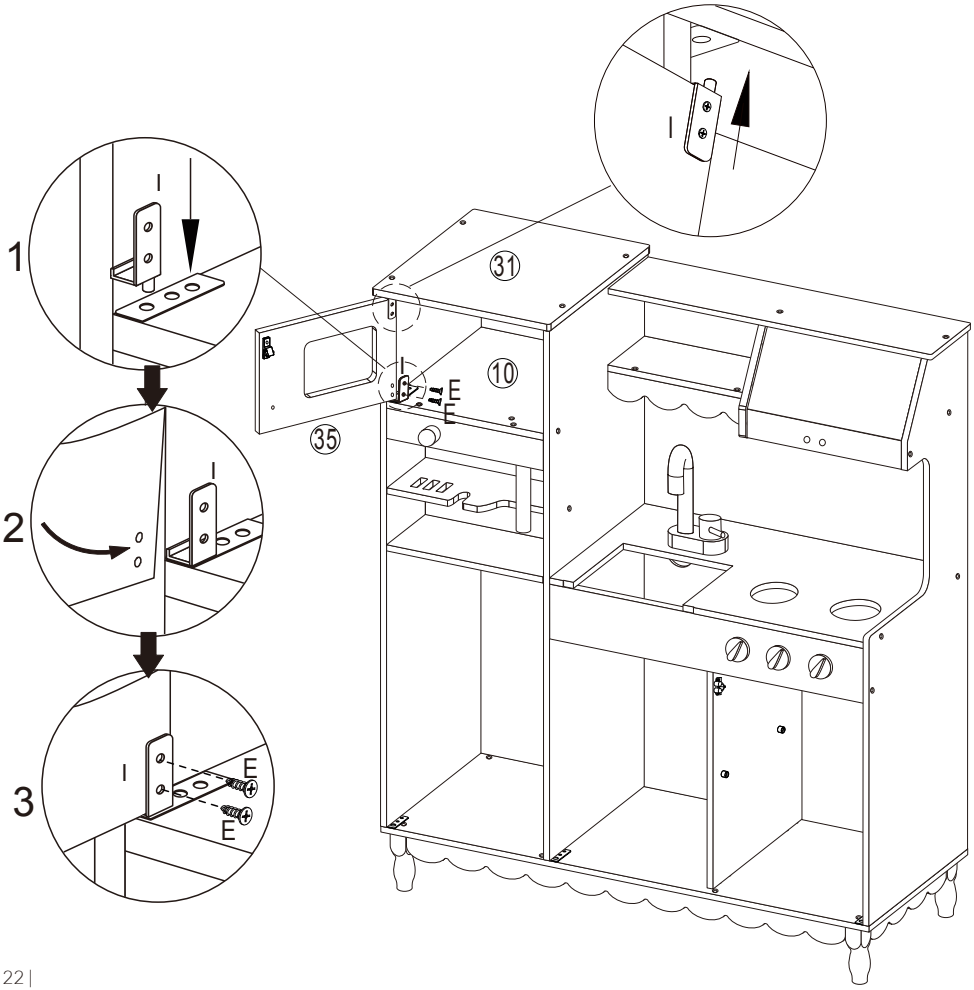


32 Attach one **part M door insert** and one **part I hinge pegs** to **part 32 refrigerator door** using four **part E screws.**
Attach **part 55 ice dispenser** to **part 32 refrigerator door** using six **part E screws.**
Flip the door and attach one **part 52 short bar** using two **part C screws.**

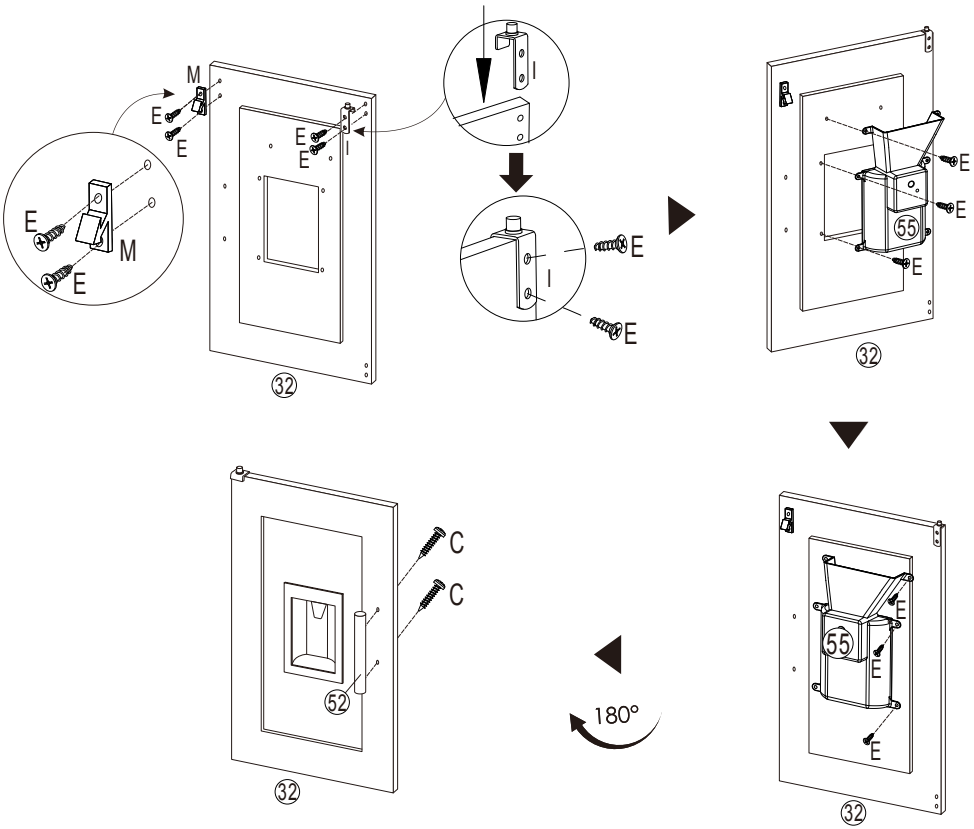

33

Insert the hinge peg on **part 32 refrigerator door** into the opening on **part 8 espresso machine bottom.**


Then insert one **part I hinge peg** into the opening on **part 1 base,** and secure it to the **part 32 refrigerator door** using two **part E screws.**

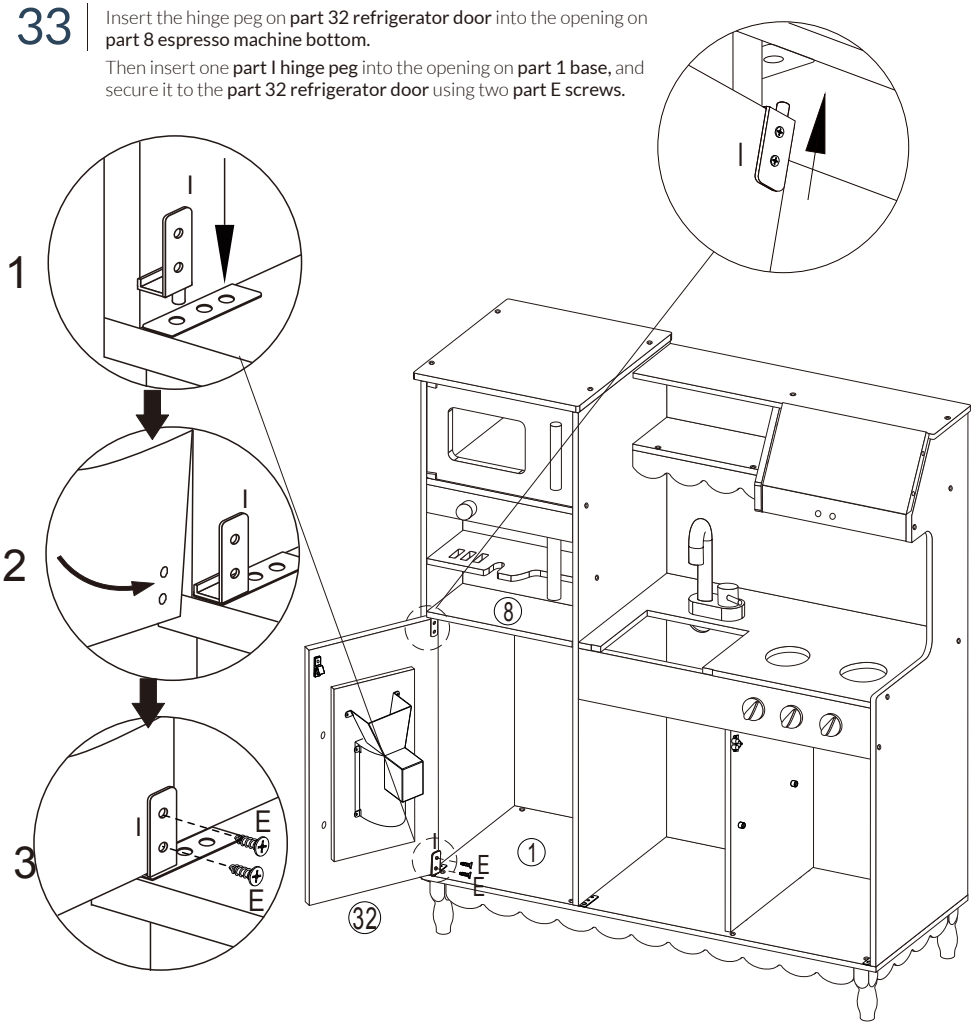

34

Attach one **part M door insert** and one **part I hinge peg** to the **part 33 sink cupboard door** using four **part E screws.**


Flip the door and attach **part 52 short bar** using two **part C screws.**

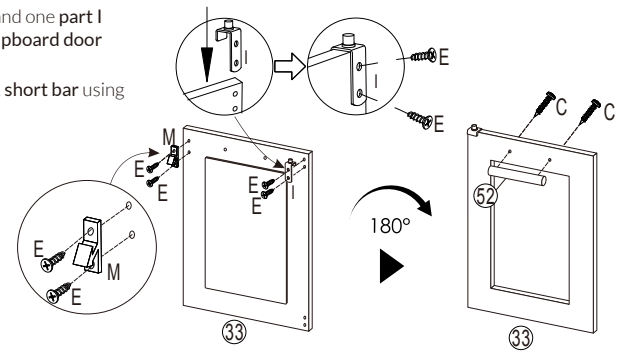

35

Insert the hinge peg on **part 33 cupboard door** into the opening on **part 12 control panel.**


Then insert one **part I hinge peg** into the opening on **part 1 base,** and secure it to the **part 33 cupboard door** using two **part E screws.**

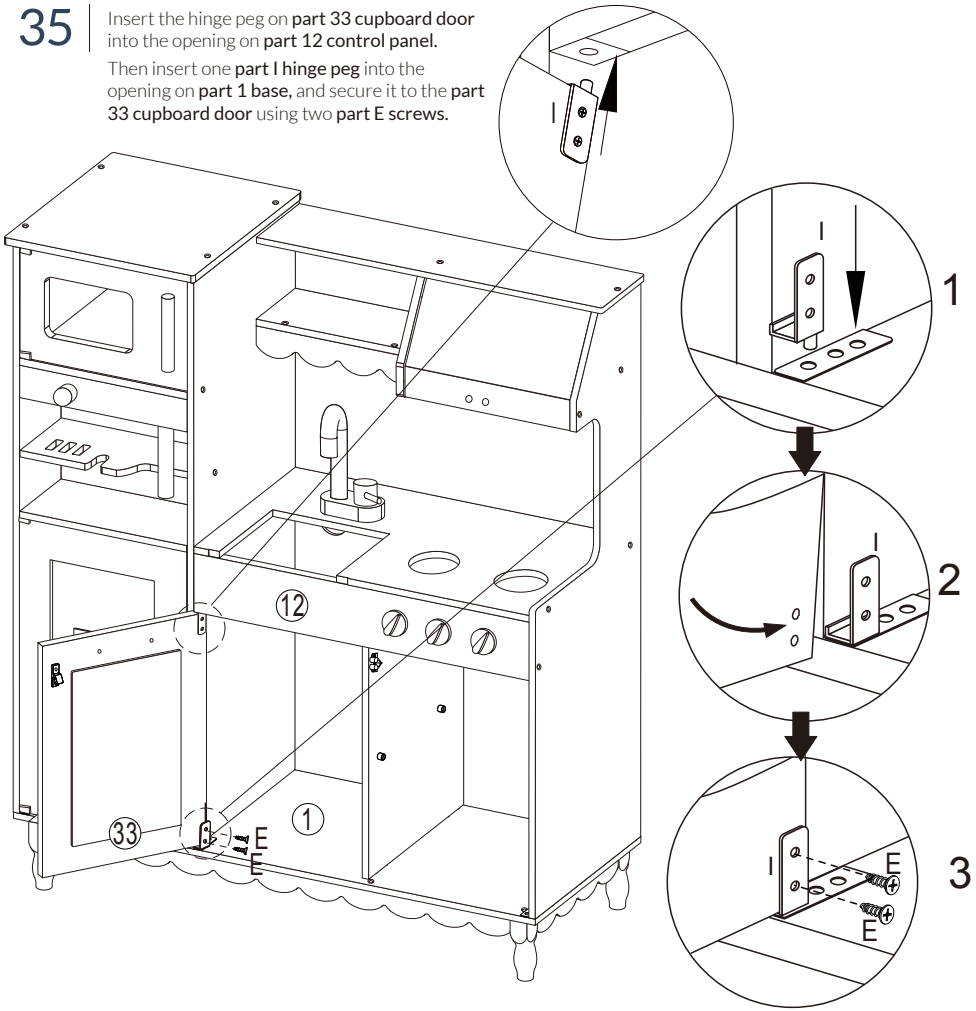


36

Attach one **part M door insert** and one **part I hinge peg** to the **part 34 oven door** using four **part E screws.**

Flip the door and attach **part 52 short bar** using two **part C screws.**

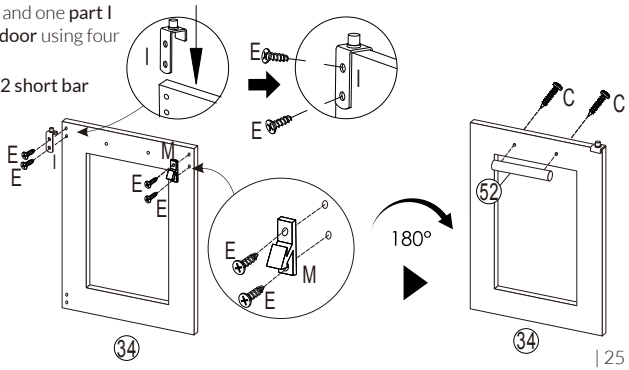


37 Insert the hinge peg on **part 34 oven door** into the opening on **part 12 control panel.**
Then insert one **part I hinge peg** into the opening on **part 1 base,** and secure it to the **part 34 control panel** using two **part E screws.**

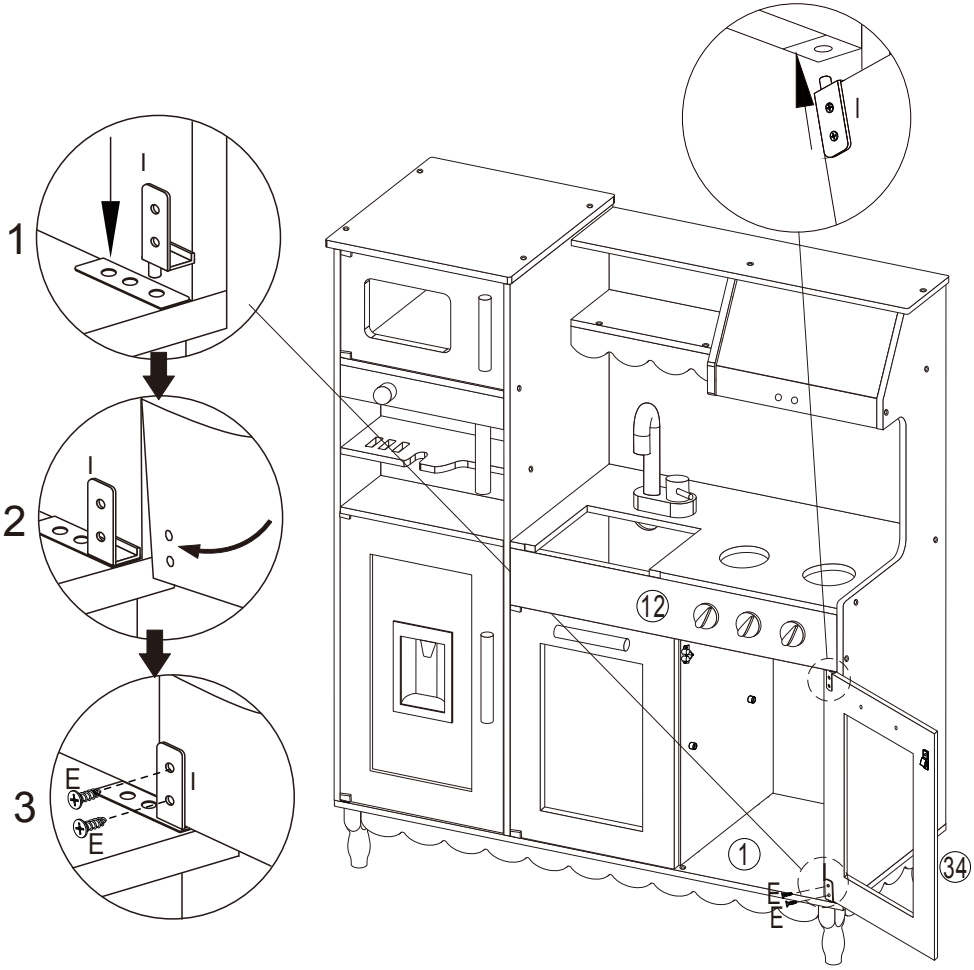


38 Locate the battery compartment on the back of the **part 53 burner.** Remove the cover plate using a screwdriver and then install two AA-batteries. Repeat for the second burner.

Insert two **part 53 burner** and **part 56 sink** into the **part 13 countertop.**

Insert **part 36 oven rack** into the oven section.

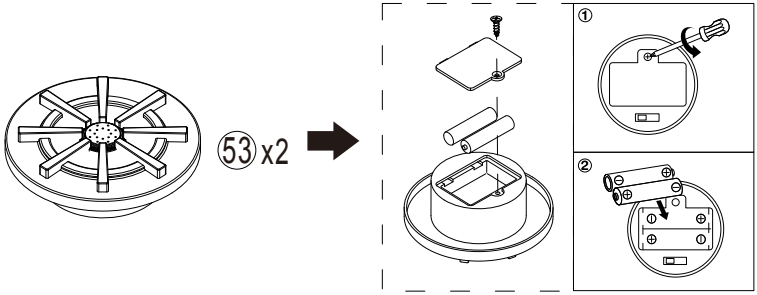

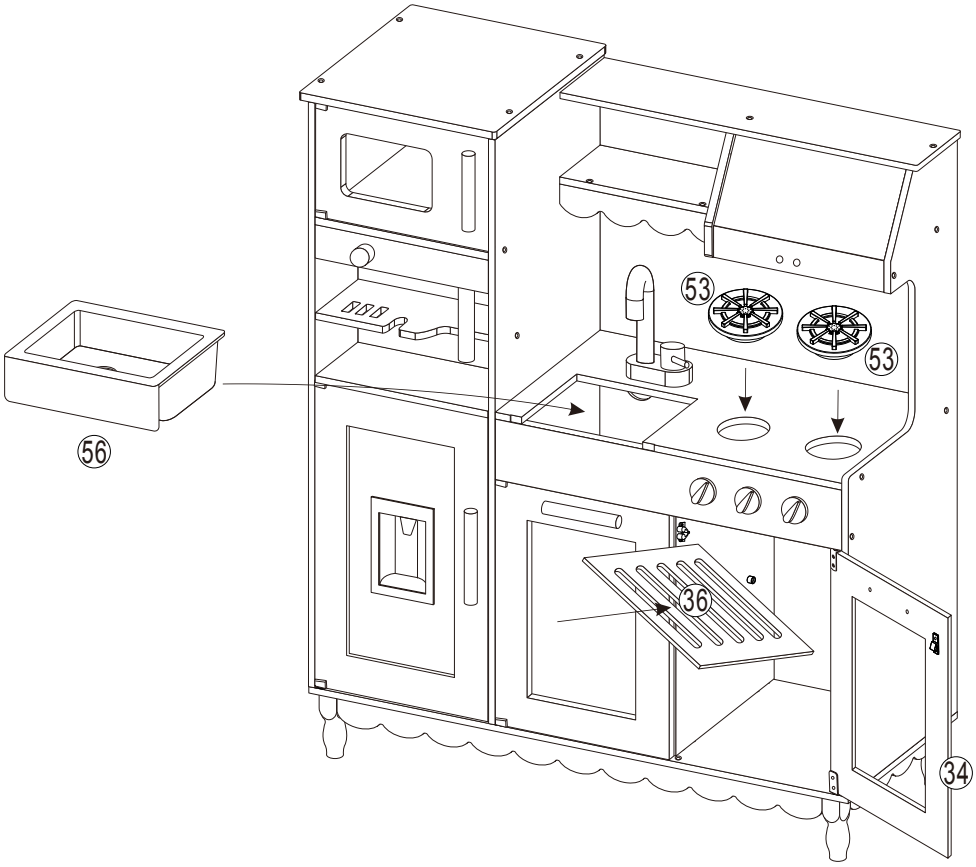


39 **WALL MOUNTING:** *(OPTIONAL)*

Drill a pilot hole into the wall at the desired location.


Use a hammer to insert the **part S wall anchor** into the pilot hole.

Align the opening on **part 15 refrigerator back** using the installed wall anchor, then secure the playset to the wall using one **part A screw** and **part R wall spacer.**

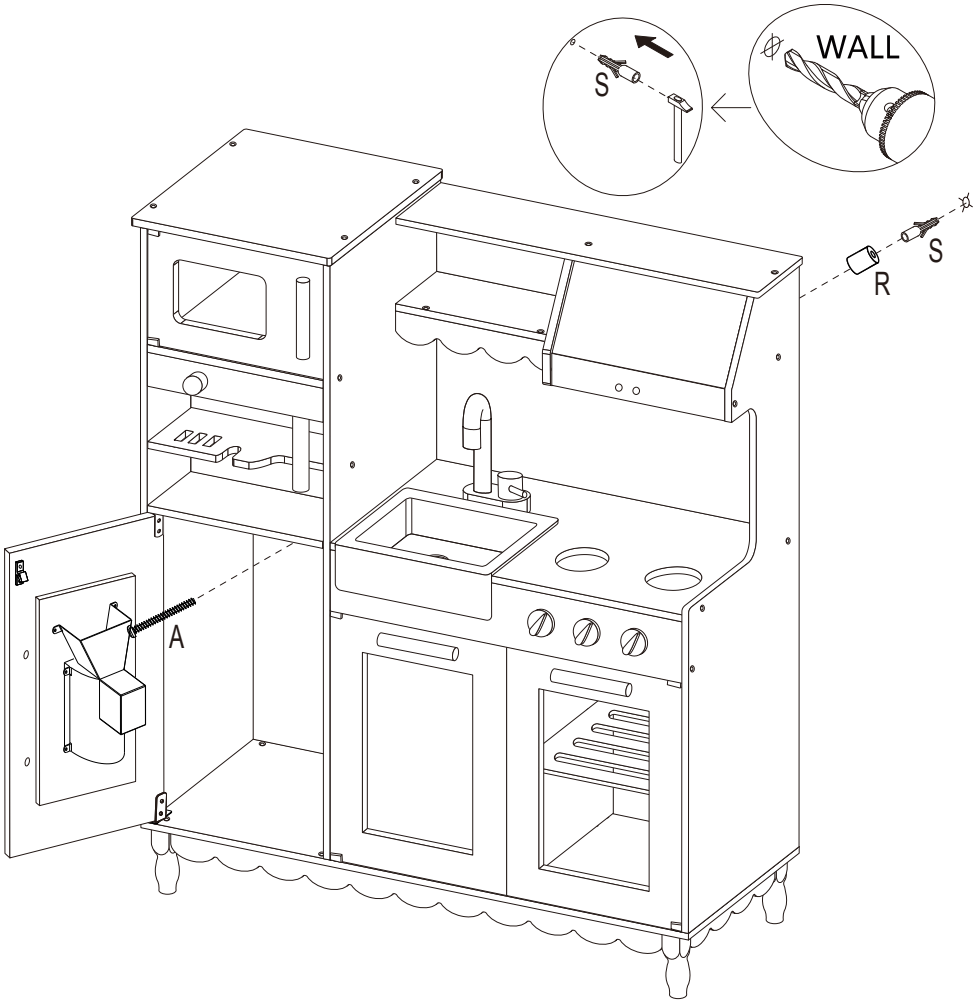


40

Attach one **part N door catch** and two **part L shelf supports** to **part 41 island divide**r using four **part E screws.** On the other side of the divider, attach one **part N door catch** and two **part L shelf supports** to **part 41 island divide**r using four **part E screws.**

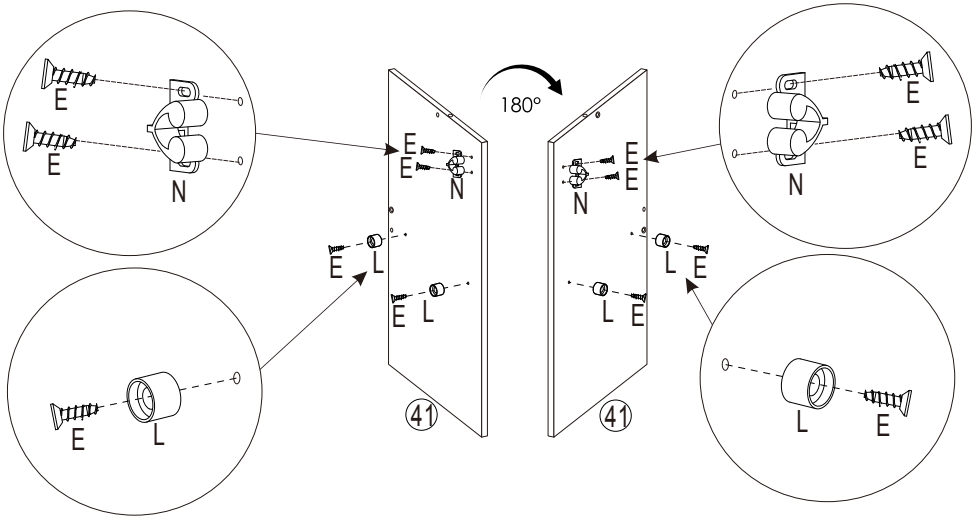


41

Hammer one **part P counter support** into the **part 43 island left back,** then secure using one **part E screw.** Repeat the step for the **part 44 island right back.**

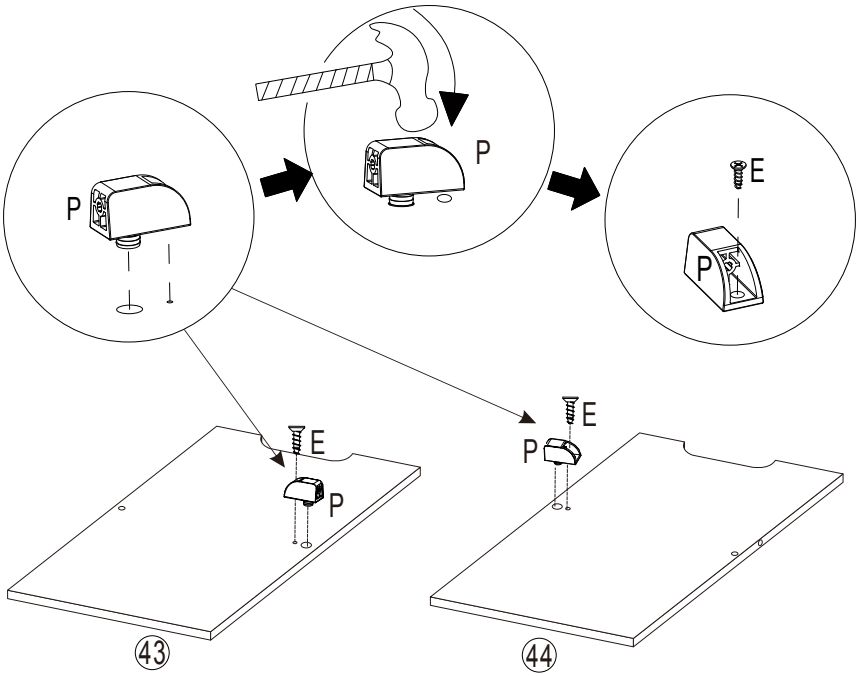


42

Attach **part 43 island left back** to **part 41 island divider** using **part C screw.**
Ensure the screw is properly aligned and securely fastened into **part P counter support**.

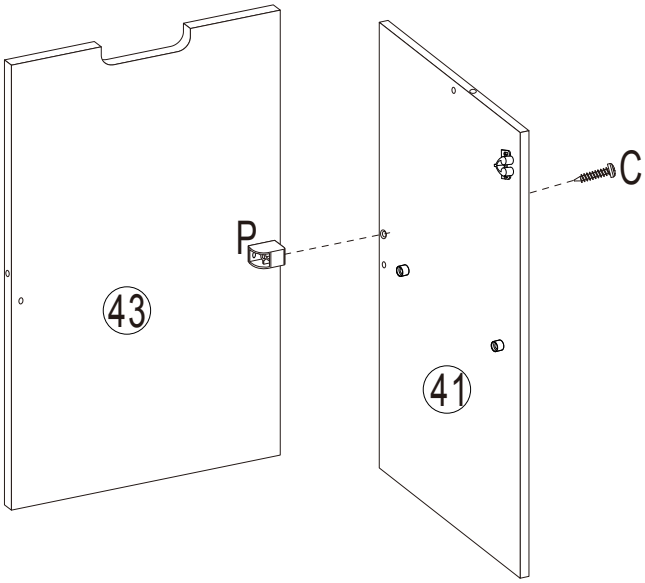


43


Attach **part 44 island right back** to **part 41 island divider** using **part C screw.**
Ensure the screw is properly aligned and securely fastened into **part P counter support**.

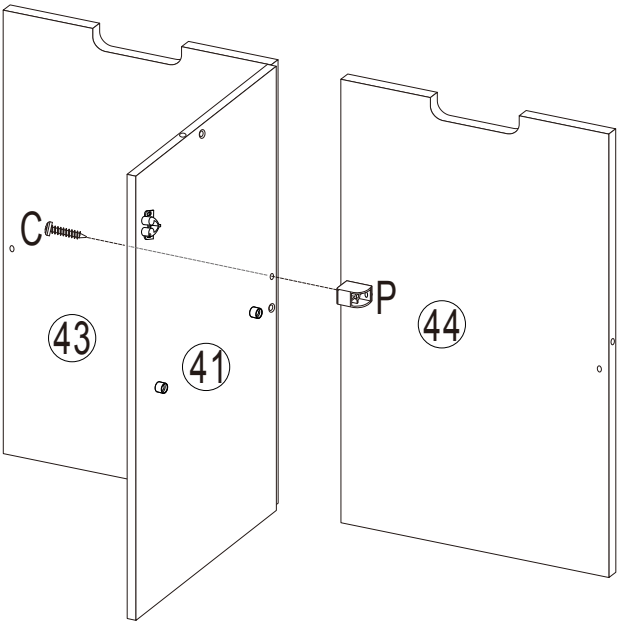


44 Hammer one **part P counter support** into the **part 40 island left side,** then secure using one **part E screw.**
Attach two **part L shelf supports** to **part 40 island left side** using two **part E screws.** Repeat the step for the **part 42 island right side.**
Flip the **part 42 island right side** attach two **part O bar holders** and the **part 50 long bar** using two **part C screws.**

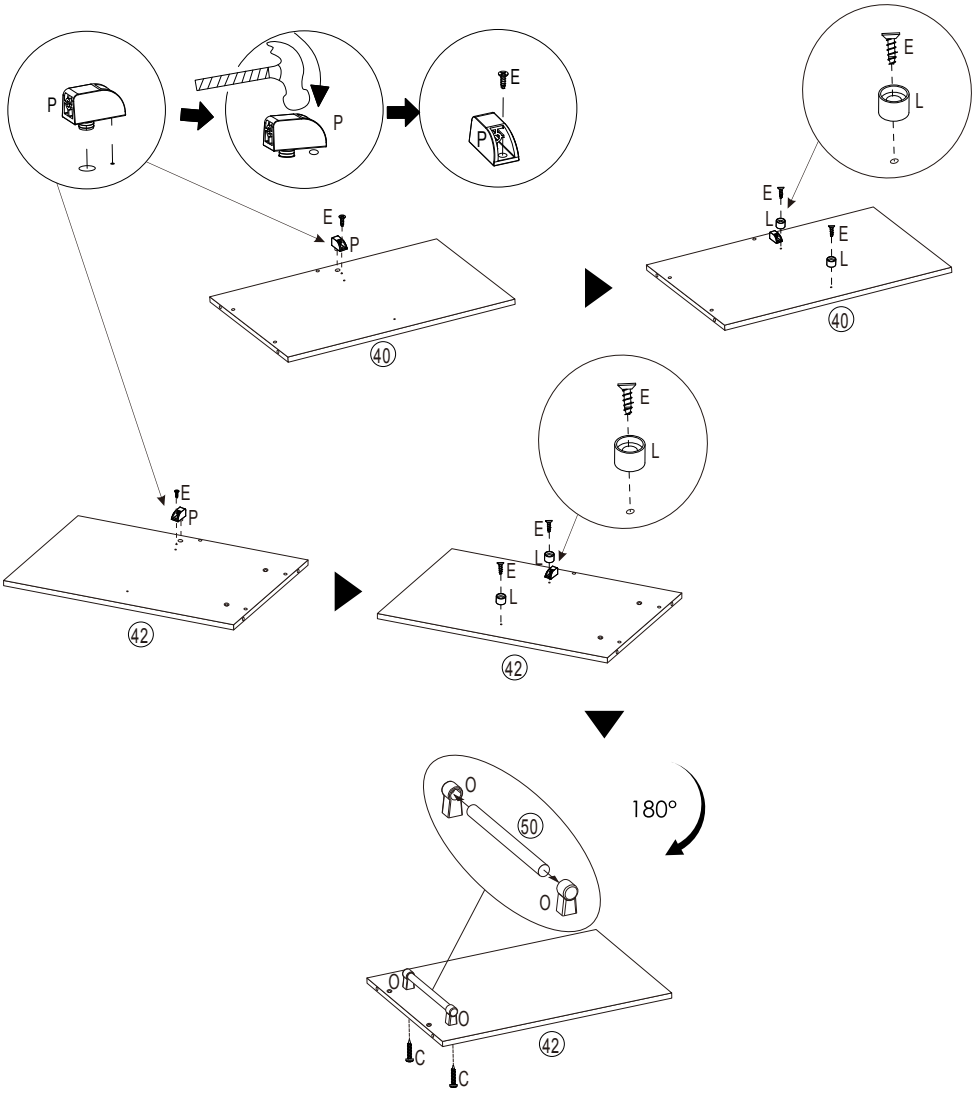

45 Insert one **part F dowel** to p**art 40 island left side,** then attach the side to **part 43 island left back** using one **part C screw. NOTE:** Ensure that the screw is properly aligned and securely fastened into **part P counter support.**

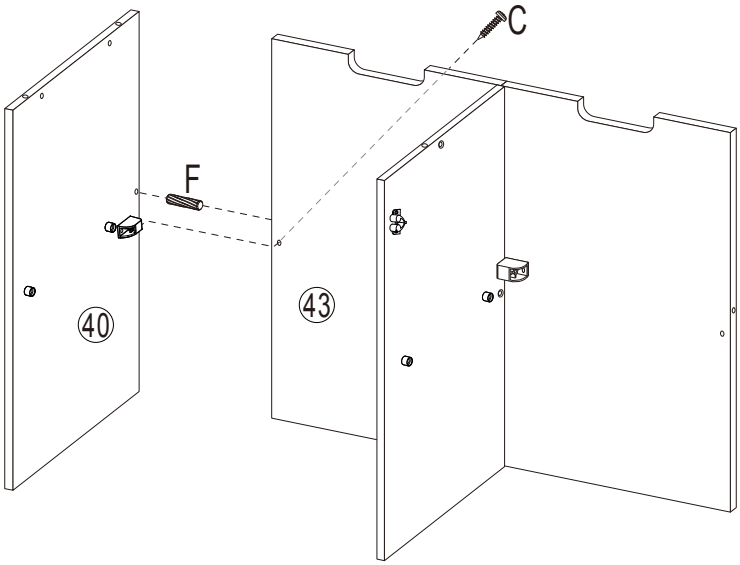

46 Insert one **part F dowel** to p**art 42 island right side,** then attach the side to **part 44 island right back** using one **part C screw.**

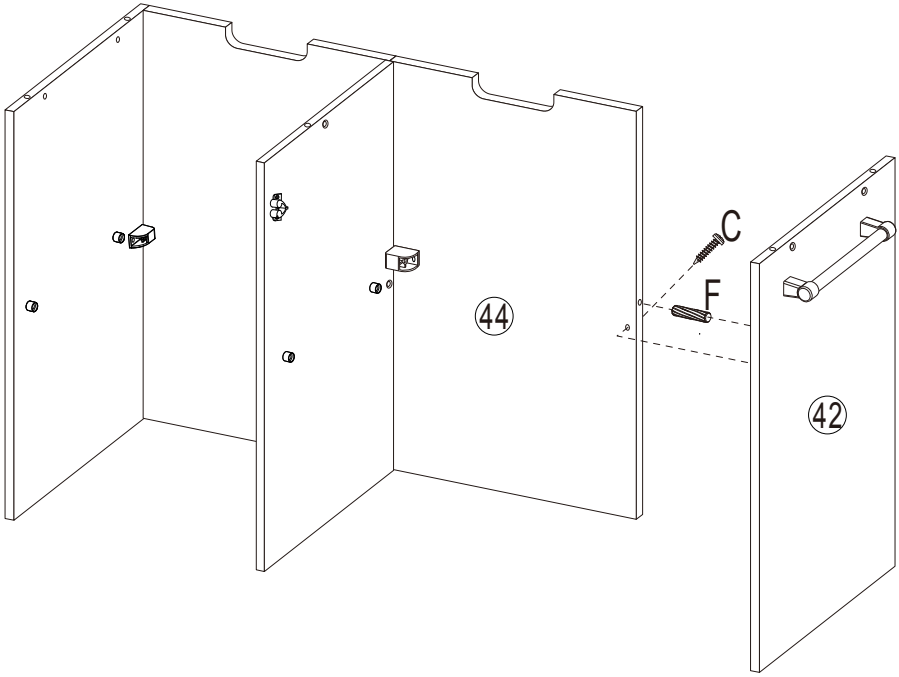



47

Insert eight **part F dowel** into four **part 23 legs,** two dowel per leg.

Insert eight **part H cam locks** into two **part 38 island front skirt** and **two part 39 island side skirt,** two cam locks per skirt.


Connect the four **part 23 legs** to each side of the front and side skirts, then turn the cam locks to secure.

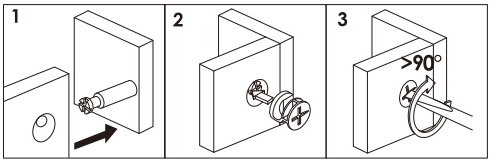

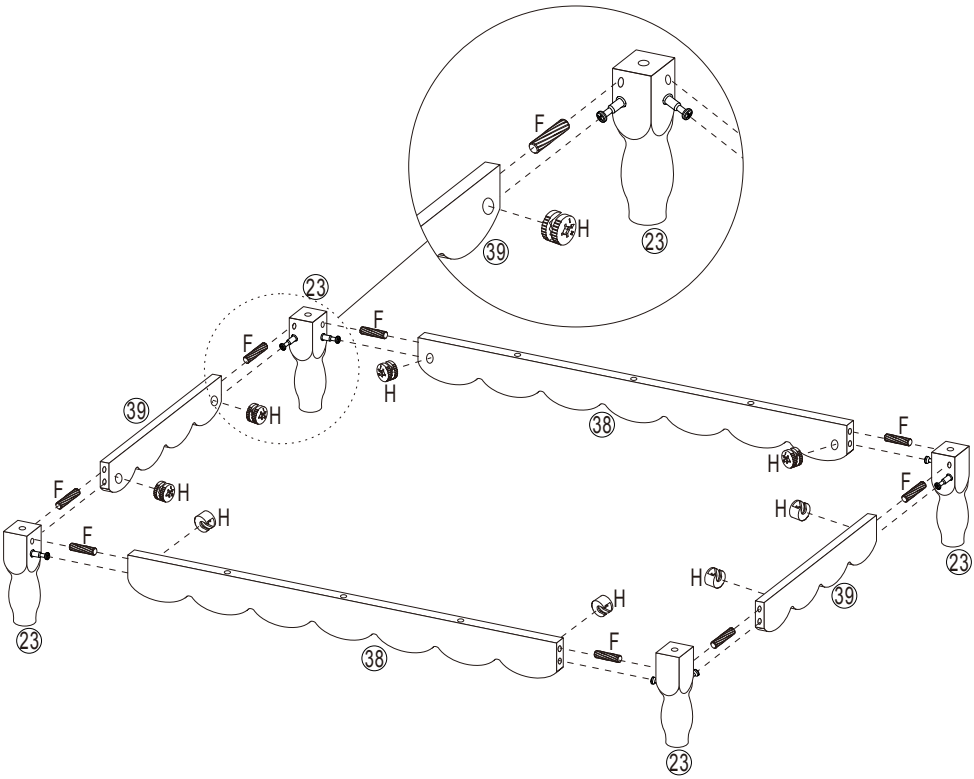


48


Attach two **part J upper hinge receivers** to **part 37 island base** using four **part E screws,** two screws per receiver.

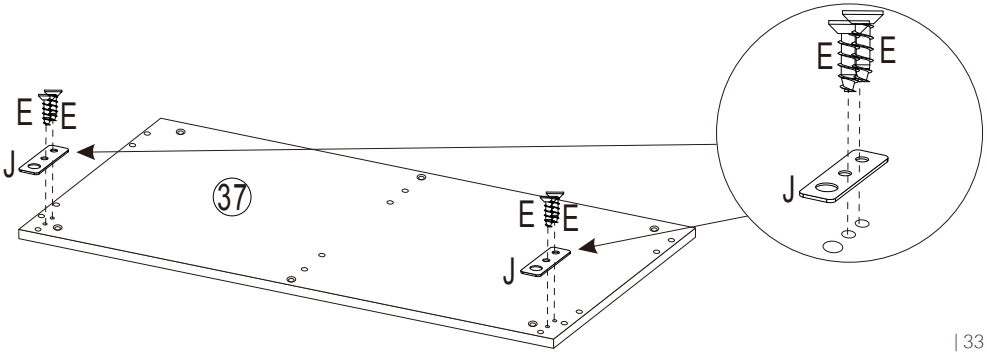

49 | Insert four **part F dowels** into the top of two **part 38 island front skirts,** two dowels per skirt. Attach **part 37 island base** to the leg frame assembly using six **part B screws.**

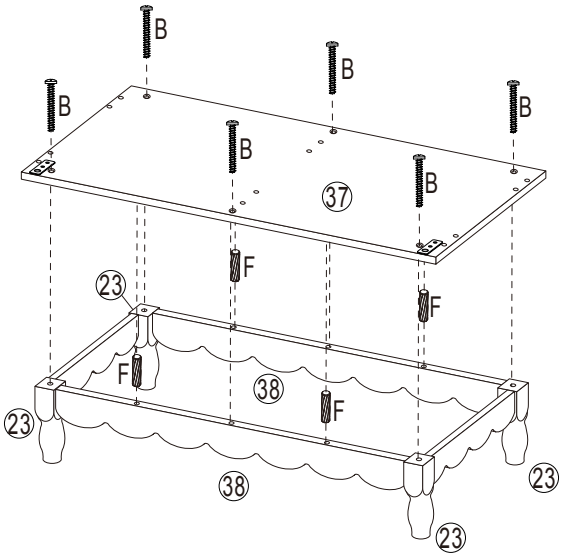


50 | Insert six **part F dowels** into **part 37 island base,** then attach the base beneath the island assembly using six **part B screws.**

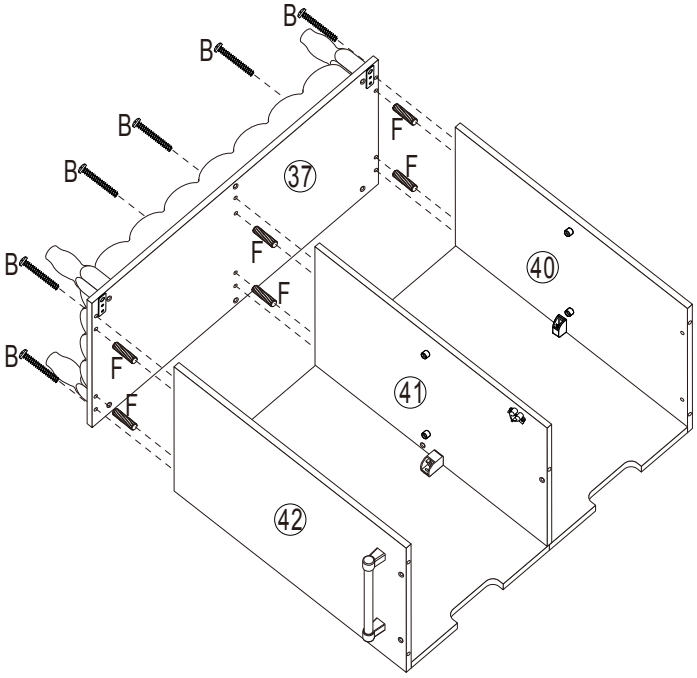

51


Attach two **part J upper hinge receivers** to **part 45 island top** using four **part E screws,** two screws per receiver.

Use a hammer to attach five **part P counter supports** to the bottom of **part 45 island top,** then secure each support using one **part E screw,** five screws total.

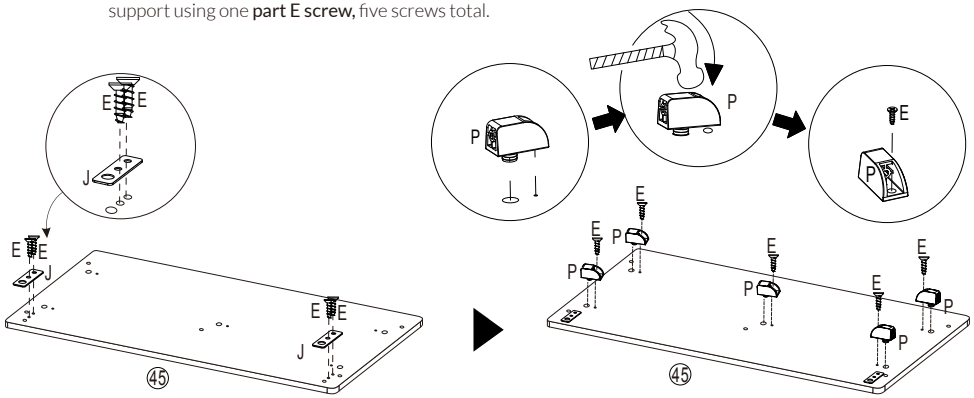

52


Insert five **part F dowels** to **part 45 island top,** then attach the island top to the assembly using five **part C screws.**

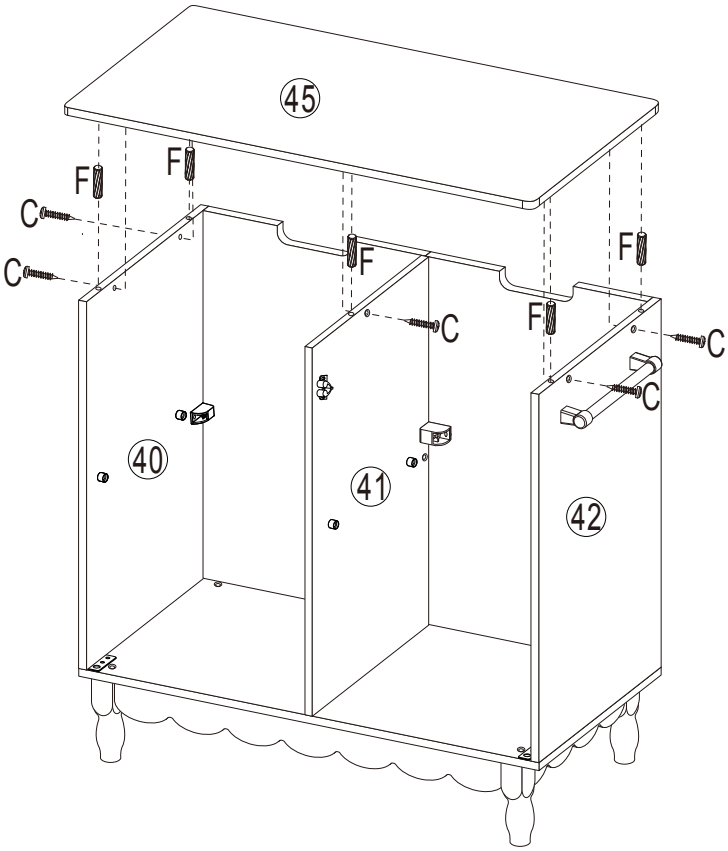

53

Attach one **part M door insert** and one **part I hinge peg** to **part 46 island left door** using four **part E screws.**


Flip the door and attach one **part 52 short bar** using two **part C screws.**

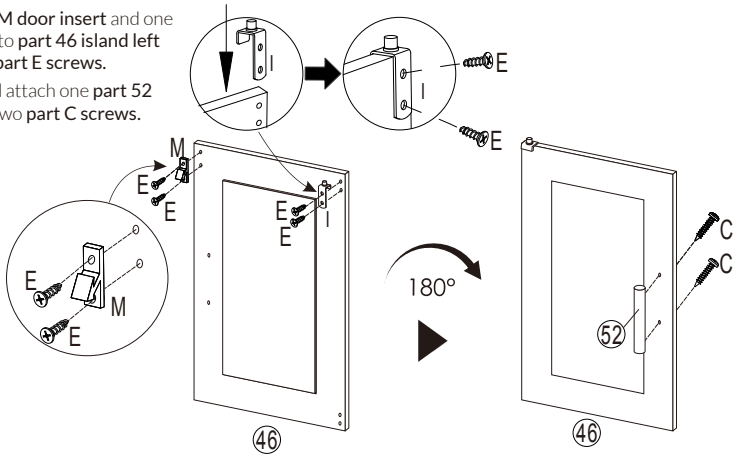

54

Insert the hinge peg on the **part 46 island left door** into the opening on the **part 45 island top.**


Insert one **part I hinge peg** into the opening on the **part 37 island base,** and secure to the **part 46 island left door** using two **part E screws.**

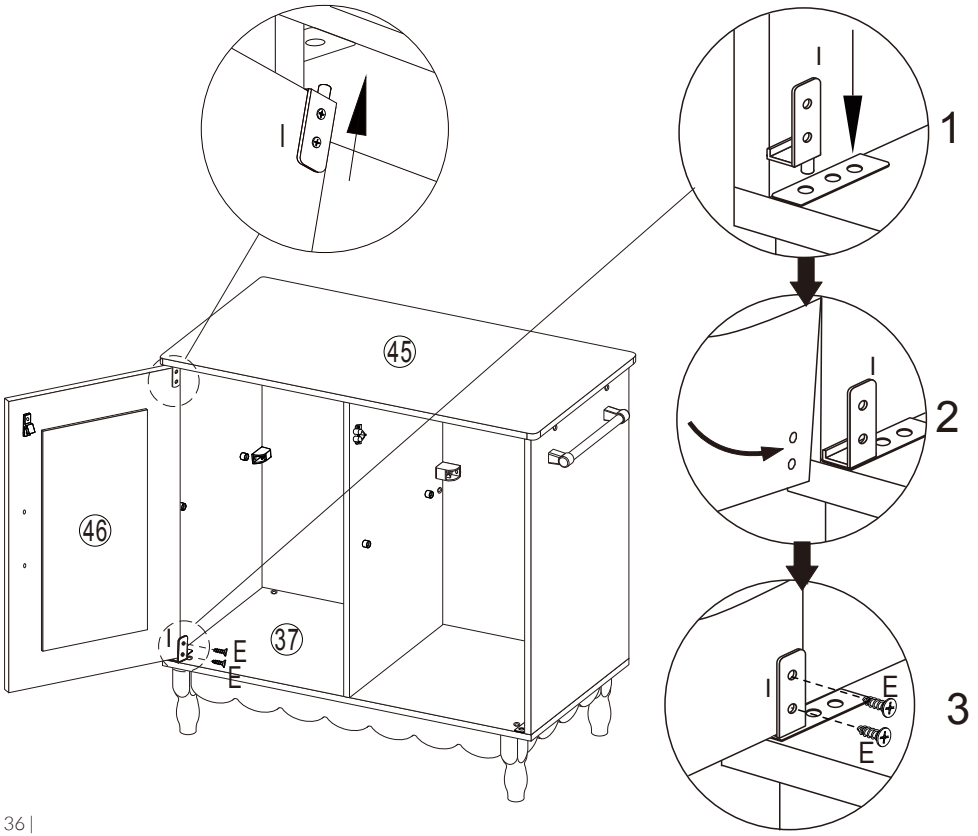

55

Attach one **part M door insert** and one **part I hinge peg** to **part 47 island right door** using four **part E screws.**


Flip the door and attach one **part 52 short bar** using two **part C screws.**

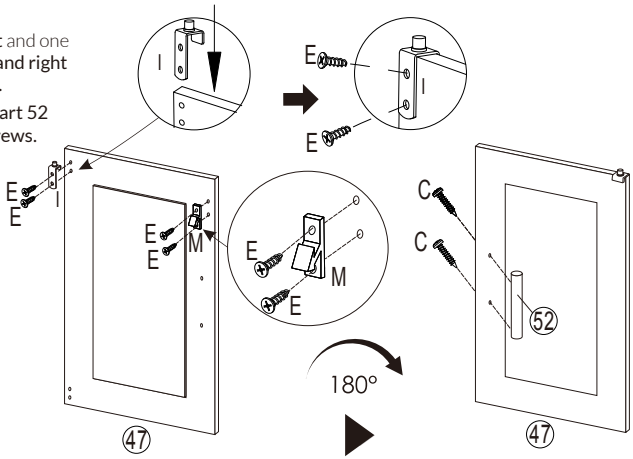

56


Insert the hinge peg on the **part 47 island right door** into the opening on the **part 45 island top.**

Insert one **part I hinge peg** into the opening on the **part 37 island base,** and secure to the **part 47 island right door** using two **part E screws.**

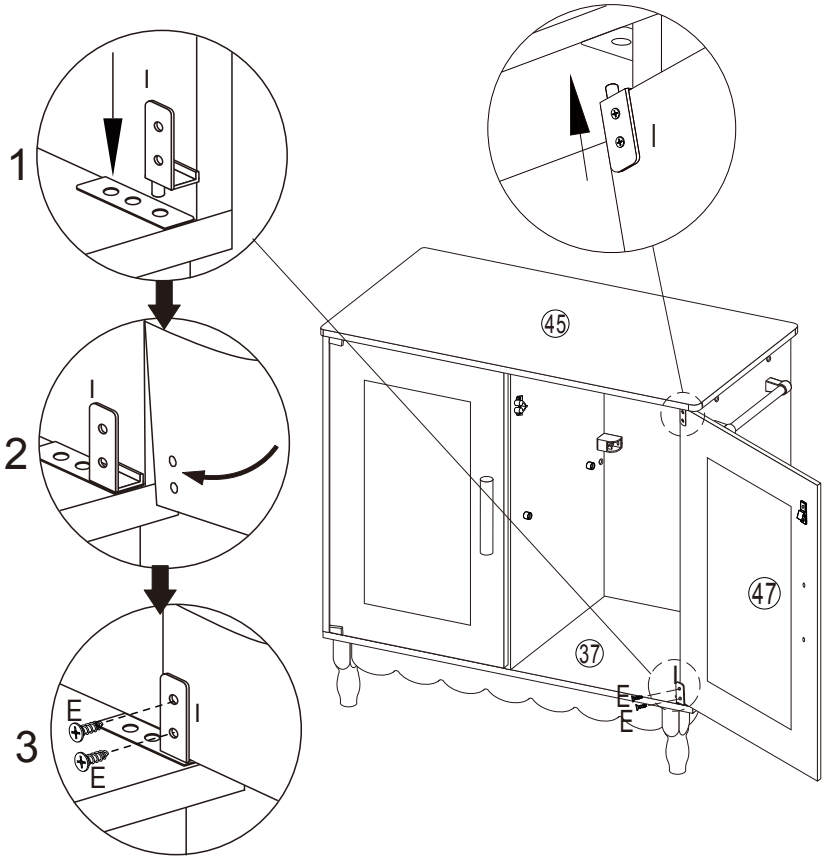


57

Attach two **part 48 island shelves** into the island.

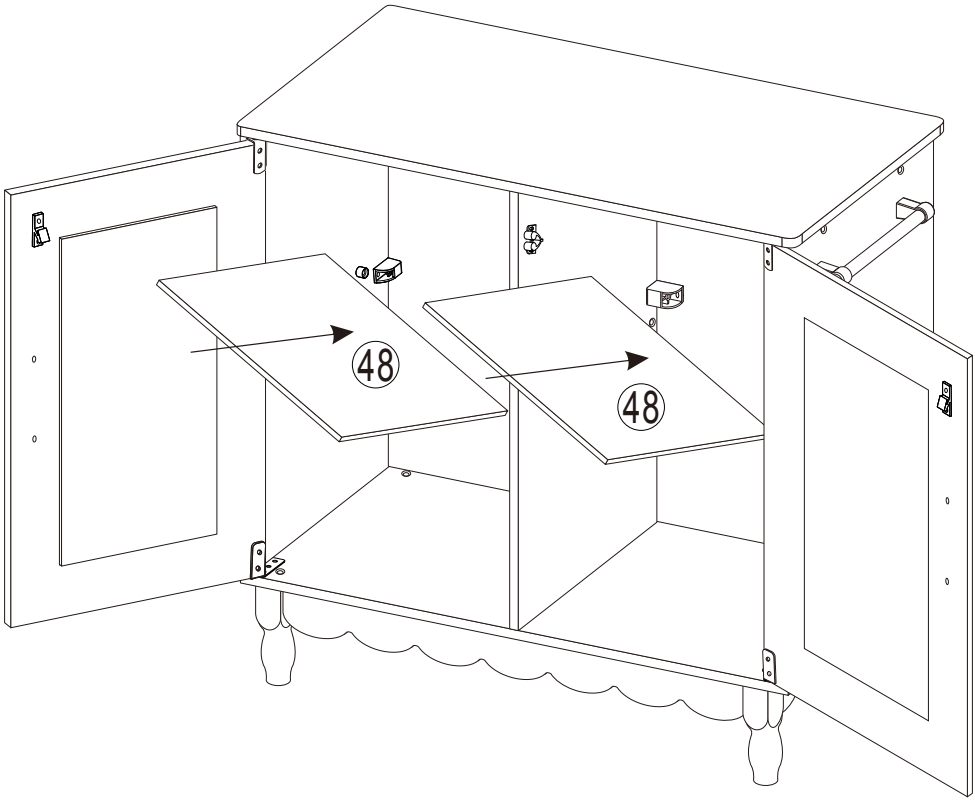

58 Place the island and the provided accessories as desired.

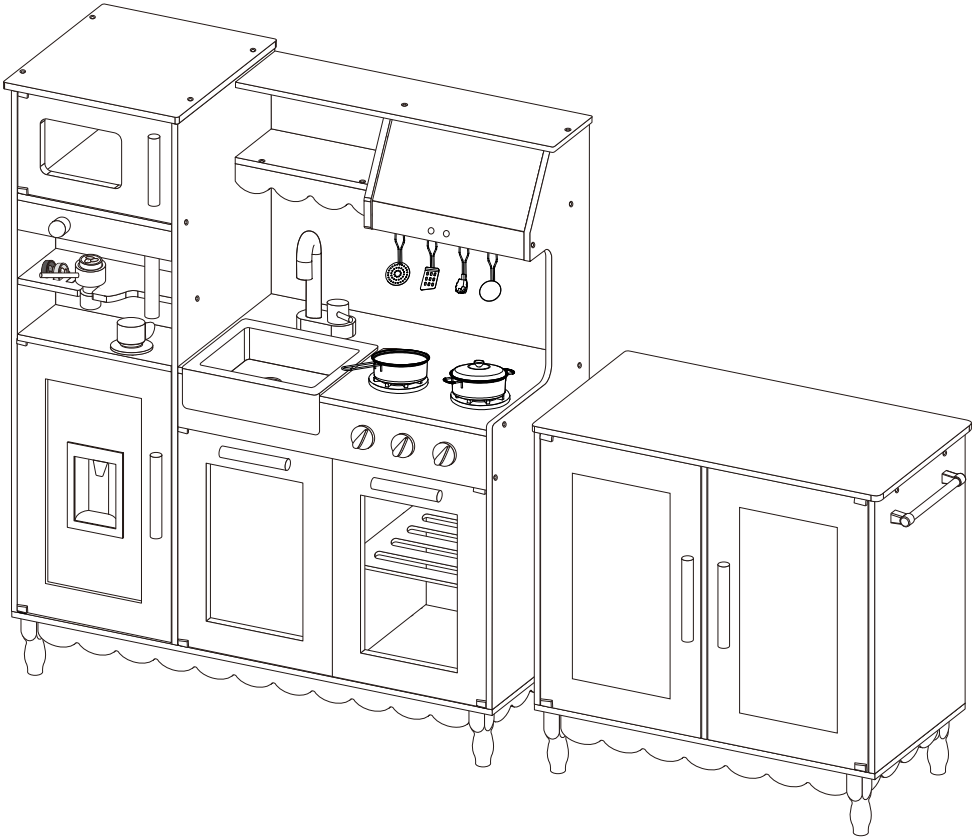

HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support


Product Inquiry


Orders FAQ


Product Assembly


Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.