
BEST CHOICE PRODUCTS

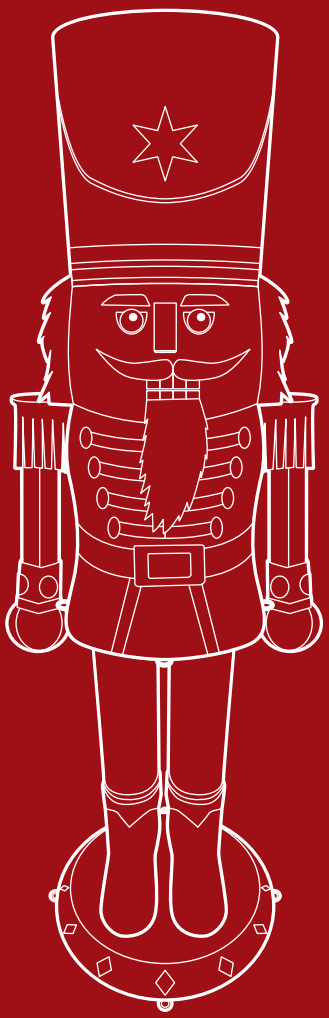

INSTRUCTION MANUAL


5ft 3D Lighted Christmas Nutcracker Soldier

Ver. 1

SKY12228

NOTICE

Please retain these instructions for future reference.

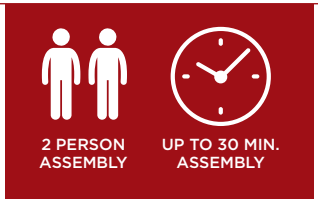


- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.


⚠WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figure.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.

HARDWARE

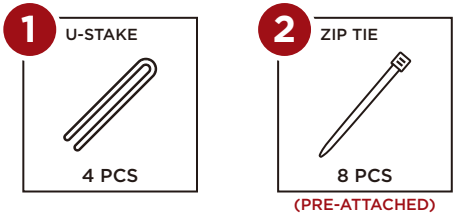


PARTS

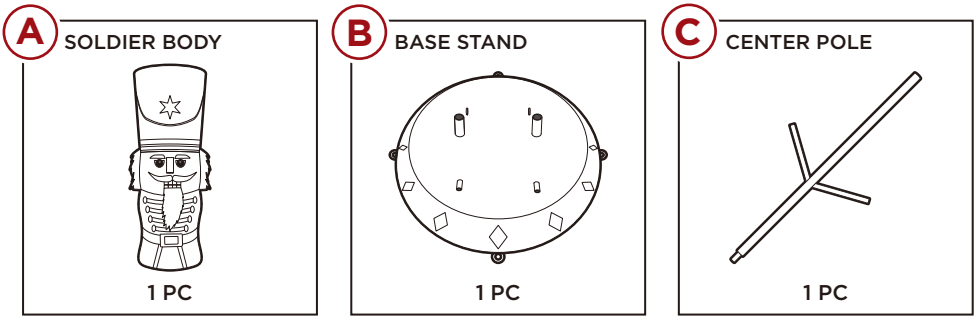


PARTS

D INNER POLE

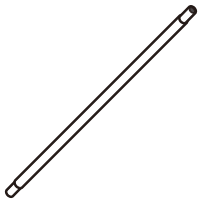


3 PCS

E RIGHT ARM



1 PC

F LEFT ARM



1 PC


G LEGS/FEET



1 PC


PRODUCT ASSEMBLY

1 Place two **part D inner poles** onto the **part B base stand.**

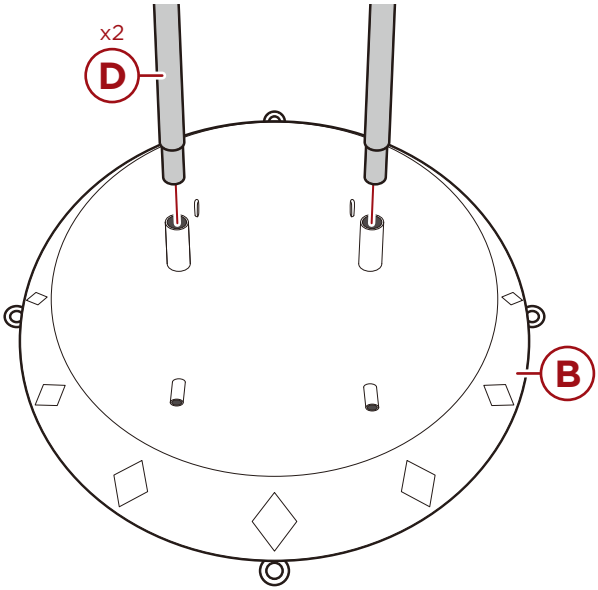


PRODUCT ASSEMBLY

2 Locate the **part G legs/feet** and insert the **part D inner poles,** then secure the feet to the **part B base stand** with two **part 2 zip ties.**

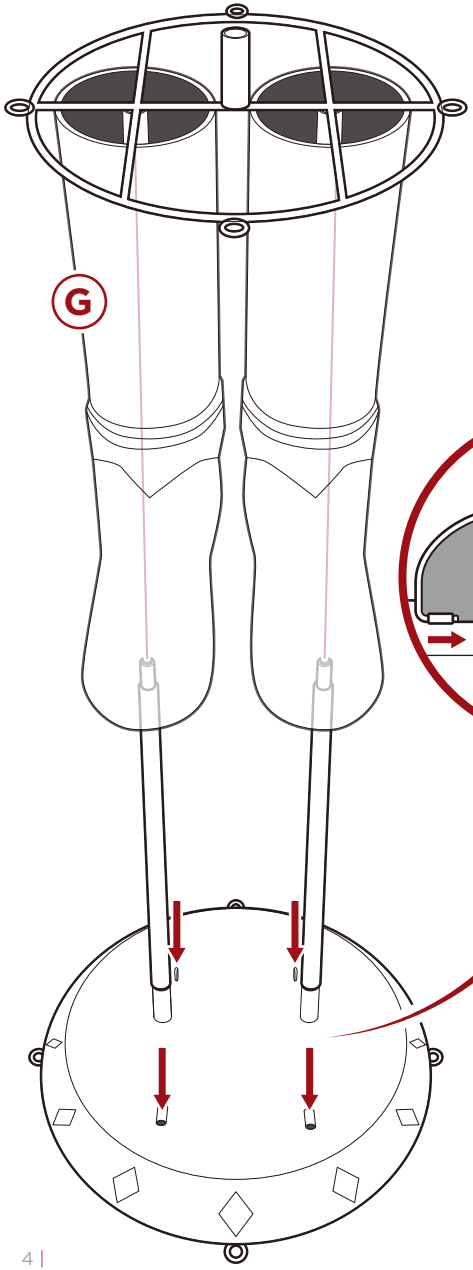

3 Place one **part C center pole** onto the top of the **part G legs/feet,** then attach one **part D inner pole.**

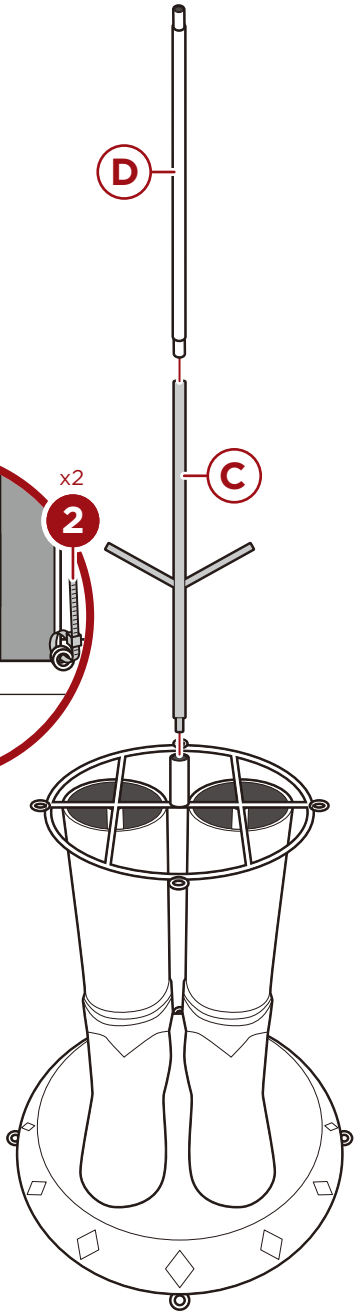


PRODUCT ASSEMBLY

4

Locate the light cords on the **part G legs/feet.** First, connect the light cord from the left leg to the matching light cord on the right leg. Next, connect the remaining light cord on the right leg to the light cord from **part A soldier body.**

Align the top end of **part D inner pole** with the receiver inside the hat of **part A soldier body,** then insert the pole until fully seated.

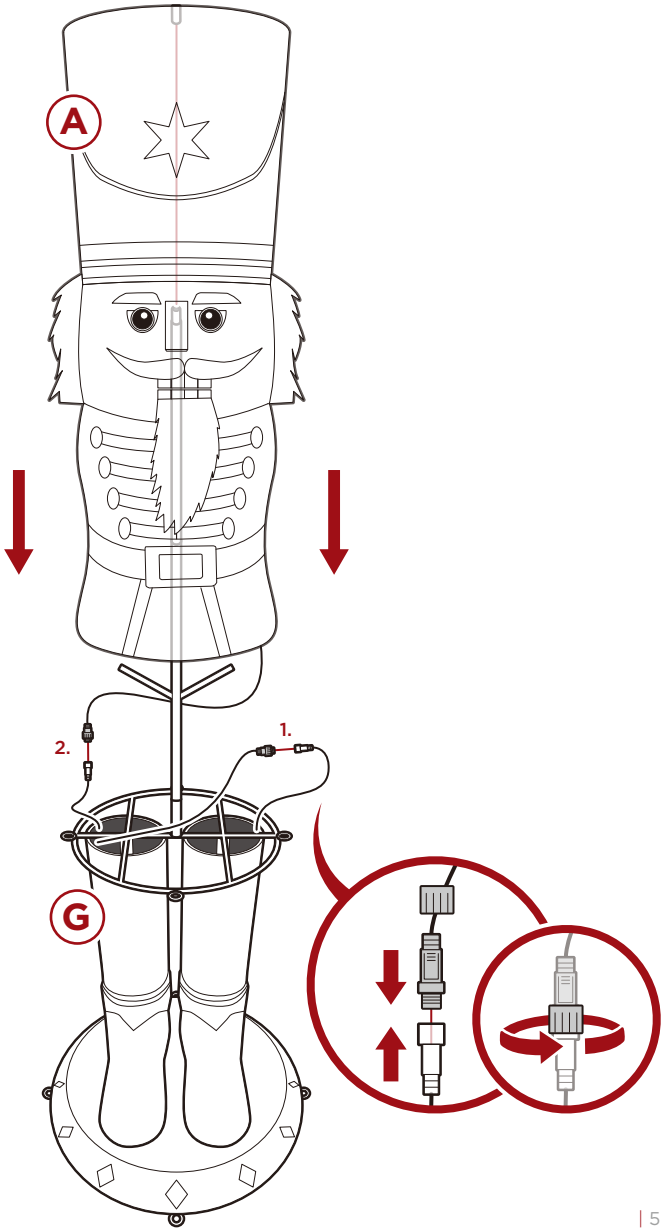


PRODUCT ASSEMBLY

5

Attach the **part E** and **part F right/left arms** to the arms of the **part C center pole.**

Locate the light cords on the **part E** and **part F arms** and connect them to the cords within the **part A soldier body.**

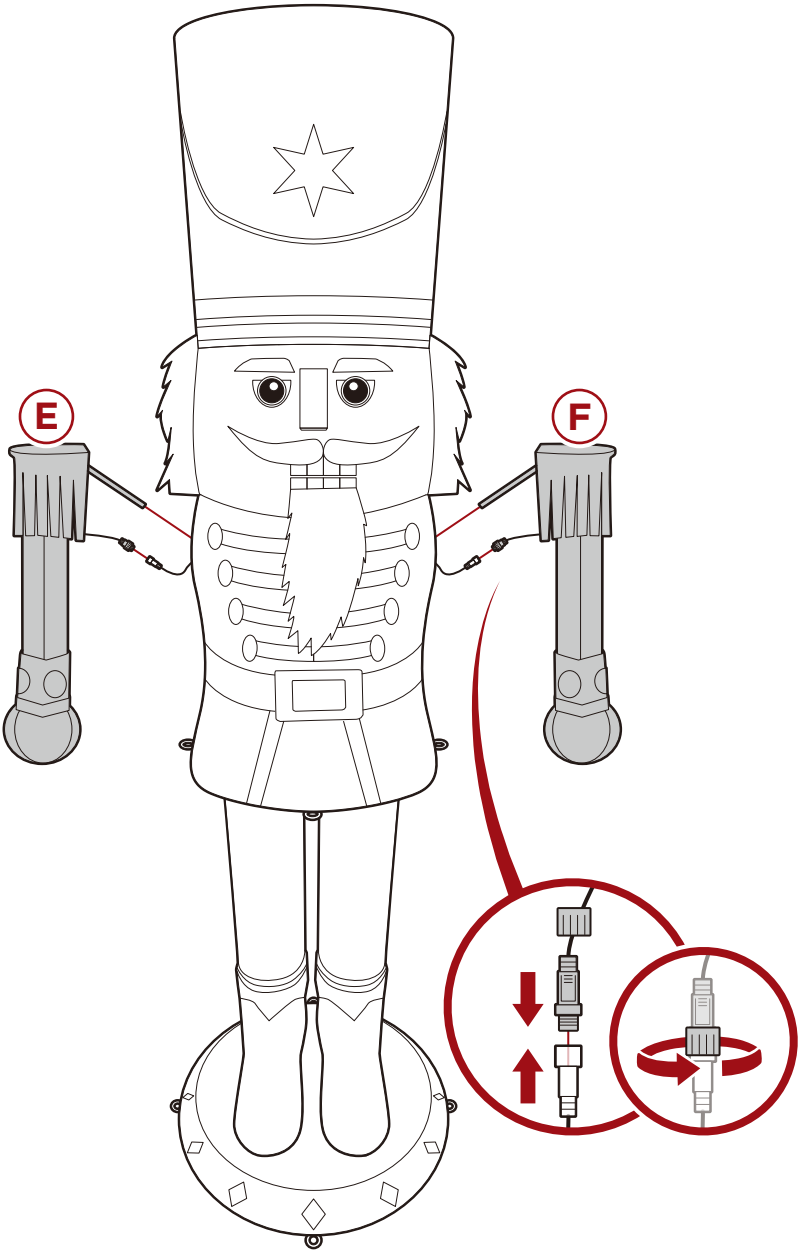


PRODUCT ASSEMBLY

6

Secure the **part A soldier body** to the **part J legs/feet** with four **part 2 zip ties.**

Use four **part 1 u-stakes** to secure the assembled Santa figure to the ground, then plug into a power source to turn on the lights.

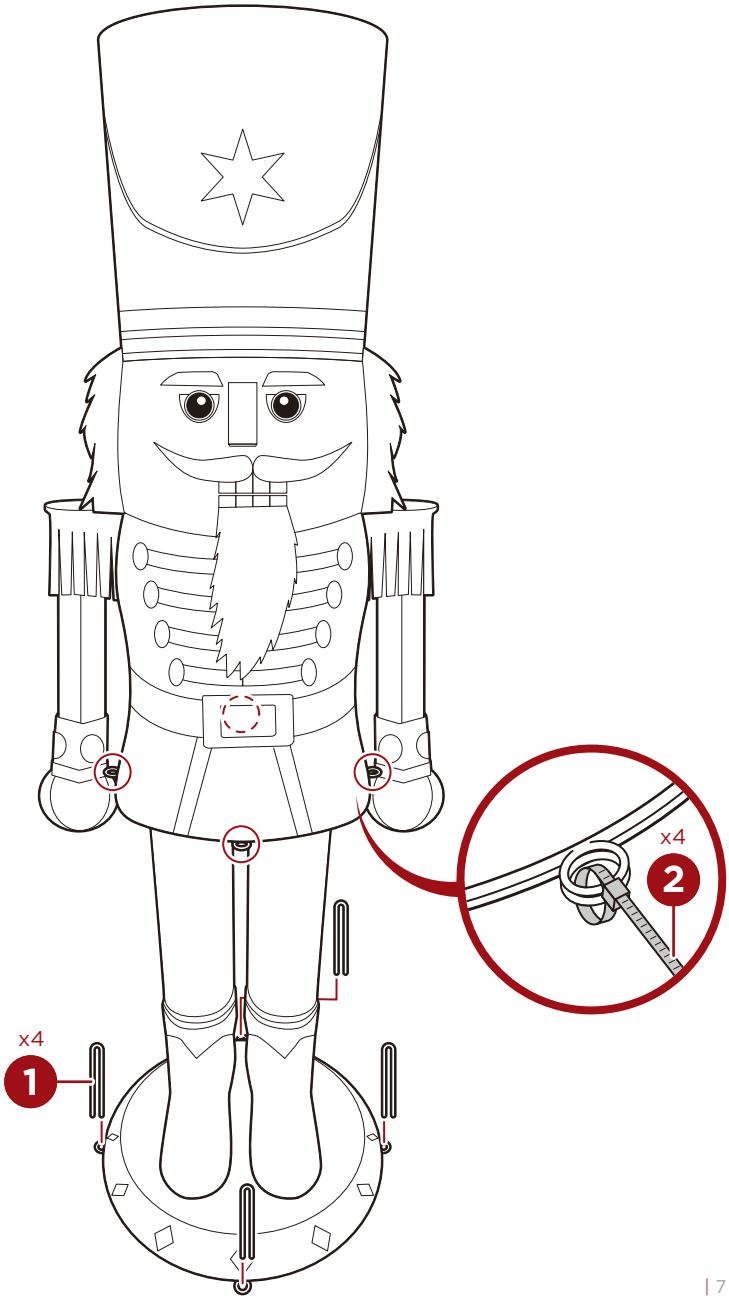

HELP CENTER

Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support


Product Inquiry


Orders FAQ


Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.


Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

BEST CHOICE PRODUCTS

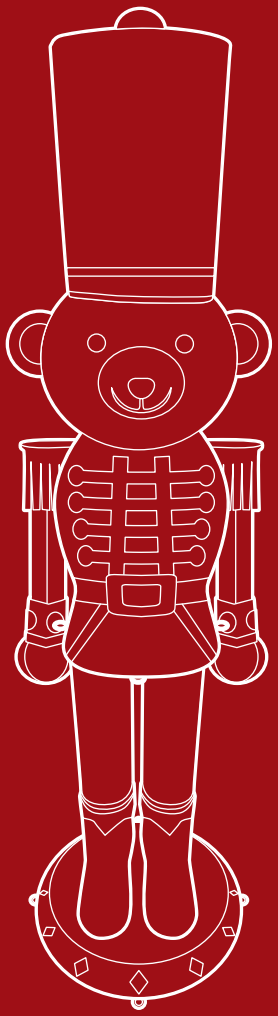

INSTRUCTION MANUAL


5ft 3D Lighted Christmas Nutcracker Bear

Ver. 1

SKY12229

NOTICE

Please retain these instructions for future reference.

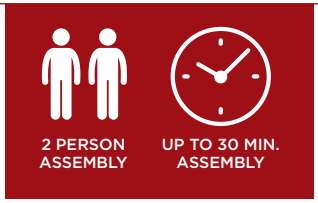


- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.


⚠WARNING

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the figure.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.

HARDWARE

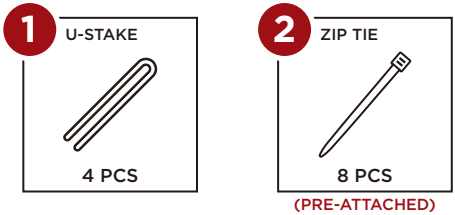


PARTS

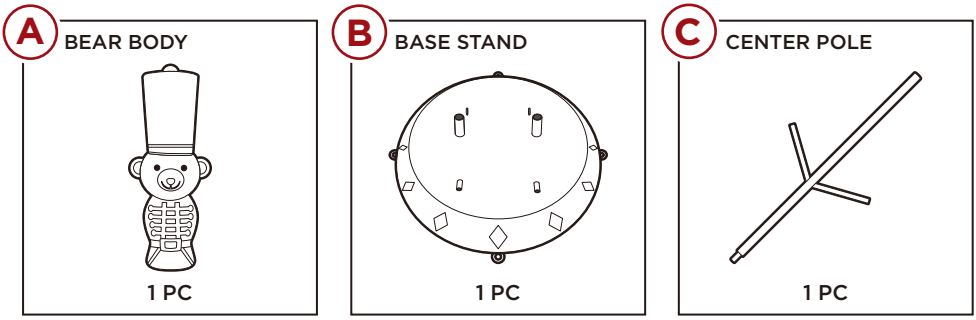


PARTS

D INNER POLE

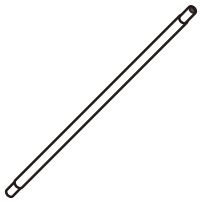


3 PCS

E RIGHT ARM



1 PC

F LEFT ARM



1 PC


G LEGS/FEET



1 PC


PRODUCT ASSEMBLY

1 Place two **part D inner poles** onto the **part B base stand.**

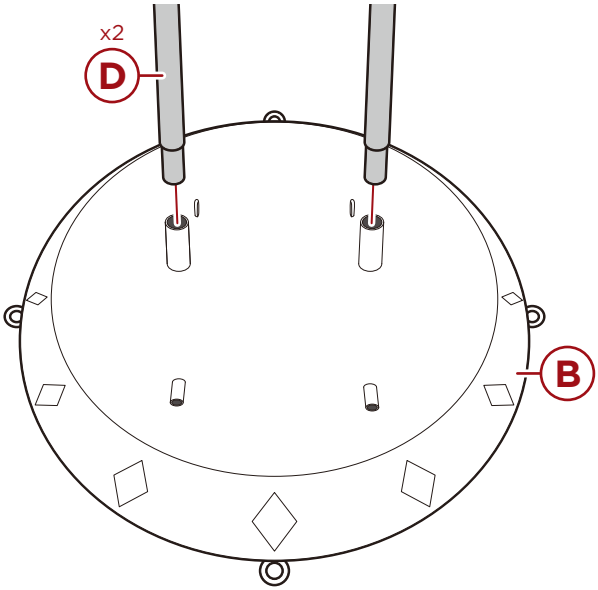


PRODUCT ASSEMBLY

2 Locate the **part G legs/feet** and insert the **part D inner poles,** then secure the feet to the **part B base stand** with two **part 2 zip ties.**

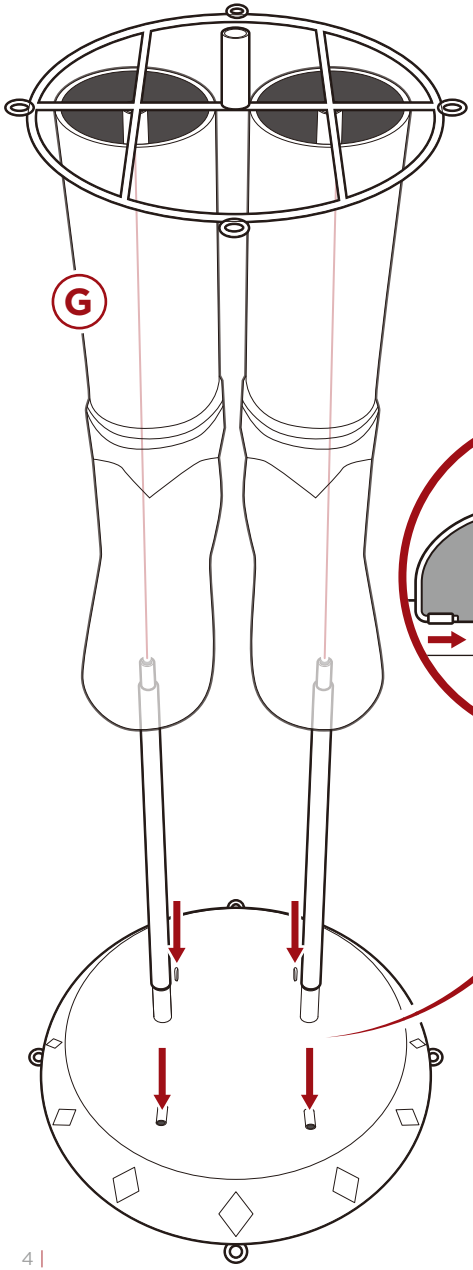

3 Place one **part C center pole** onto the top of the **part G legs/feet,** then attach one **part D inner pole.**

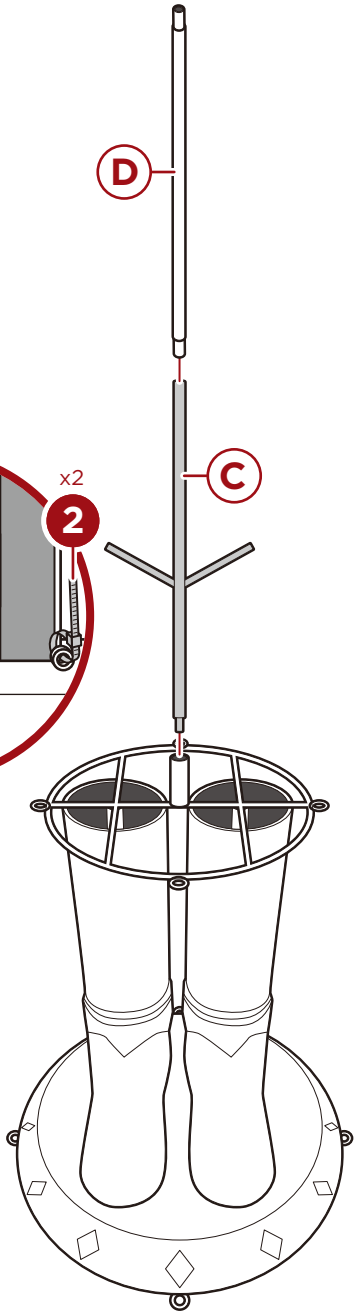


PRODUCT ASSEMBLY

4

Locate the light cords on the **part G legs/feet.** First, connect the light cord from the left leg to the matching light cord on the right leg. Next, connect the remaining light cord on the right leg to the light cord from **part A bear body.**

Align the top end of **part D inner pole** with the receiver inside the hat of **part A bear body,** then insert the pole until fully seated.

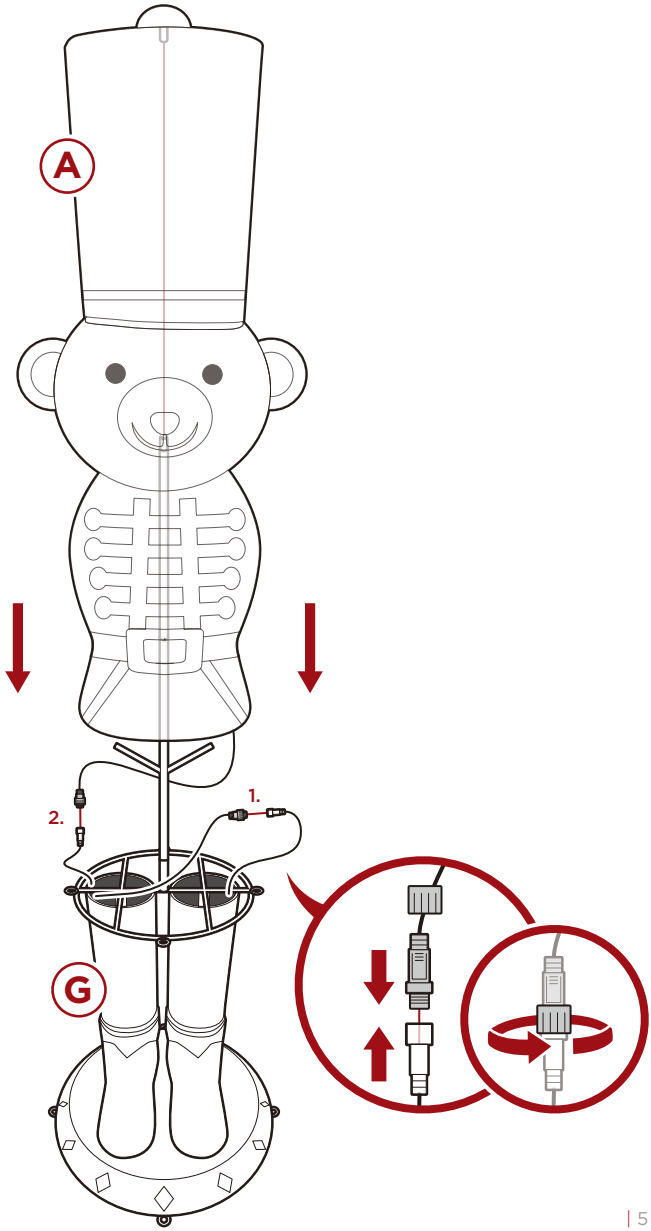


PRODUCT ASSEMBLY

5

Attach the **part E** and **part F right/left arms** to the arms of the **part C center pole.**

Locate the light cords on the **part E** and **part F arms** and connect them to the cords within the **part A bear body.**

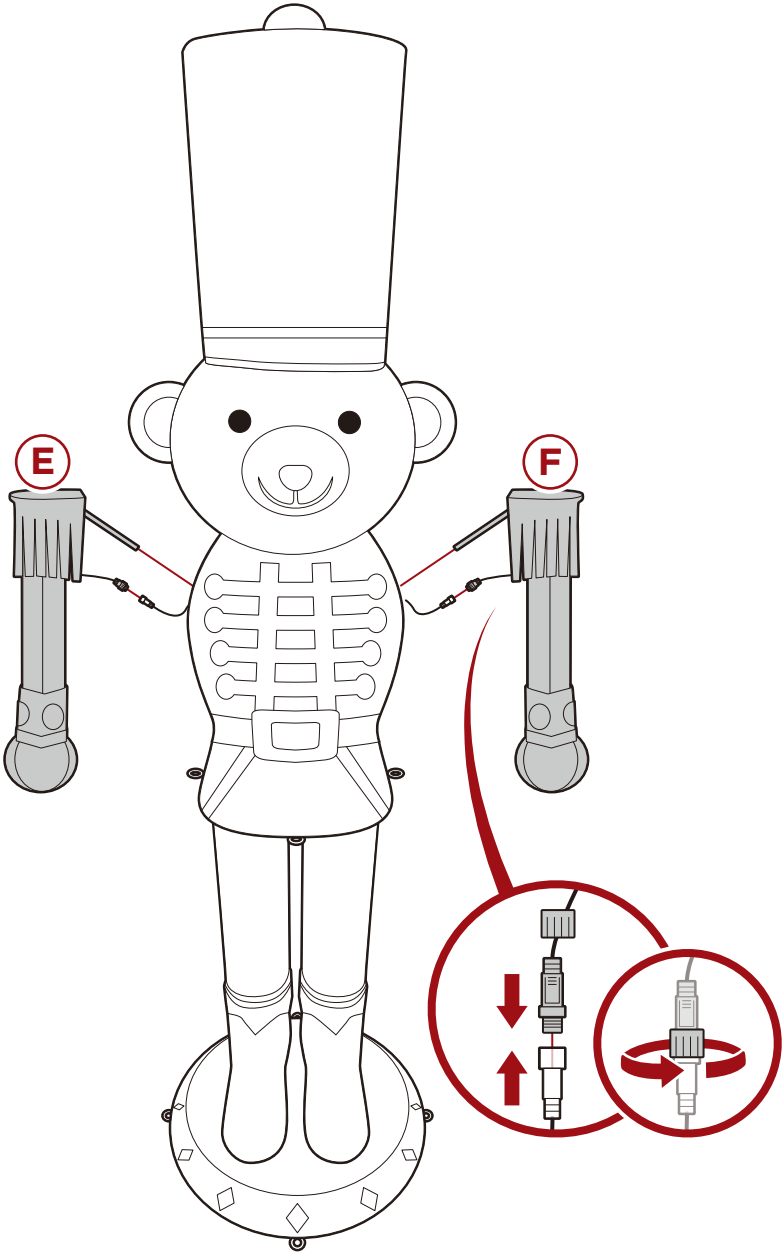


PRODUCT ASSEMBLY

6

Secure the **part A bear body** to the **part J legs/feet** with four **part 2 zip ties.**

Use four **part 1 u-stakes** to secure the assembled Santa figure to the ground, then plug into a power source to turn on the lights.

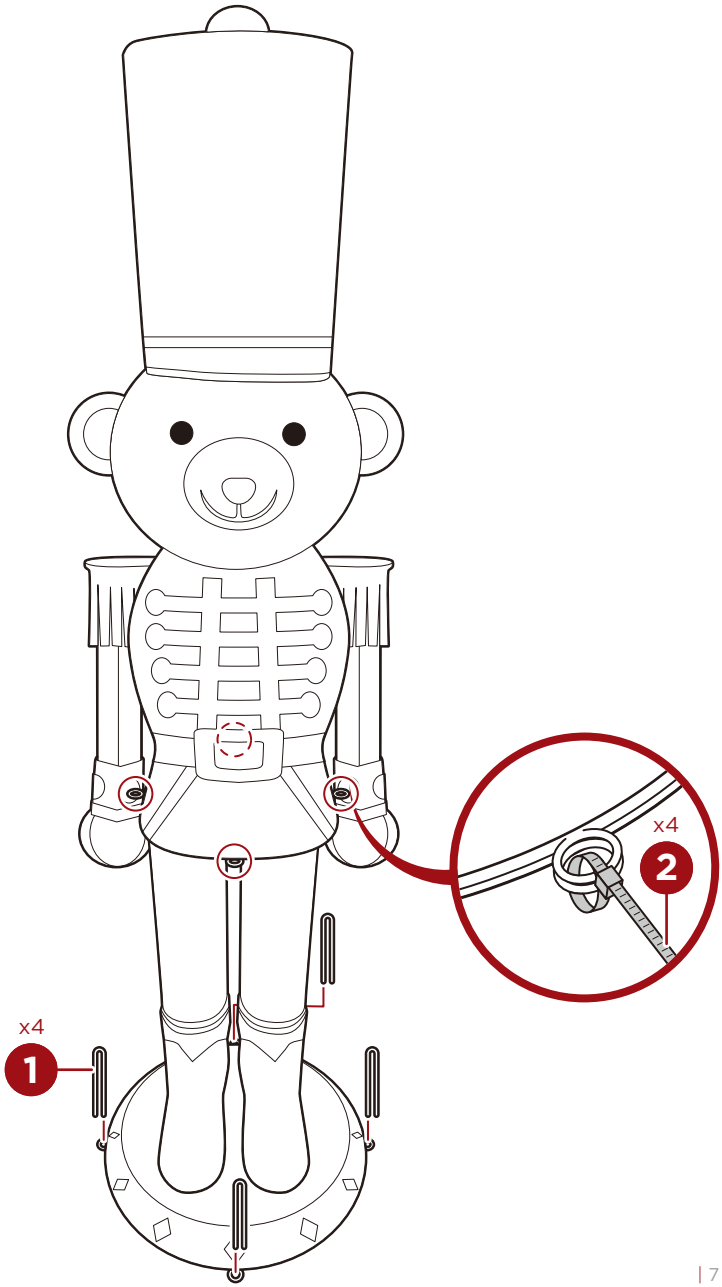

HELP CENTER

Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support


Product Inquiry


Orders FAQ


Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

⚠WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.