SIMPLIHOME

Acadian / Normandy / Brunswick

40W Medium Storage Cabinet with 1 Drawer and 2 Doors

Model # AXCACA40SC-XXX



brooklyn + max™

Wyndenhall™ Home Decor

SIMPLIHOME

Claim Your Free Gift

Your opinion pays: Earn a gift!

Review your purchase and receive a gift.* It could be a gift card, Simpli Rewards points, or another special reward.

CLAIM YOUR REWARD NOW! ▶

simpli-home.com/get-free-gift



**Offer valid for reviews posted within 30-days of purchase.*

SIMPLIHOME

Need Help With Assembly?


Assembly made easy: book a Tasker!

We've teamed up with Taskrabbit for furniture assembly.* Choose your service, check out, and a background-checked Tasker will build it for you at a fixed, upfront price.

1. Scan the QR code or visit the link below.
2. Add your assembly service to the task cart.
3. Check out and schedule a time that suits you.

BOOK A TASKER NOW! ▶

simpli-home.com/assembly

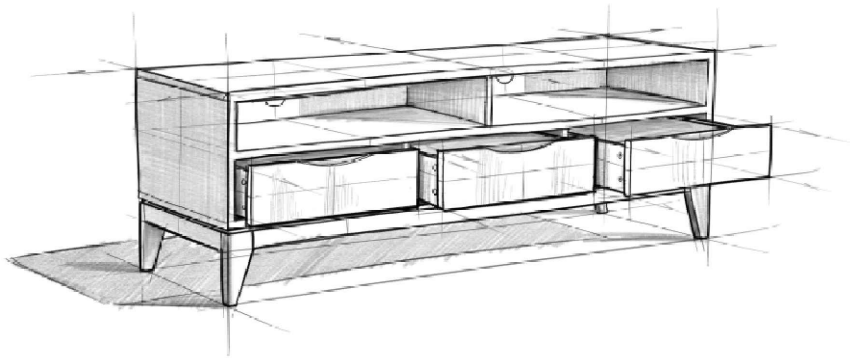

**Taskrabbit is an independent third-party service.*

SIMPLIHOME

For Fastest Customer Service:

1. Open your phone's camera.
2. Point your phone's camera at the QR code to scan.
3. Click on the pop up.
4. You'll be taken to our customer service page.
5. Fill the form with your order information and issue.
6. Submit form.
7. A customer service associate will contact you.

Other ways to contact us…



Email Us

customerservice@simpli-home.com



Visit Us

Visit our site directly at
www.simpli-home.com



Call Us

1-866-518-0120
Monday to Friday
9am to 5pm EST

***If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Safety Information

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

Care & Maintenance

This furniture is designed for indoor use.

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger but lose moisture more slowly than other finishes.


To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Don't over-humidify; that can damage wood by causing it to expand and contract
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp
- If you can avoid it, don't put furniture near heating vents; if you can’t, keep the item 3 to 4 inches away from the wall, giving the heat and air space to circulate
- Dust with soft dry cloth
- Do not use liquid or aerosol products
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry
- Do not use abrasive cleaners

Pre-Assembly Information


Part Description

V16-A

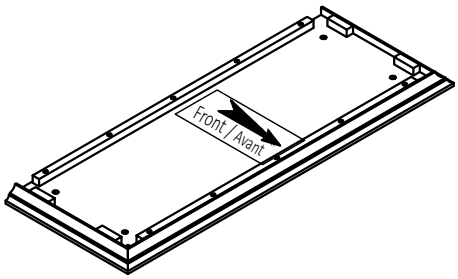


TOP
QTY 1

V16-BL

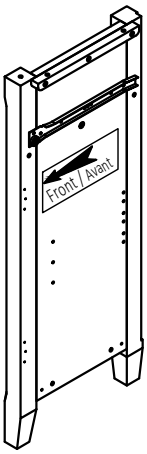


LEFT SIDE
QTY 1

V16-BR

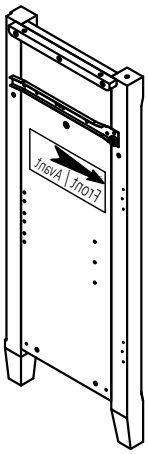


RIGHT SIDE
QTY 1

V16-C

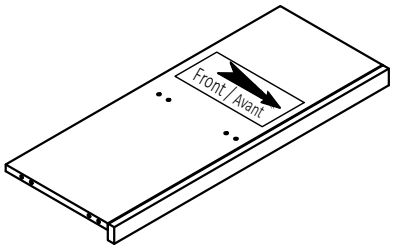


BOTTOM SHELF
QTY 1

V16-D

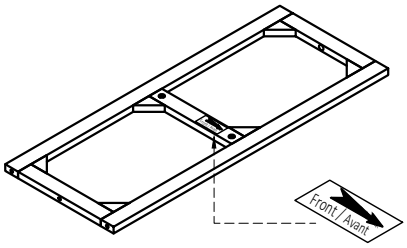


MIDDLE FRAME
QTY 1

V16-E

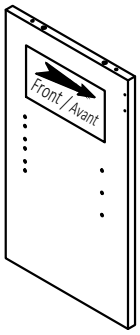


DIVIDER
QTY 1

V16-F

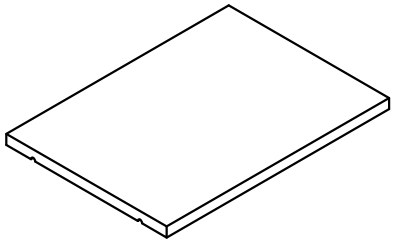


CABINET SHELF
QTY 2

V16-G

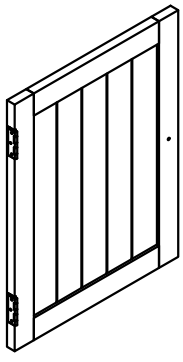

DOOR
QTY 2

V16-HL

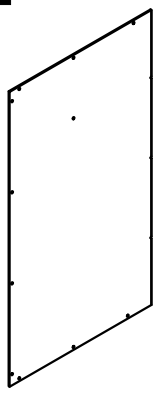


LEFT BACK PANEL
QTY 1

Pre-Assembly Information


Part Description

V16-HR

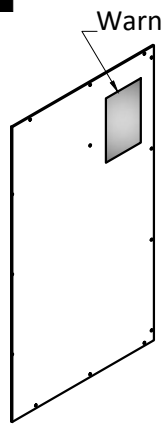


RIGHT BACK PANEL
QTY 1

V16-I

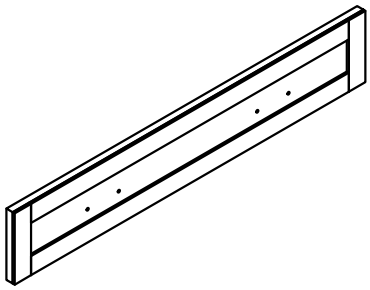


DRAWER FRONT
QTY 1

V16-JL

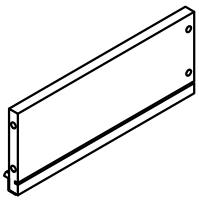


LEFT DRAWER SIDE
QTY 1

V16-JR

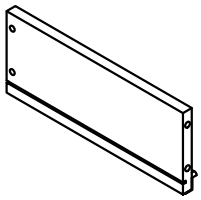


RIGHT DRAWER SIDE
QTY 1

V16-K

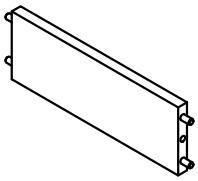


DRAWER DIVIDER
QTY 1

V16-L

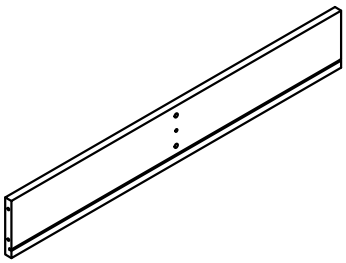

DRAWER BACK
QTY 1

V16-M

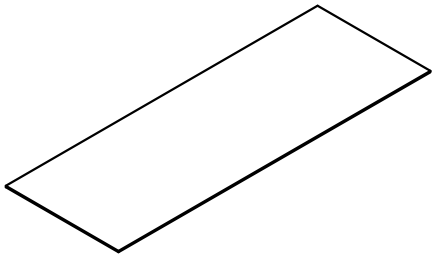

DRAWER BOTTOM
QTY 1

V16-N



SUPPORT DRAWER BOTTOM
QTY 1

Pre-Assembly Information


Hardware Description

1




WOOD DOWEL
Ø8 X 30mm
QTY 14

2




ALLEN KEY SCREW
Ø6 X 30mm
QTY 8

3




CAM LOCK PIN
CAM LOCK
QTY 9 SETS

4




ALLEN KEY BOLT
M6 X 35mm
QTY 6

5




ALLEN KEY
QTY 1

6

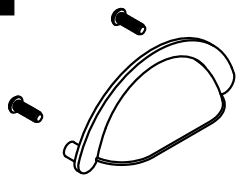


HANDLE
M4 X 15mm
QTY 2 SETS

7

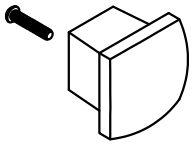


HANDLE
M4 X 25mm
QTY 2 SETS

8




PHILLIPS SCREW
ROUND HEAD
Ø4 X 30mm
QTY 3

9




PHILLIPS SCREW
Ø3 X 15mm
QTY 12

10

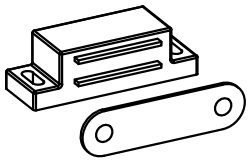


MAGNET AND PLATE
QTY 2 SETS

11




PHILLIPS SCREW
Ø3 X 15mm
QTY 8

12




PHILLIPS SCREW
ROUND HEAD
Ø4 X 15mm
QTY 25

13

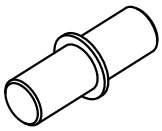


SHELF SUPPORT
QTY 12

14

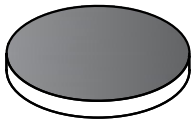


FELT PAD
QTY 4

15

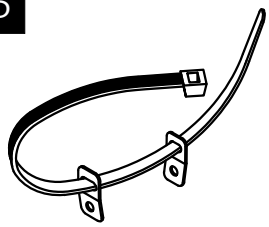


a.  Ø4 X 25mm - QTY 2
(1 is extra)
b.  Ø4 X 15mm - QTY 1
c.  Ø4 X 25mm - QTY 1


FURNITURE TIP OVER RESTRAINT
QTY 1 SET

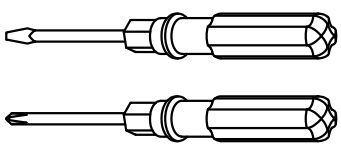

Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

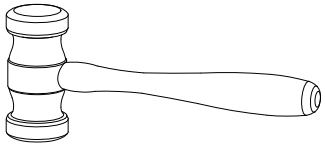


Components - Key Diagram

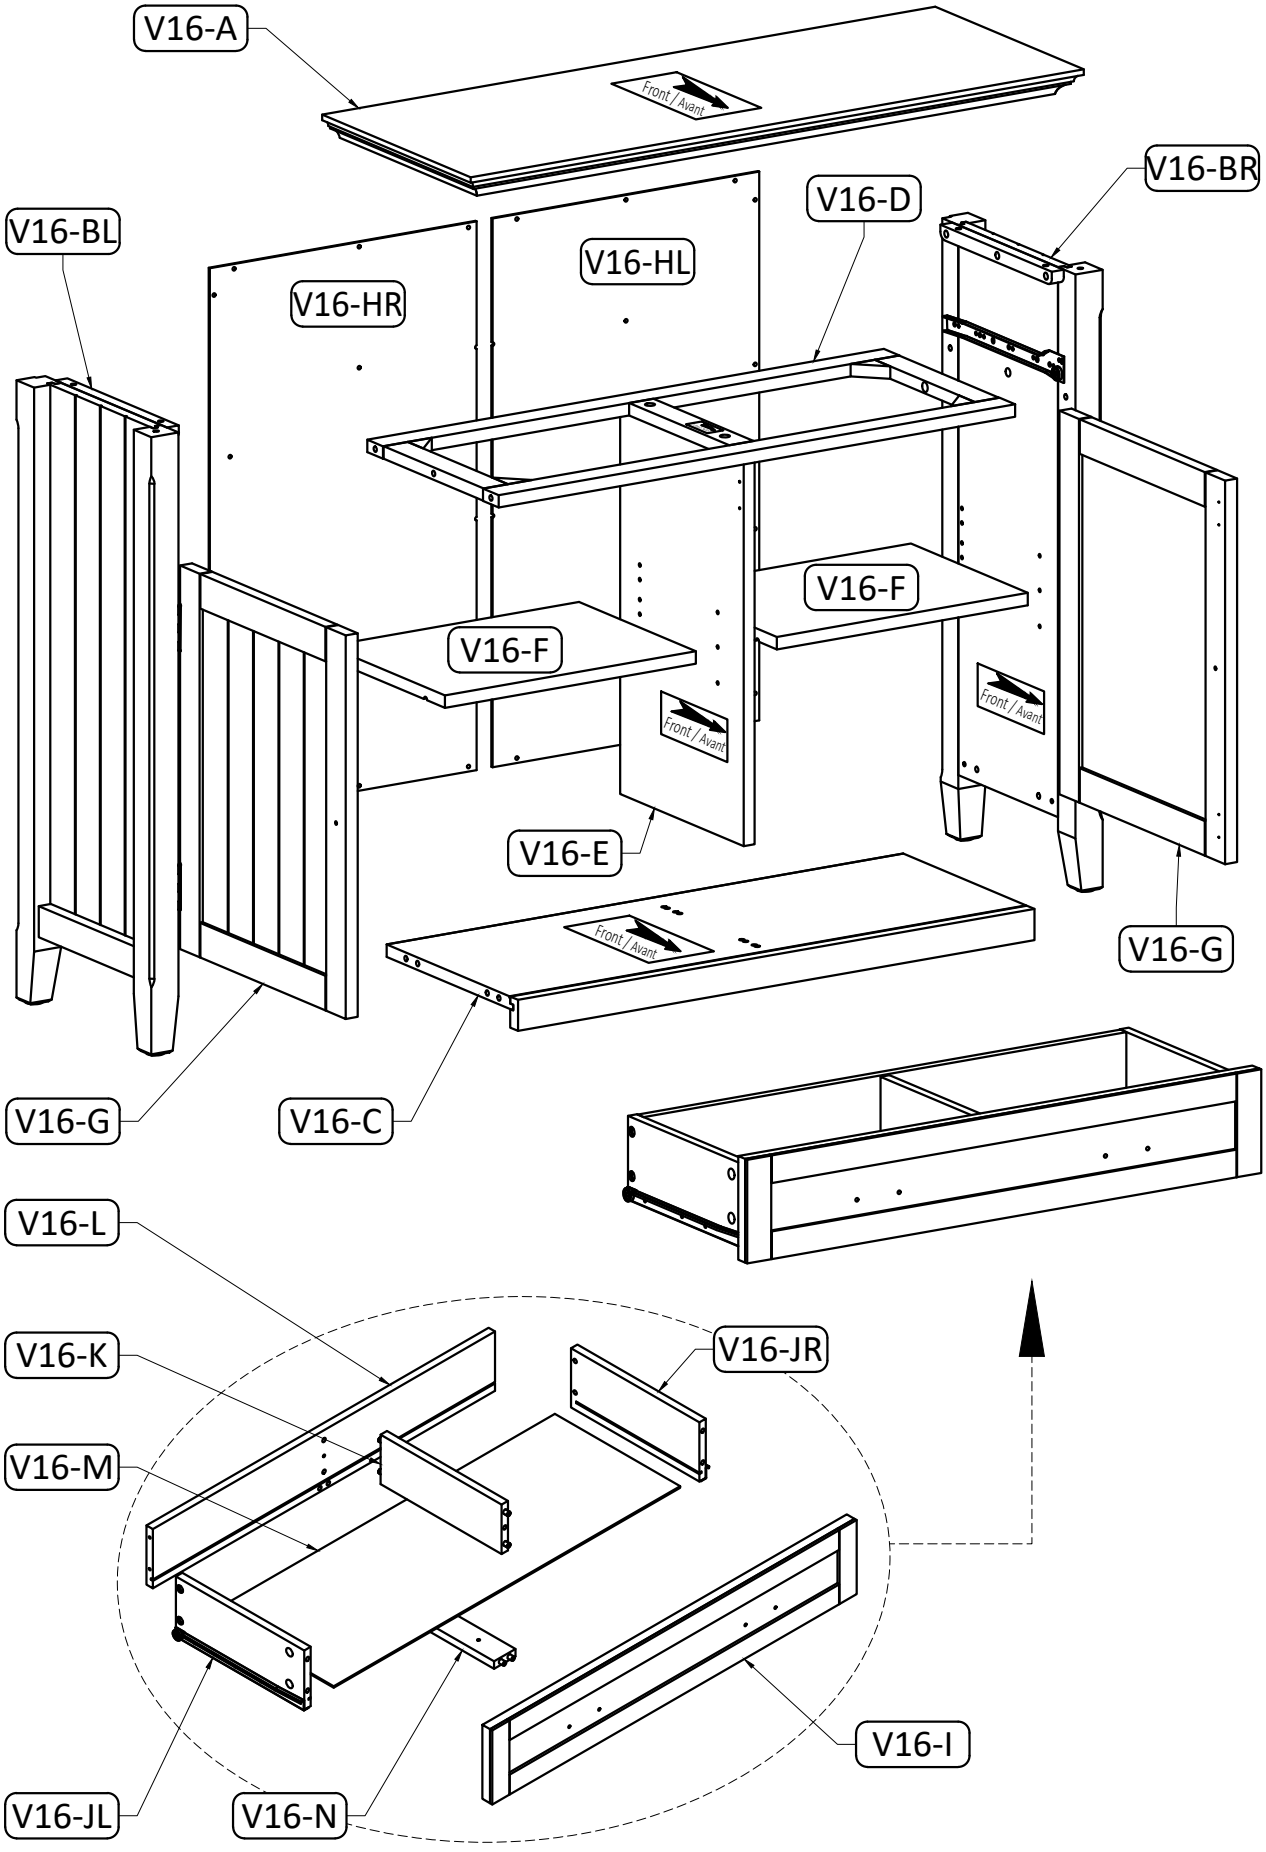


Assembly

Step 1

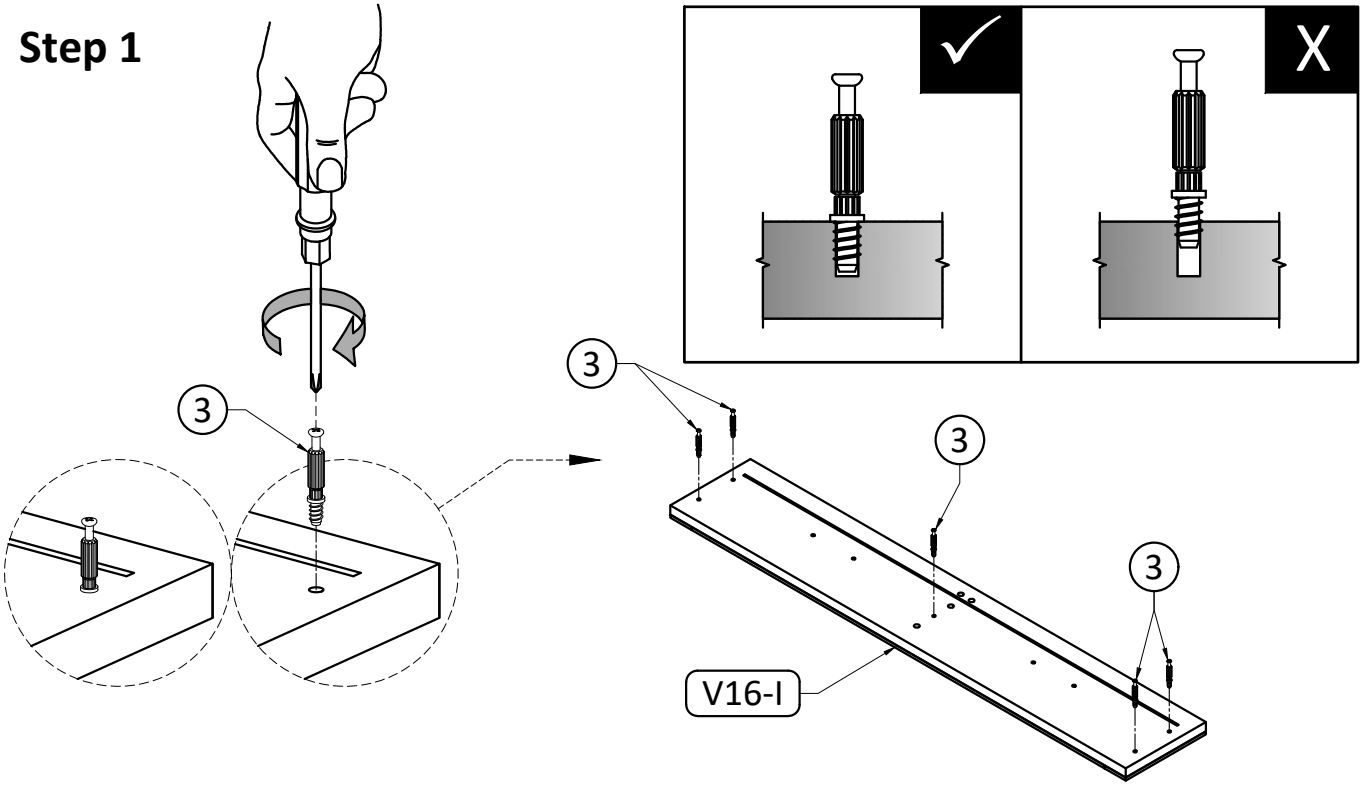

1. Attach four Cam Lock Pins ③ into pre-drilled holes on back of Drawer Front V16-I.
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.


Step 2

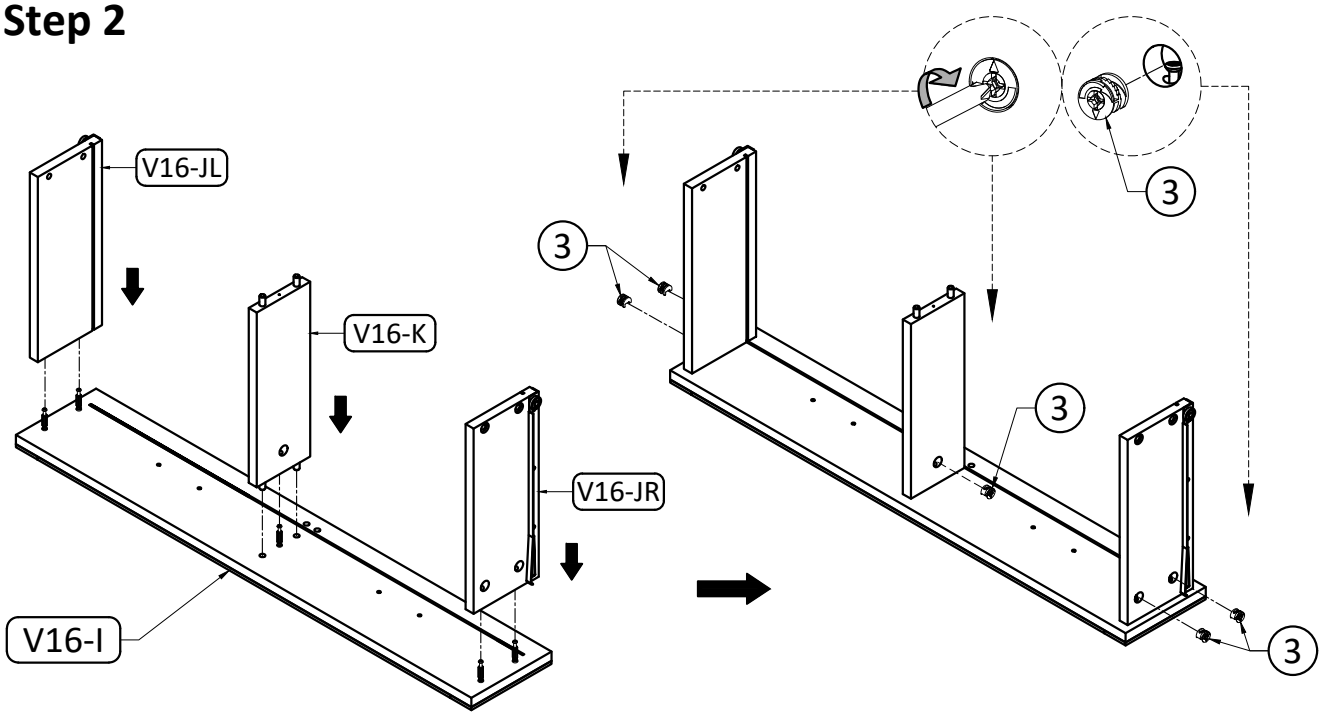


1. Align Cam Lock Pins with guide holes and attach Drawer Sides V16-JL, V16-JR.
2. Insert two Cam Locks ③ into guided holes on each Drawer Side V16-JL, V16-JR.
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Assembly

Step 3

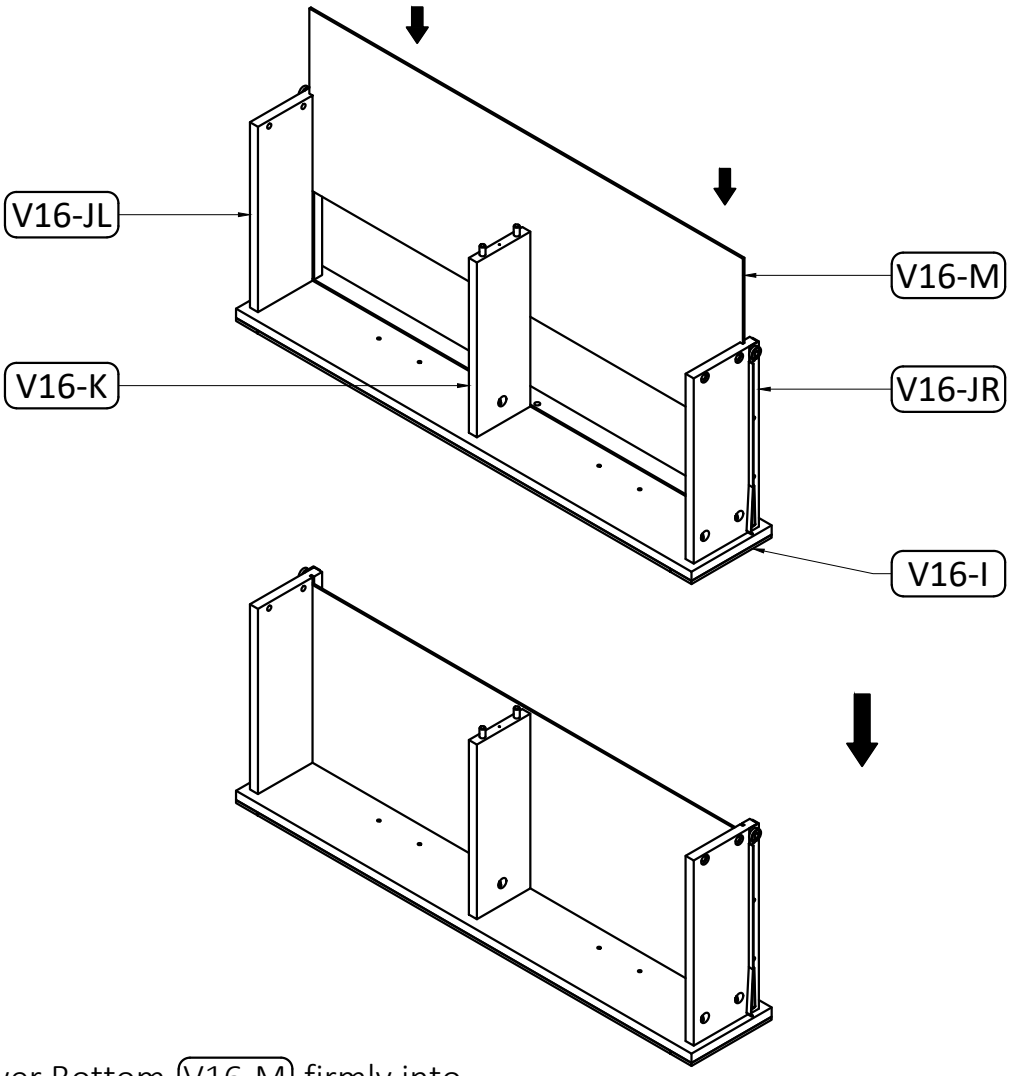


1. Slide Drawer Bottom V16-M firmly into slots on Drawer Sides V16-JL, V16-JR and Drawer Front V16-I.

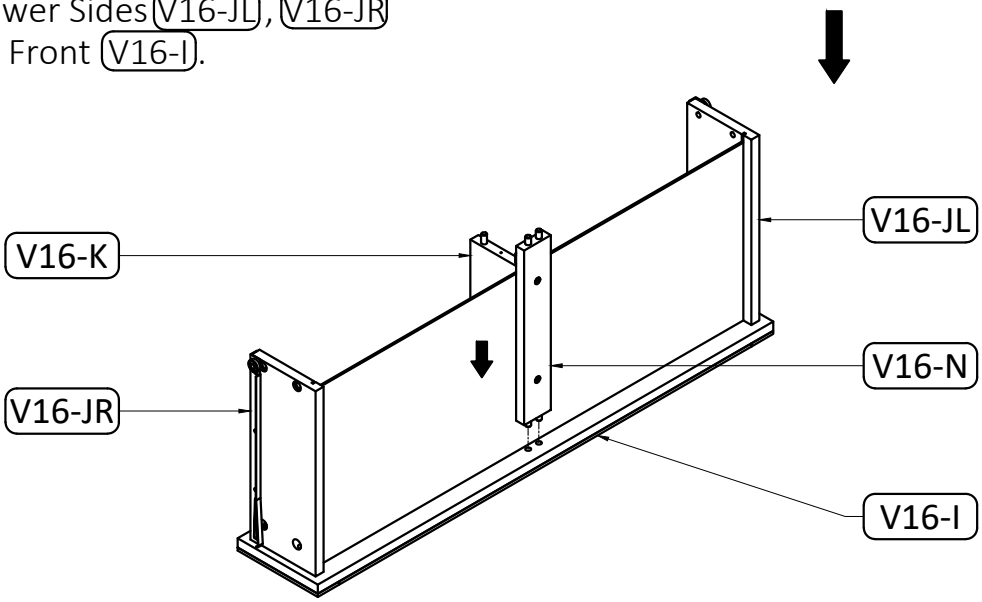

2. Align Wood Dowels with guide holes and attach Support Drawer Bottom V16-N to Drawer Front V16-I.

Assembly


Step 4

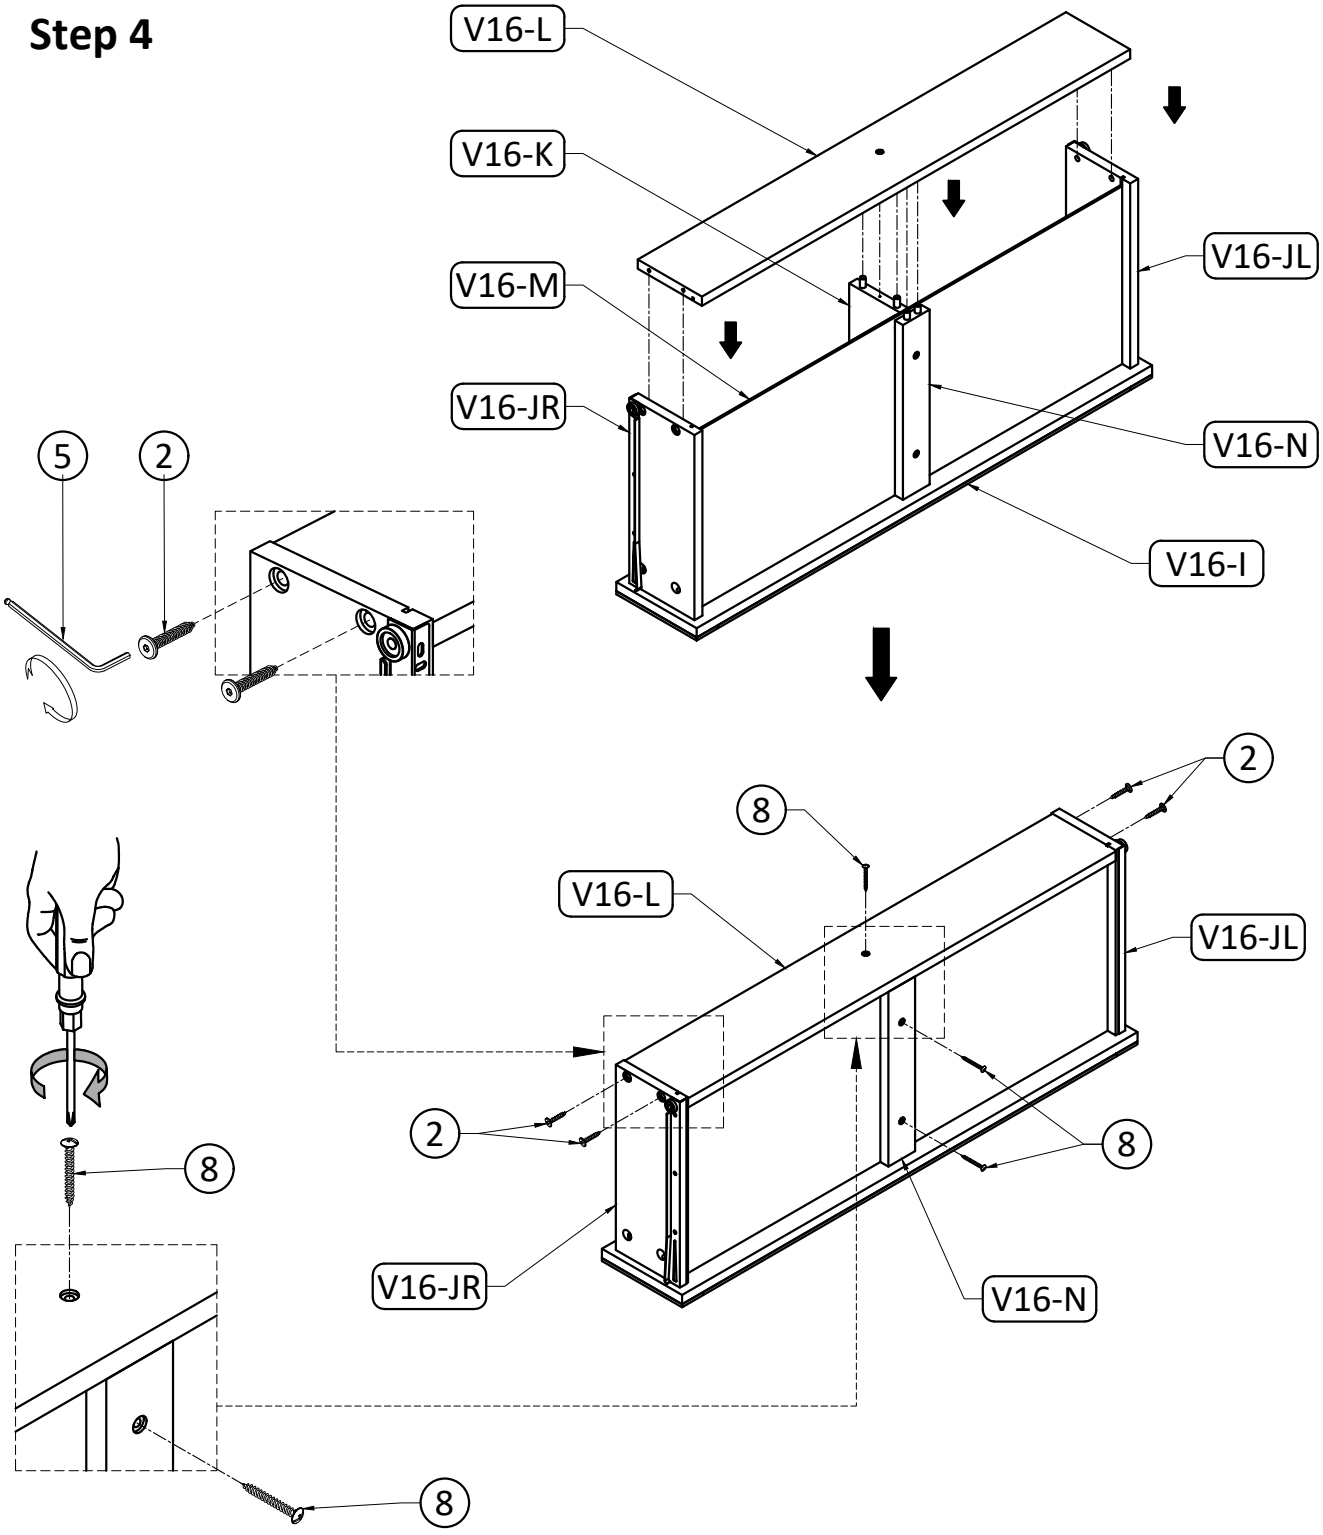

1. Align Drawer Back (V16-L) with Drawer Bottom (V16-M), Wood Dowels with guide holes and press firmly into slot.
2. Attach Drawer Back using two Allen Key Screws (2) through guide holes on each Drawer Side (V16-JL), (V16-JR).
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.
4. Use three Phillips Screws Round Head (8) to attach Drawer Back (V16-L) and Support Drawer Bottom (V16-N) through guide holes.
5. Use Phillips screwdriver to tighten screws. Do not over-tighten.

Assembly


Step 5

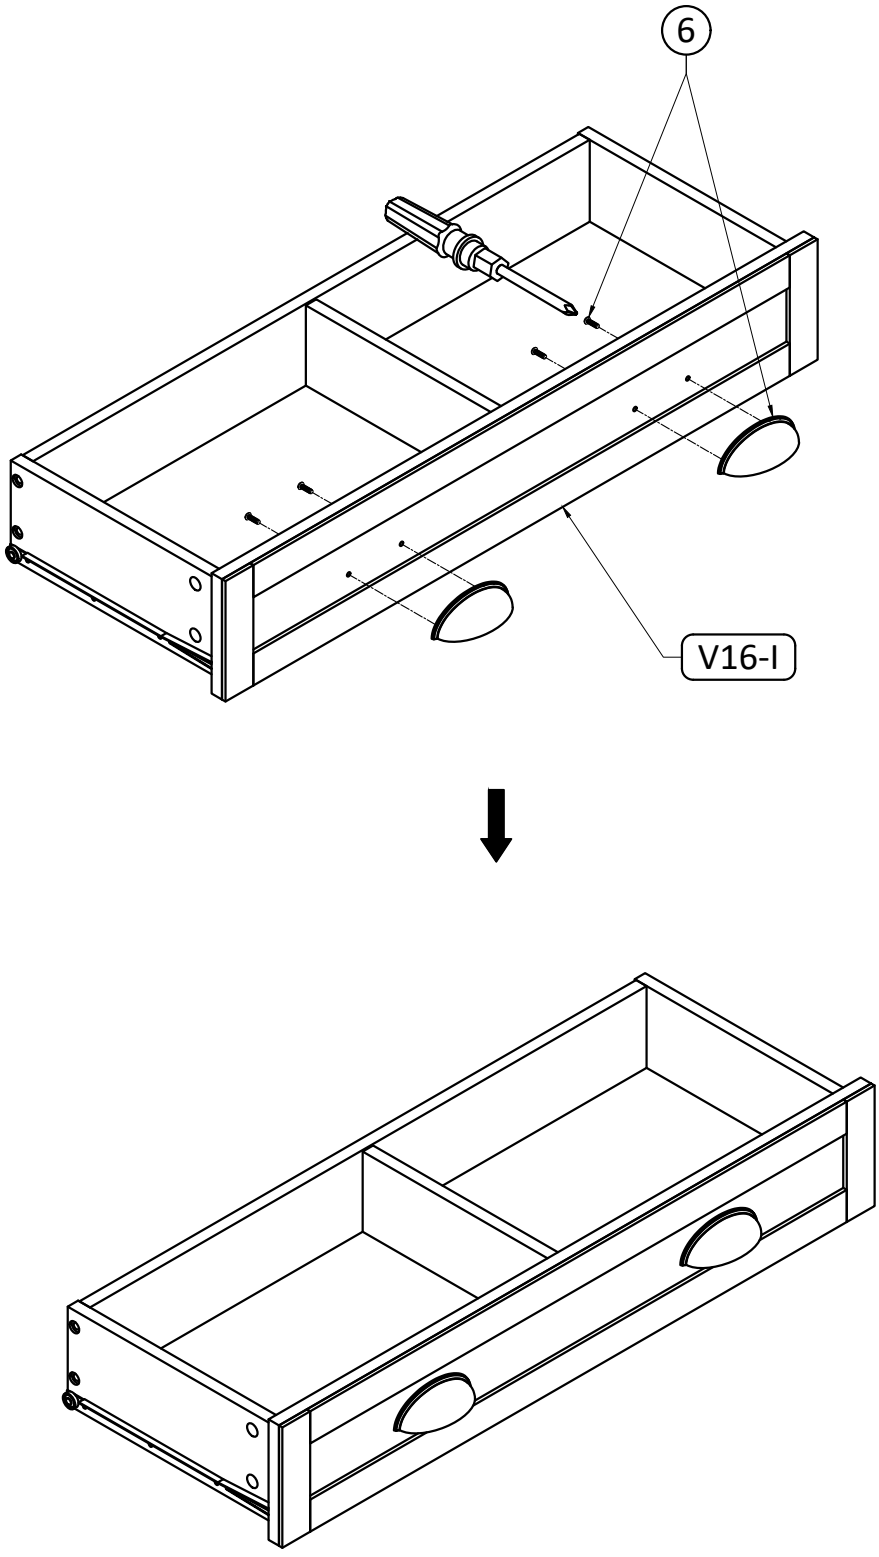

1. Use Phillips screwdriver to attach Handle ⑥ to Drawer Front V16-N.

Assembly


Step 6

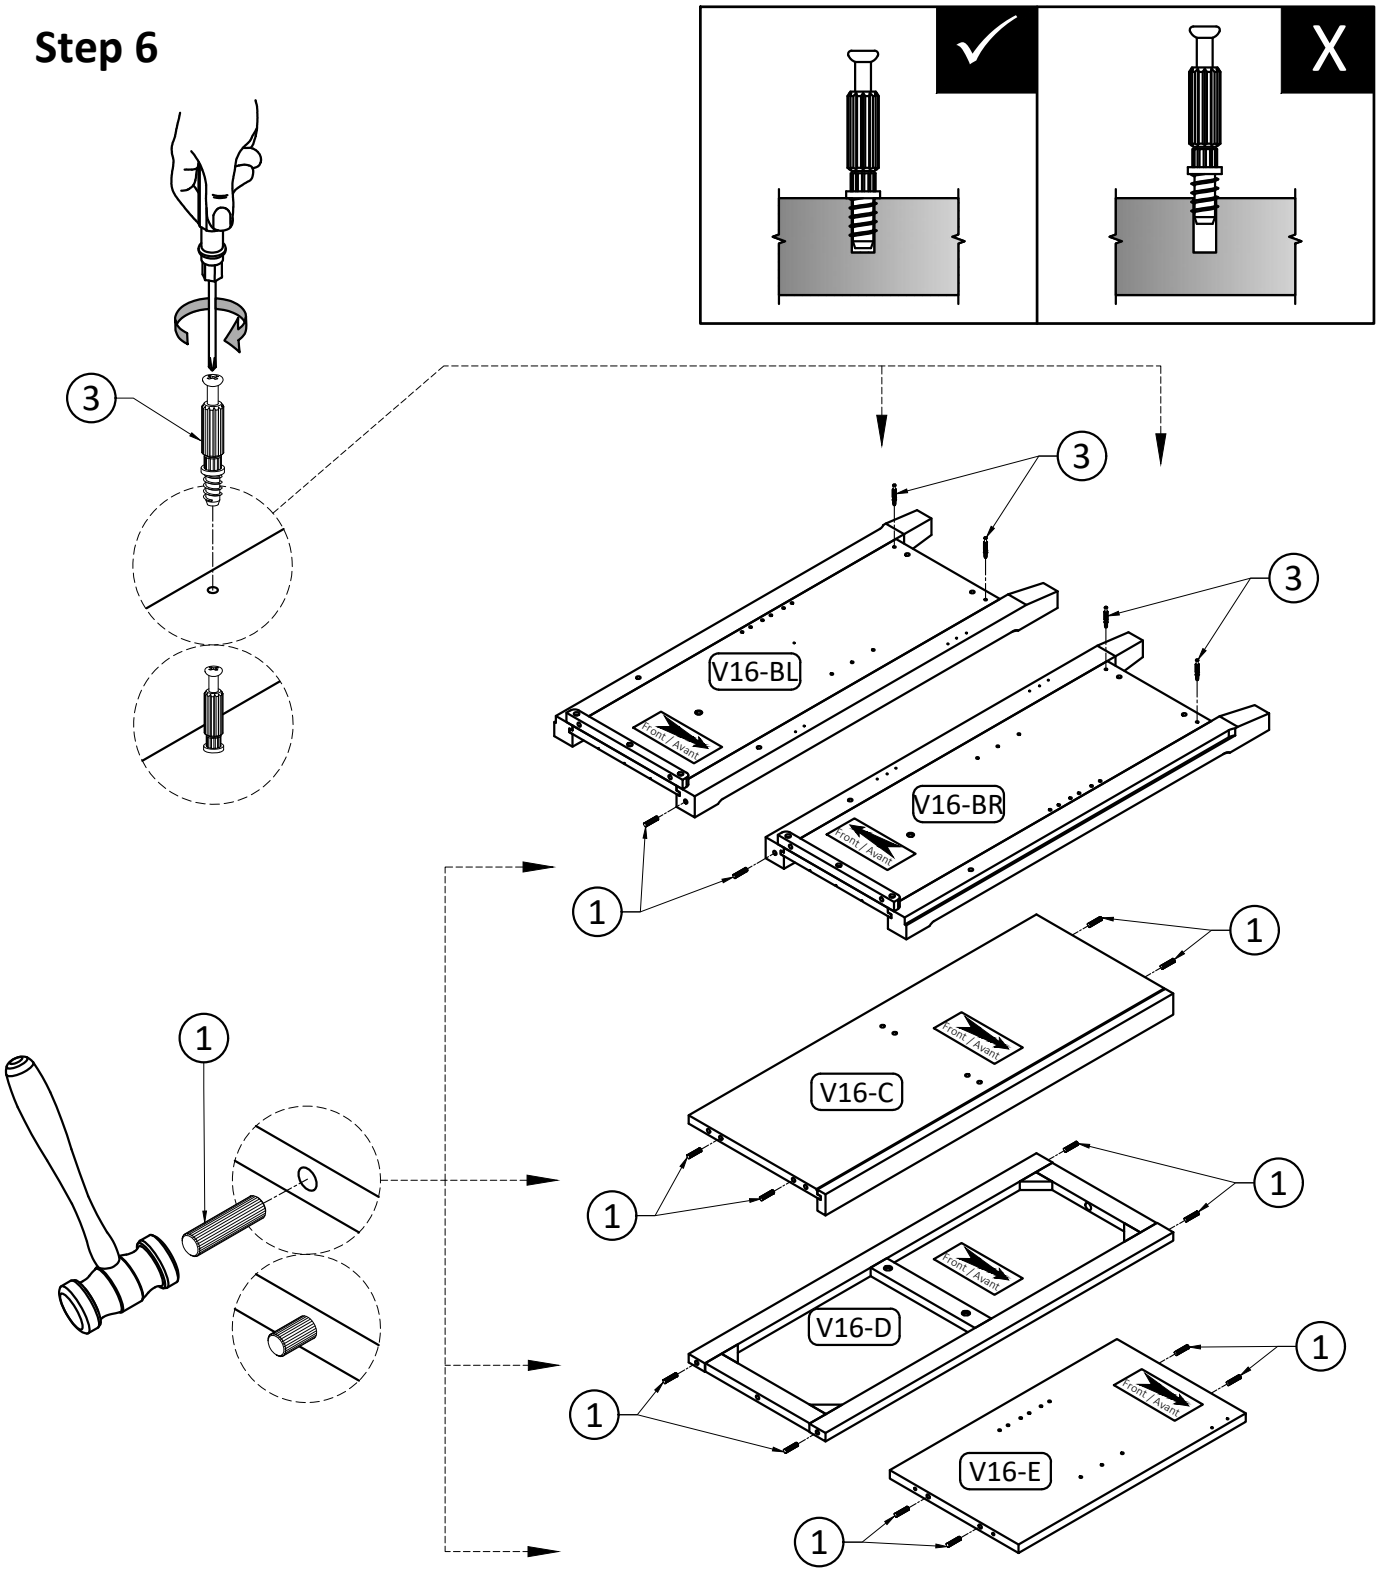

1. Attach two Cam Lock Pins ③ into pre-drilled holes on each Side V16-BL, V16-BR.
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.
3. Insert Wood Dowels ① into guide holes on Sides V16-BL, V16-BR, Bottom Shelf V16-C, Middle Frame V16-D and Divider V16-E.
4. Use rubber mallet to tap Dowels ① into bottom of holes securely. 1/3 length of Dowels should be exposed.

Assembly


Step 7

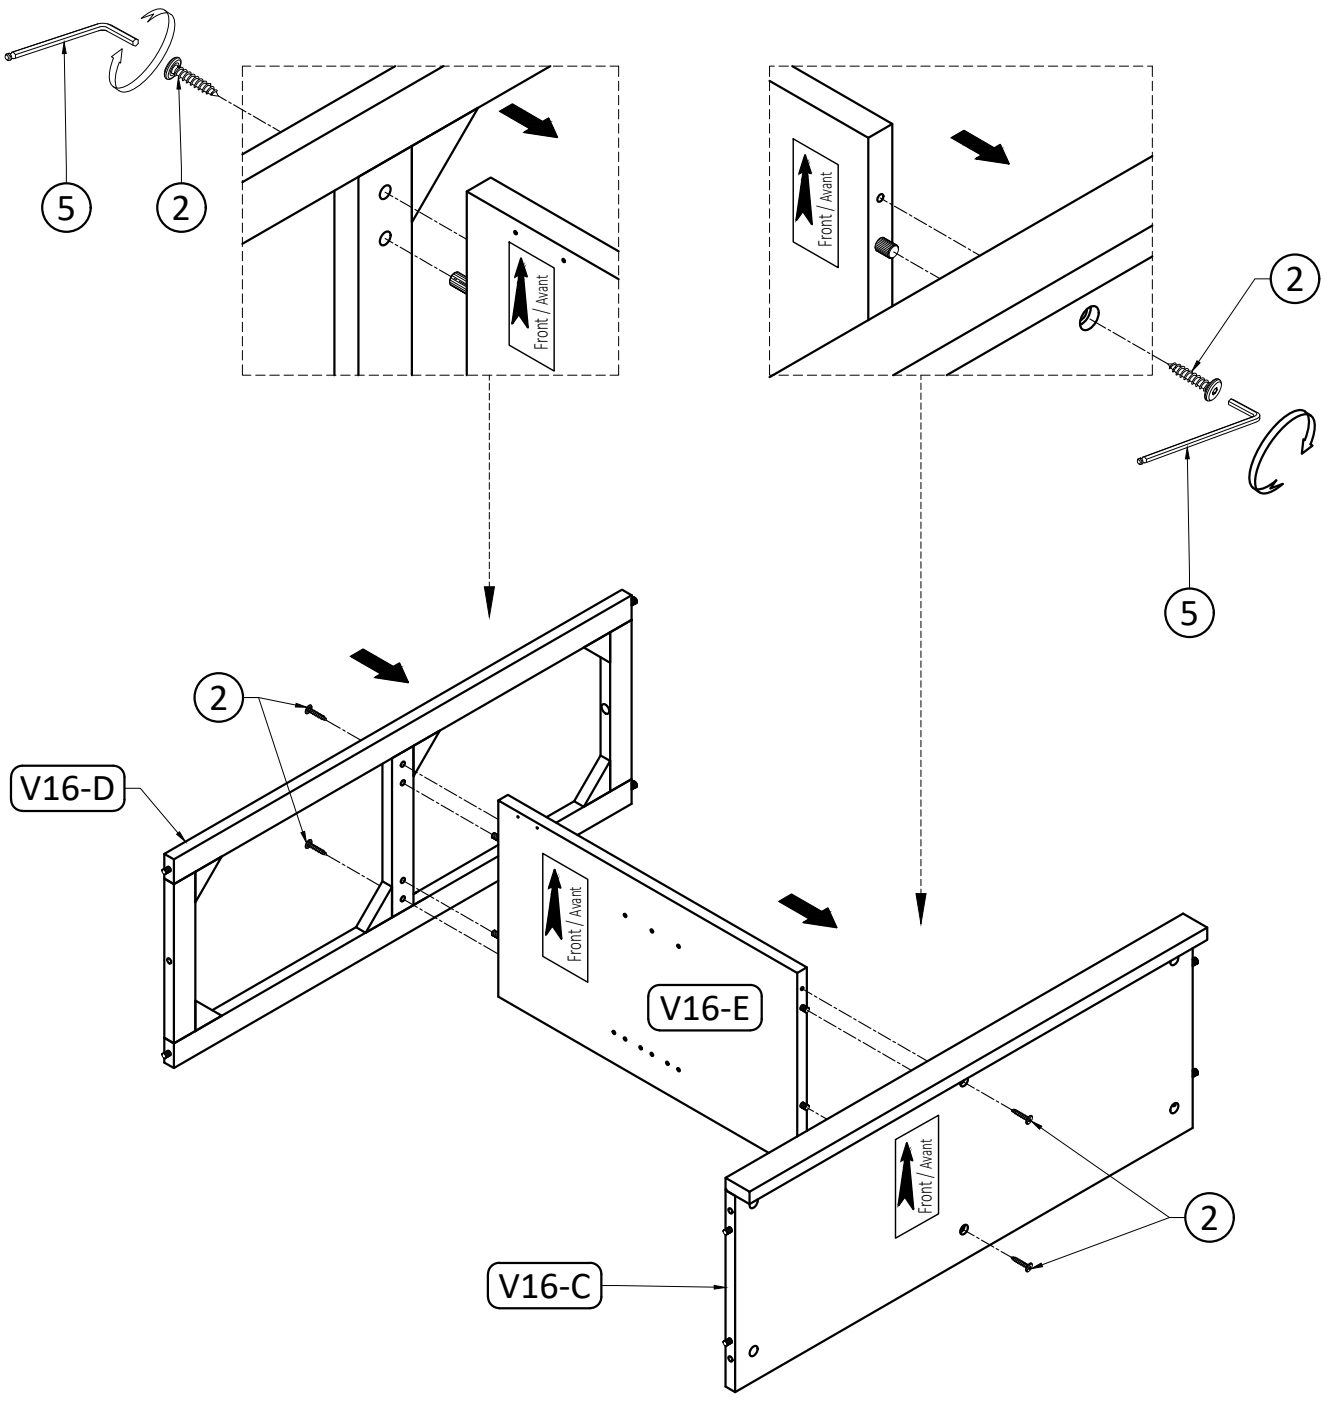

1. Align Wood Dowel with guide hole and attach Divider V16-E to Bottom Shelf V16-C and Middle Frame V16-D.
2. Use two Allen Key Screws (2) to attach each Bottom Shelf V16-C , Middle Frame V16-D through guide holes.
3. Use Allen Key (5) to tighten screws. Do not over-tighten.

Assembly


Step 8

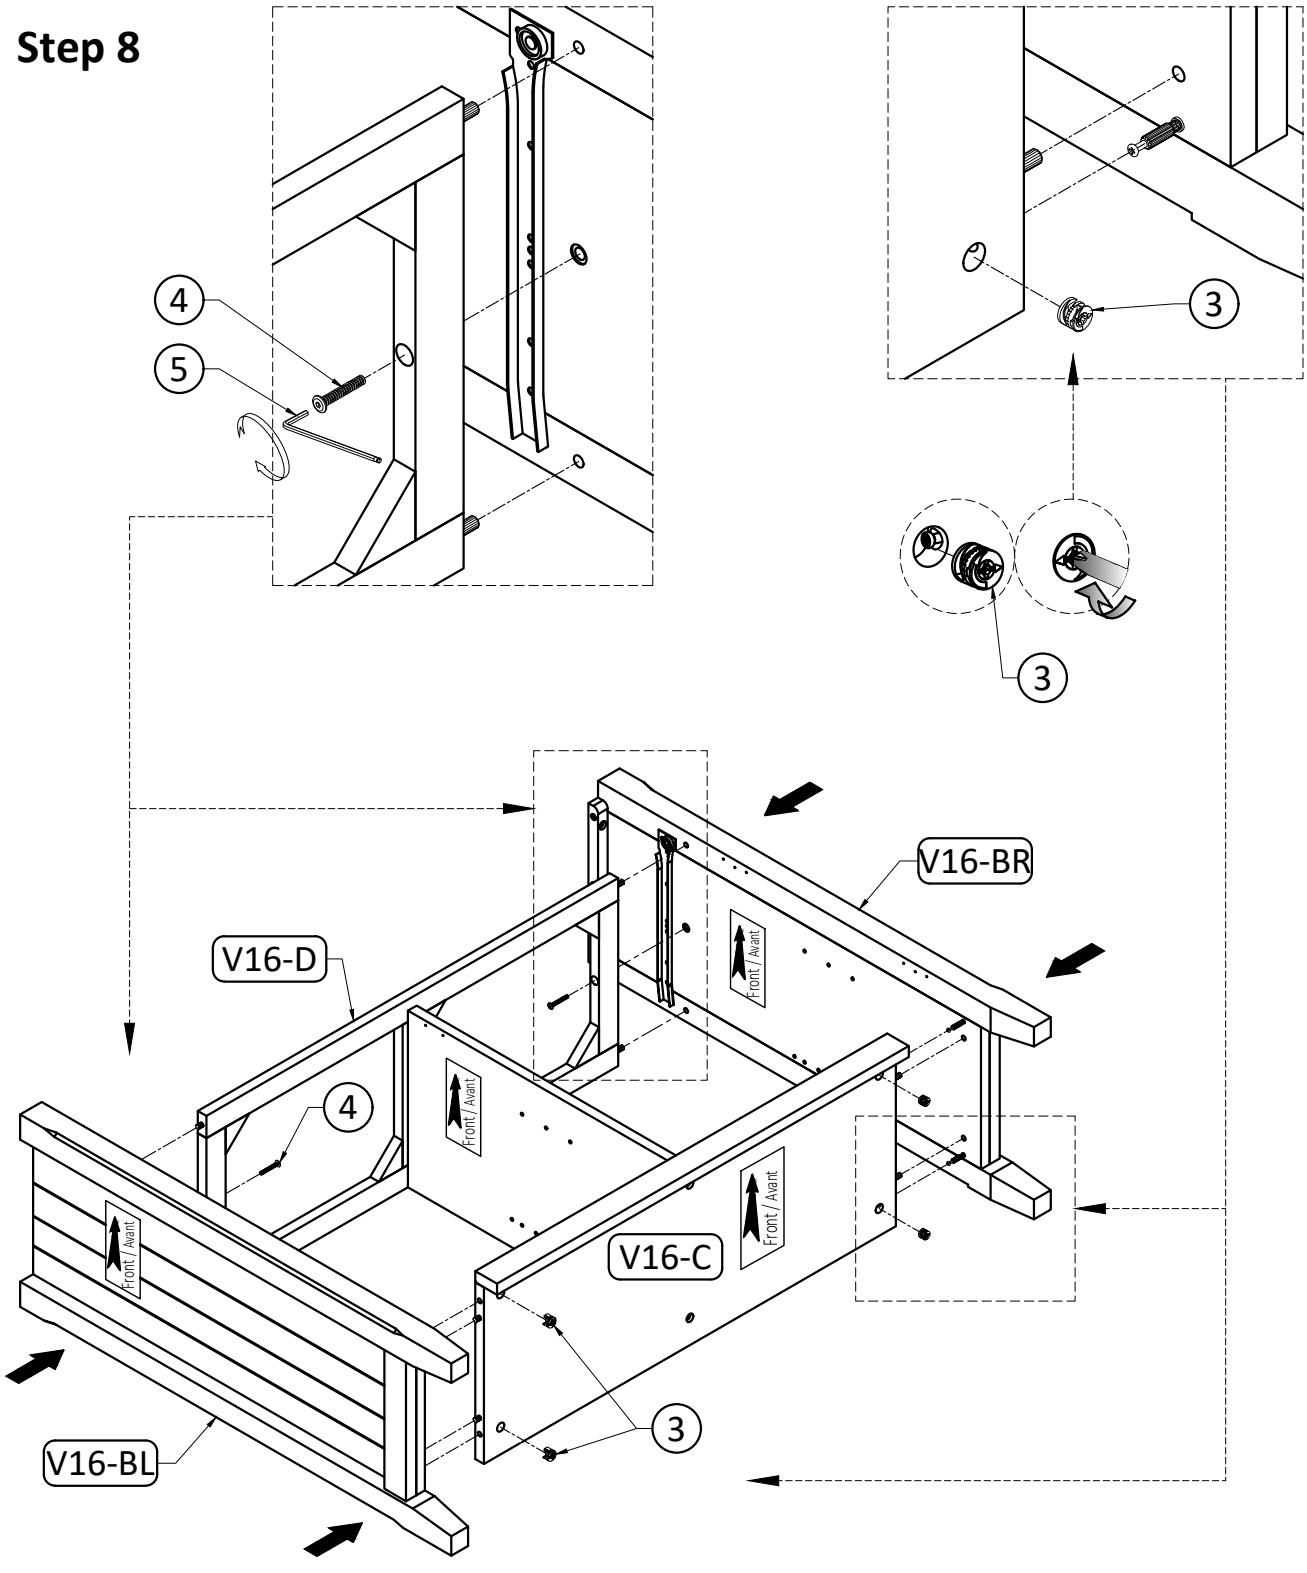

1. Align Cam Lock Pins and Wood Dowel with guide hole and attach Sides (V16-BL), (V16-BR) to Middle Frame (V16-D) and Bottom Shelf (V16-C).
2. Use two Allen Key Bolts (4) to attach Middle Frame (V16-D) through guide holes.
3. Use Allen Key (5) to tighten bolts. Do not over-tighten.
4. Insert four Cam Locks (3) into guide holes on Bottom Shelf (V16-C).
5. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

Assembly


Step 9

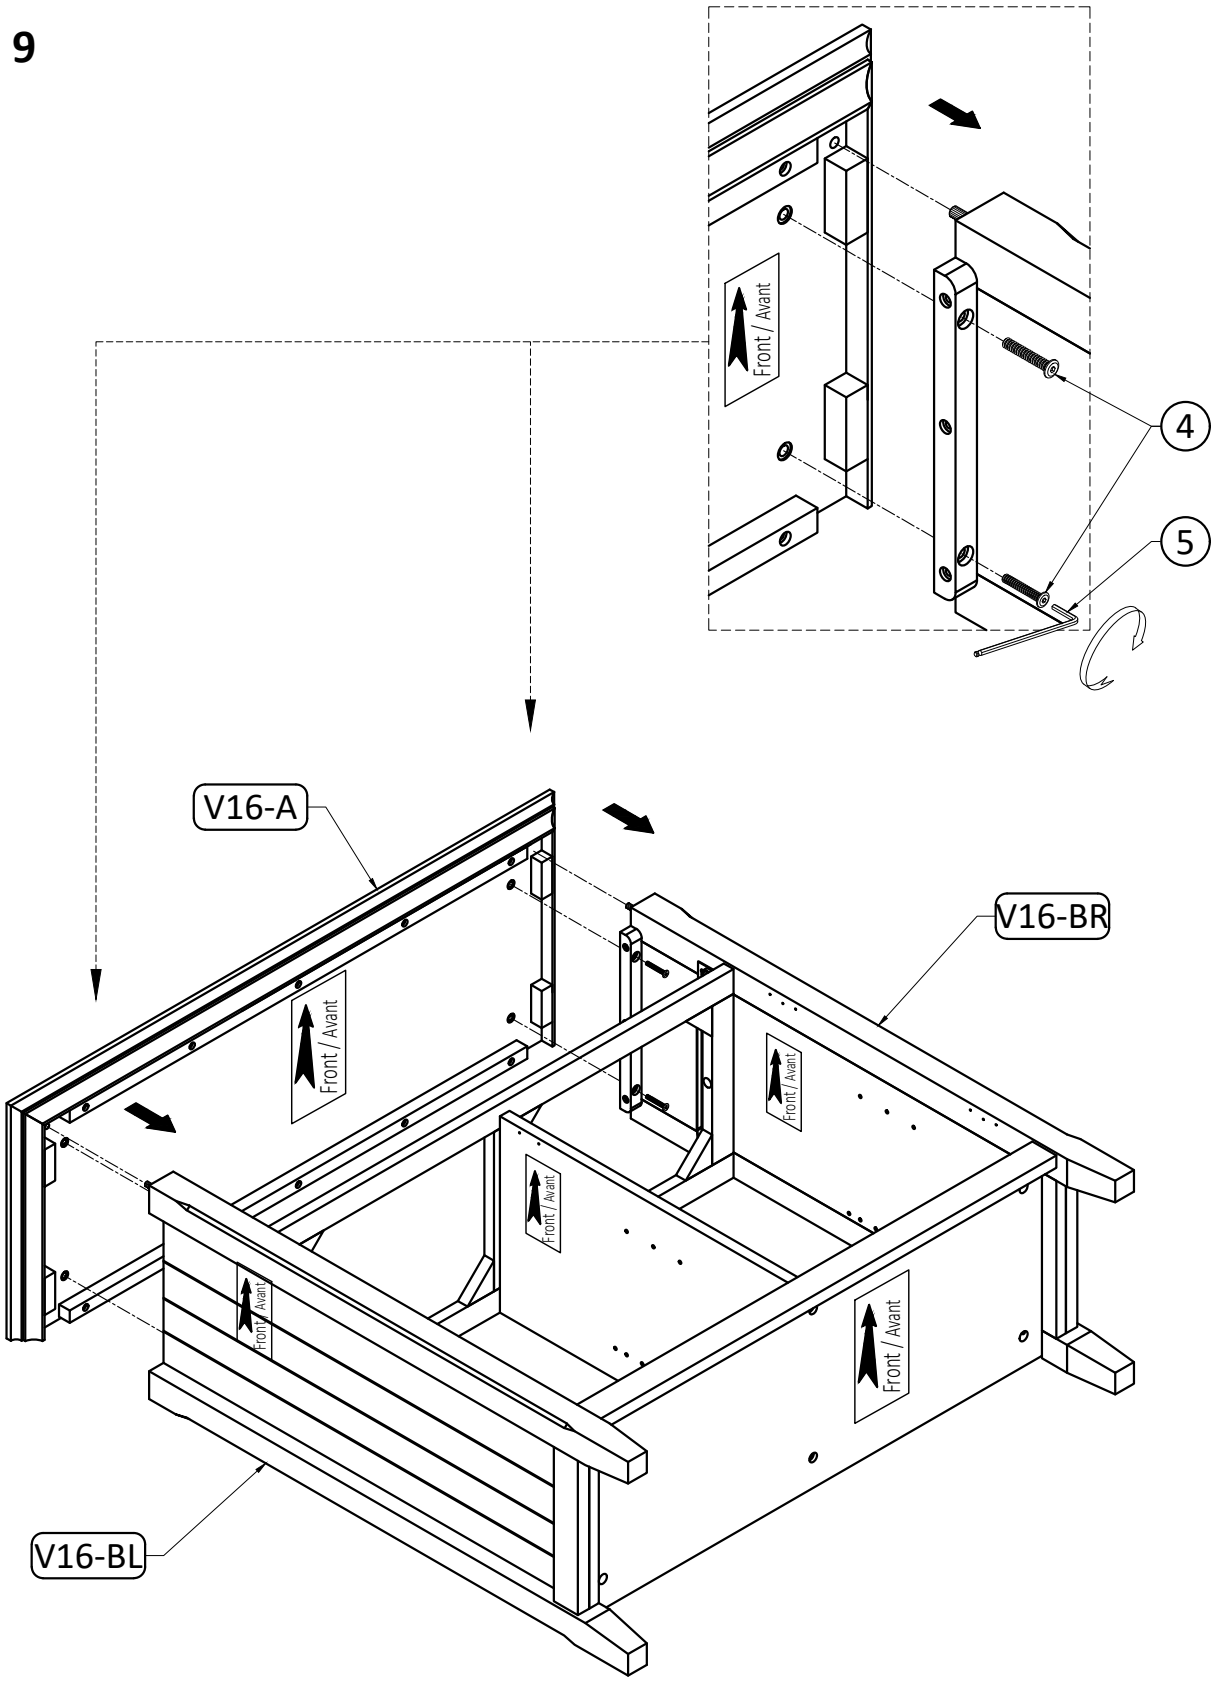

1. Align Wood Dowel with guide hole and attach Top (V16-A) to Sides (V16-BL), (V16-BR).
2. Use two Allen Key Bolts (4) to attach each Side (V16-BL), (V16-BR) through guide holes.
3. Use Allen Key (5) to tighten screws. Do not over-tighten.

Assembly


Step 10

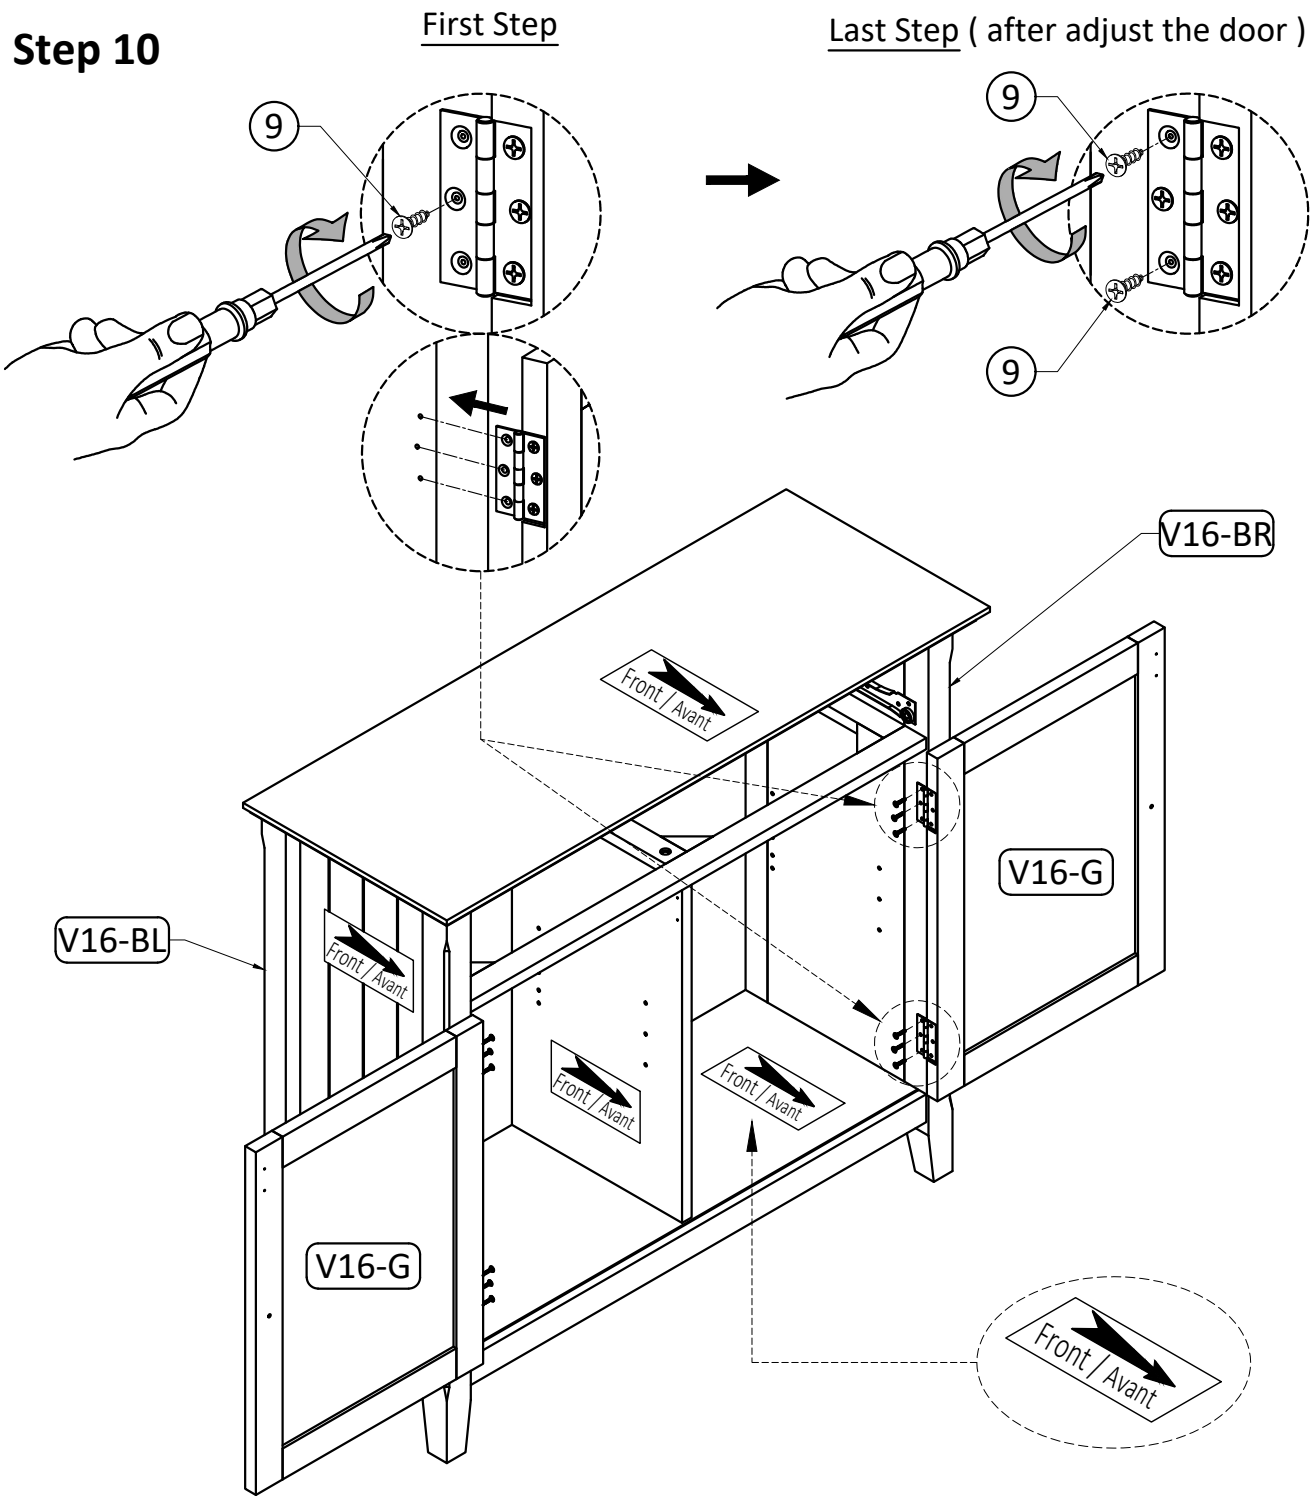

1. Attach hinges on Doors (V16-G) to Sides (V16-BL), (V16-BR) using Phillips Screws (9) into pre-drill holes:
   - Using Phillips screwdriver to attach Screws (9) at middle hole of hinges for both top & bottom hinges.
   - Adjust the door to ensure they are aligned straight & square with bottom shelf & side.
   - Using Phillips screwdriver to tighten the rest of screws (9) into pre-drill holes (top & bottom holes on hinges).

Assembly

Step 11

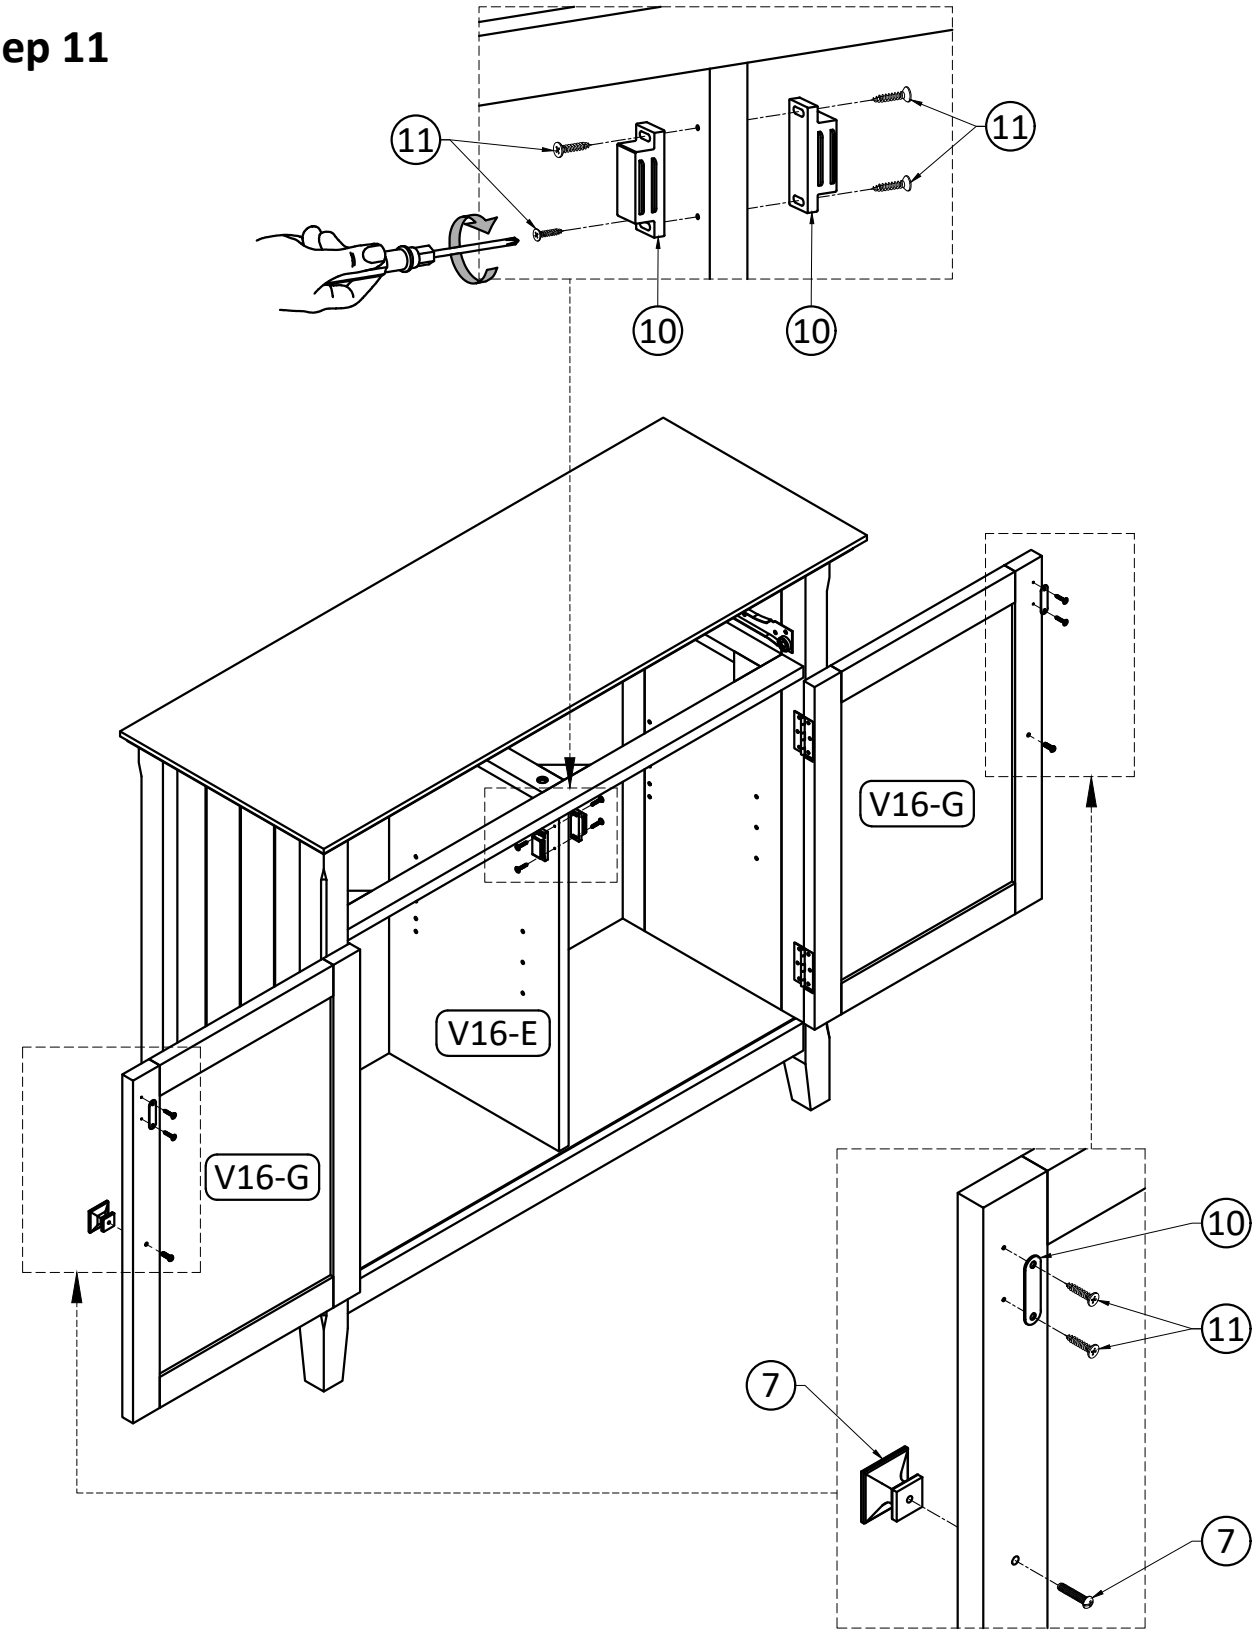



1. Attach Magnets (10) using Phillips Screws (11) into pre-drilled holes on Divider (V16-E).
2. Attach Magnet Plates (10) to top corner of Doors (V16-G) using Phillips Screws (11) into pre-drilled holes on Doors (V16-G).
3. Use Phillips screwdriver to snugly tighten screw. Do not over-tighten.
4. Use Phillips screwdriver to attach Handles (7) to Doors (V16-G).

Assembly

Step 12

Note:
The back of the cabinet frame does not have pre-drilled holes to attach the back panels.

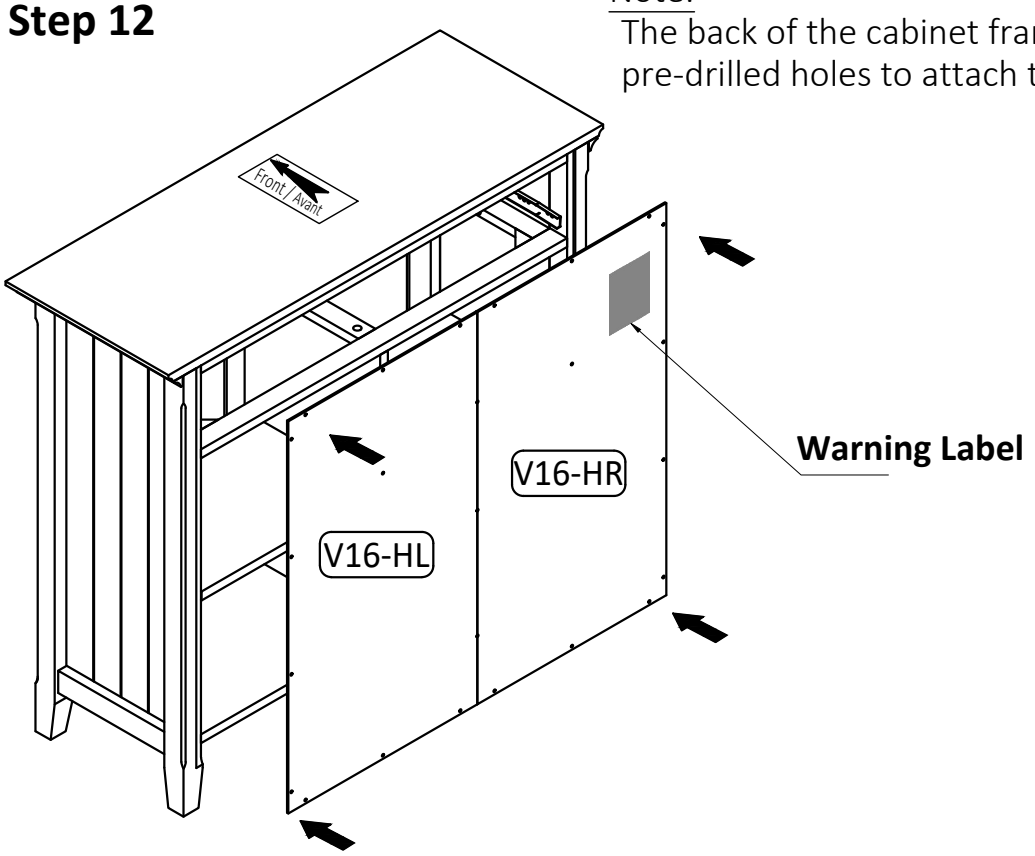


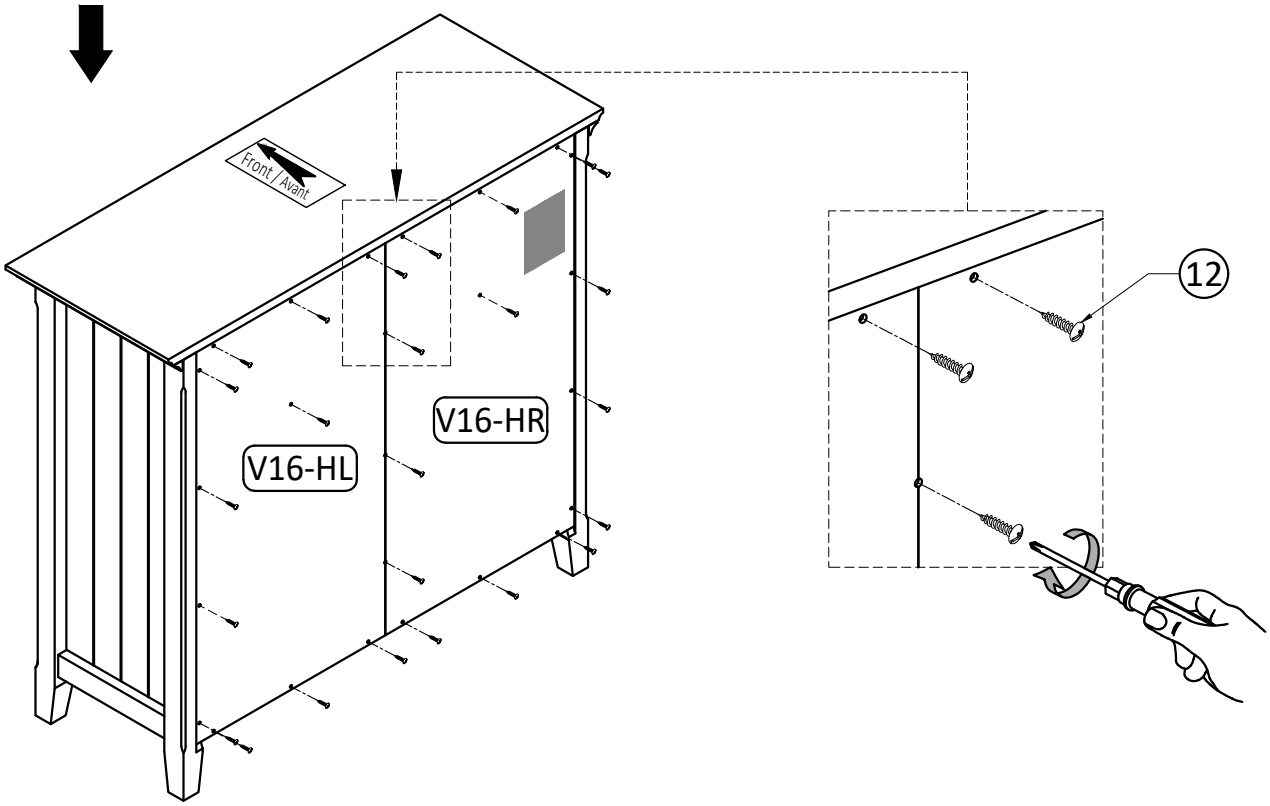

1. Attach Back Panels (V16-HL), (V16-HR) to back frame by using Phillips Screws Round Head (12).
2. Use Phillips Screwdriver to tighten screws. Do not over-tighten.

Assembly


Step 13

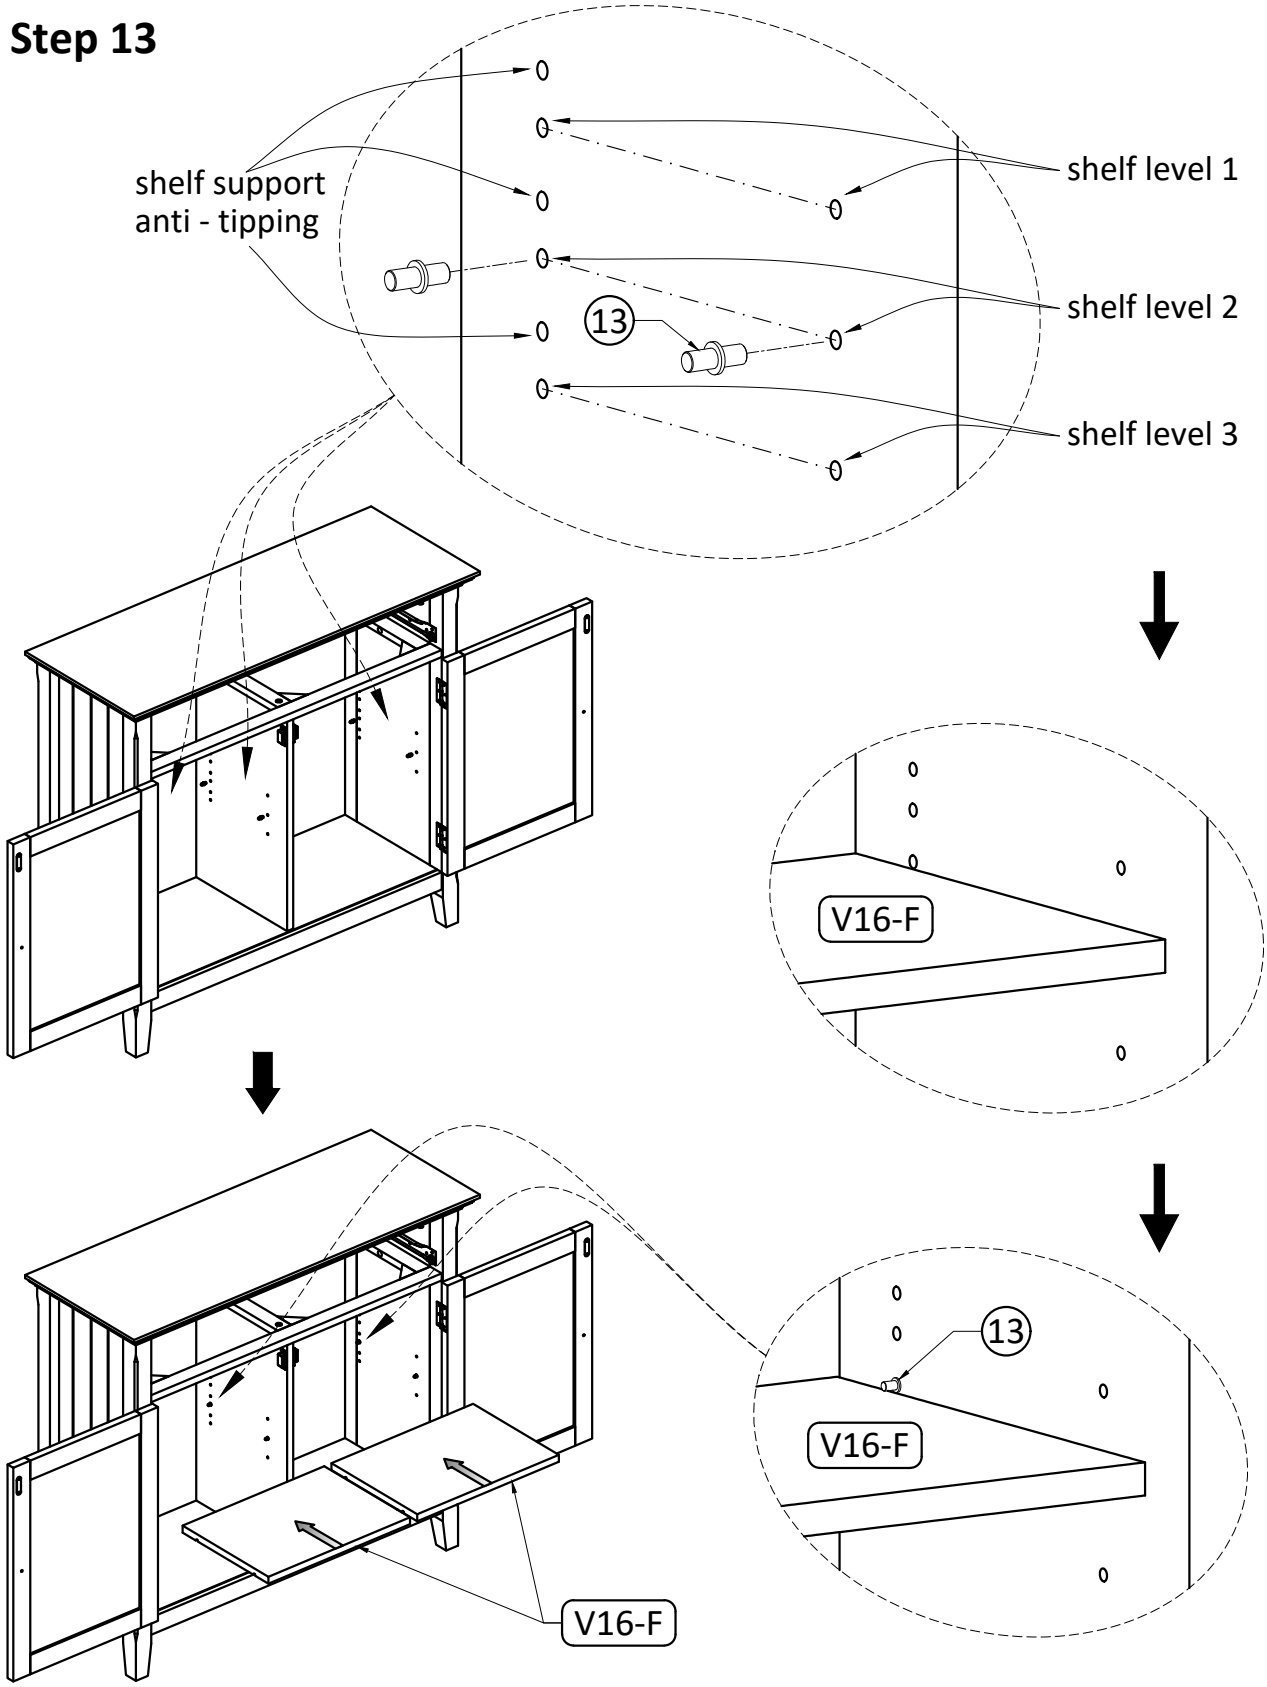

1. Use four Shelf Supports (8) for each Cabinet Shelf (V16-F) in desired location.
2. Two Shelf Supports (8) may be used on back top of each Cabinet Shelf (V16-F) as a tipping restraint.

Assembly

Step 14

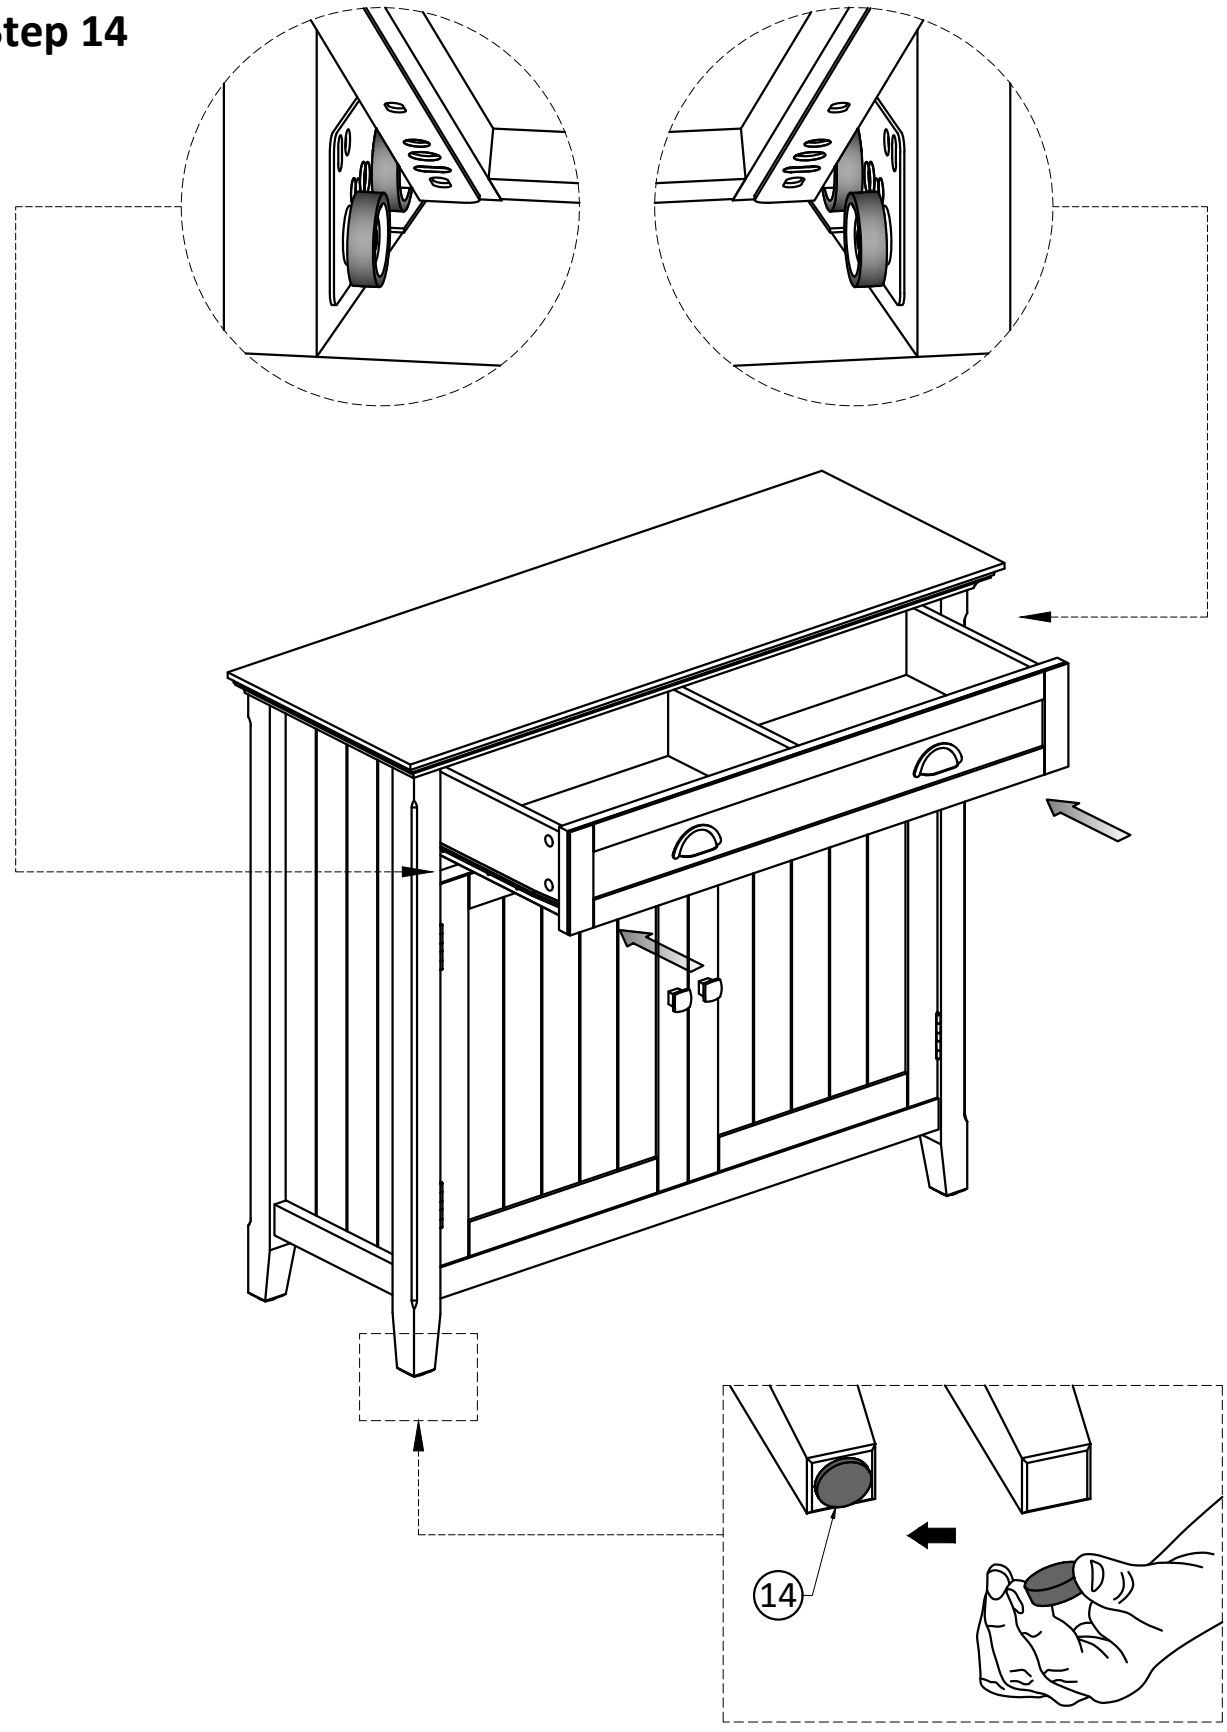


1. Attach the a felt pad (14) to the bottom of each leg.
2. Insert assembled drawer into glides on assembled Cabinet.

Furniture Tip Over Restraint Assembly


WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.




NOTE: The screwdriver is not included in the hardware pack.

Step 15

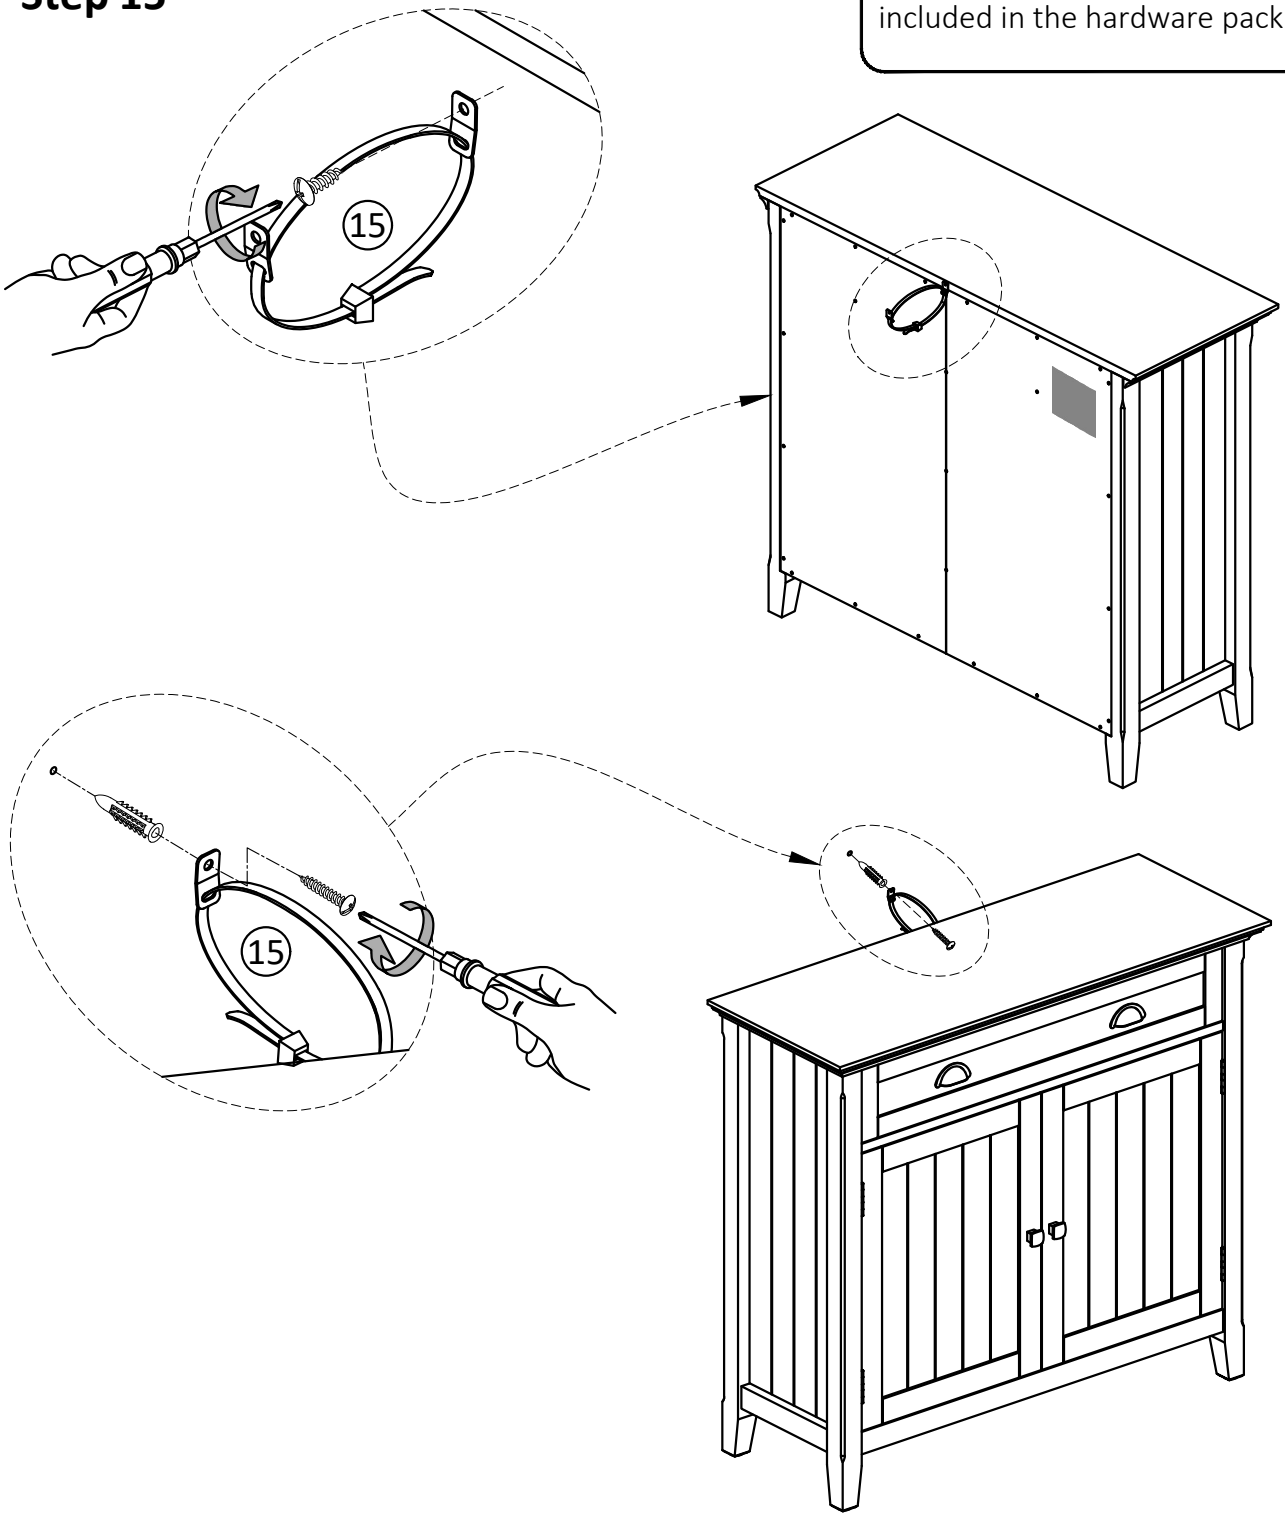


Furniture Anti-Tipping Restraint Instructions


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

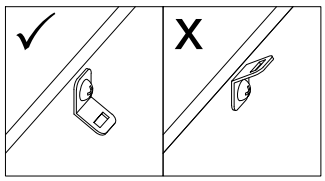

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

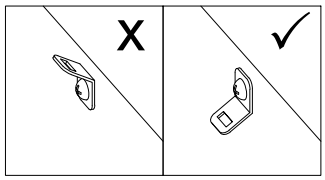

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

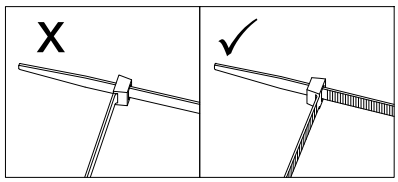

- **DO NOT** put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves