
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0369

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

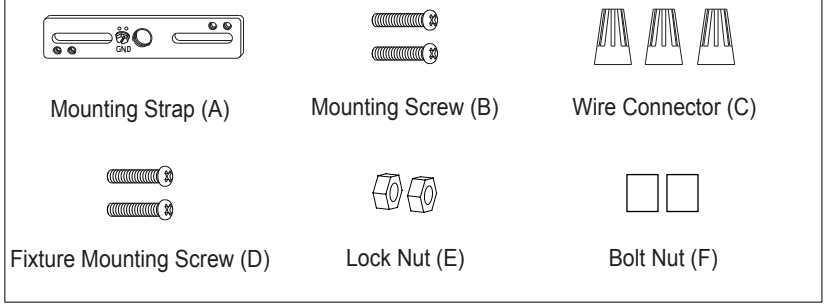

Installation Steps


Turn off the power at fuse or circuit box

1. Thread two fixture mounting screws (D) through the mounting strap (A), then secure with two lock nuts (E), adjust the length of the fixture mounting screws (D) if necessary.

2. Attach the mounting strap (A) to the outlet box by using two mounting screws (B).

3. Rod connections:
   a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
   b. Thread the fixture wire through the middle rod, then secure the middle rod onto the lower rod using the threaded pipe.
   c. Thread the fixture wire through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.
   d. Thread the fixture wire through the canopy, then secure the canopy onto the upper rod using the threaded pipe.

Note: Length adjustable from 17-1/4" to 59-3/8", use fewer rods if shorter length is desired.

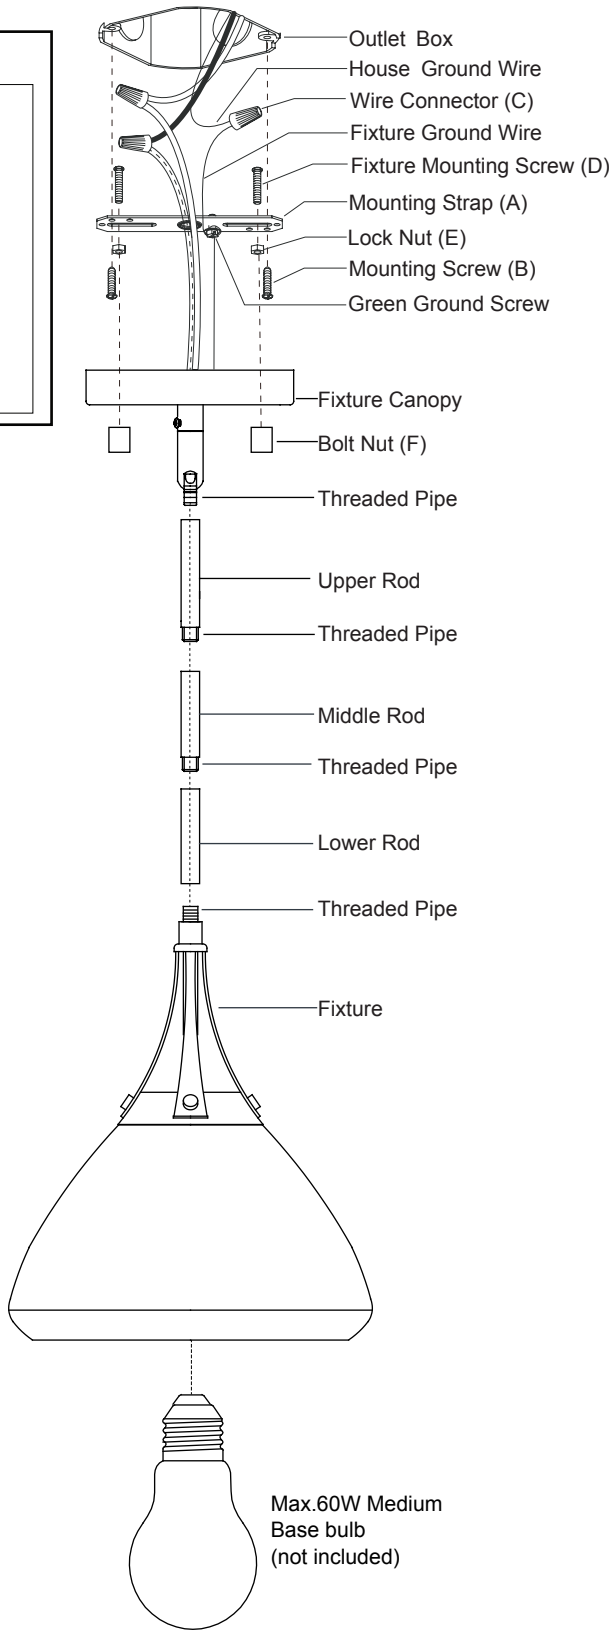

VAXCEL

211029


4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
   ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
   ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
   ---Attach the fixture ground wire to the mounting strap (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).
   Carefully put the wires back into the outlet box.

5. Attach the canopy to the mounting strap (A), and then secure it with two bolt nuts (F).

6. Install 1x60W max. medium base bulb (not included).
   See relamping label at socket area or packaging for maximum wattage allowed.

7. Angled mounting recommended for a vaulted or angled ceiling. (See Fig.1)


Fig. 1

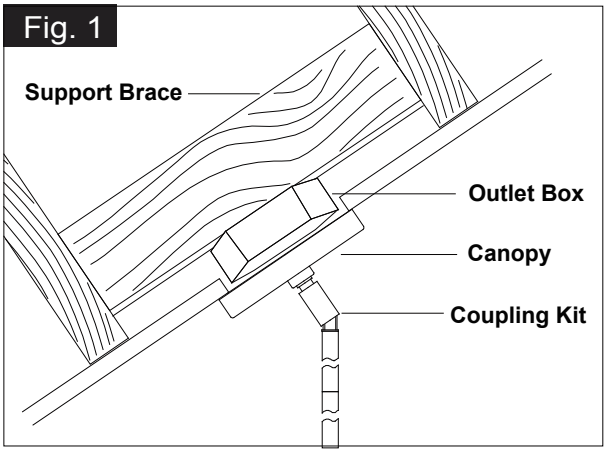


Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

Spare Parts List:

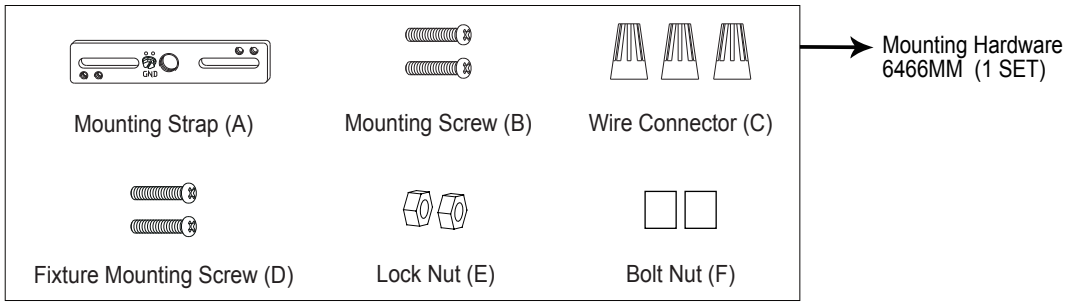

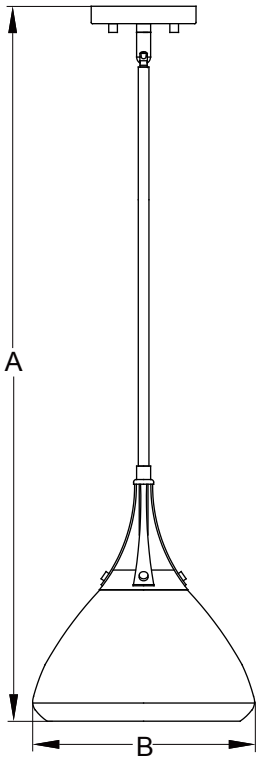

A: 17-1/4"~59-3/8"

B: 10"

VAXCEL

211029