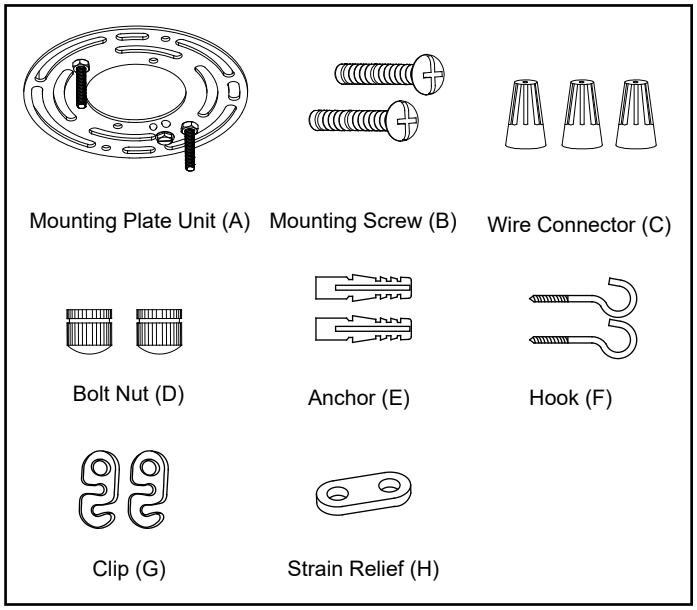
# ASSEMBLY AND INSTALLATION INSTRUCTIONS

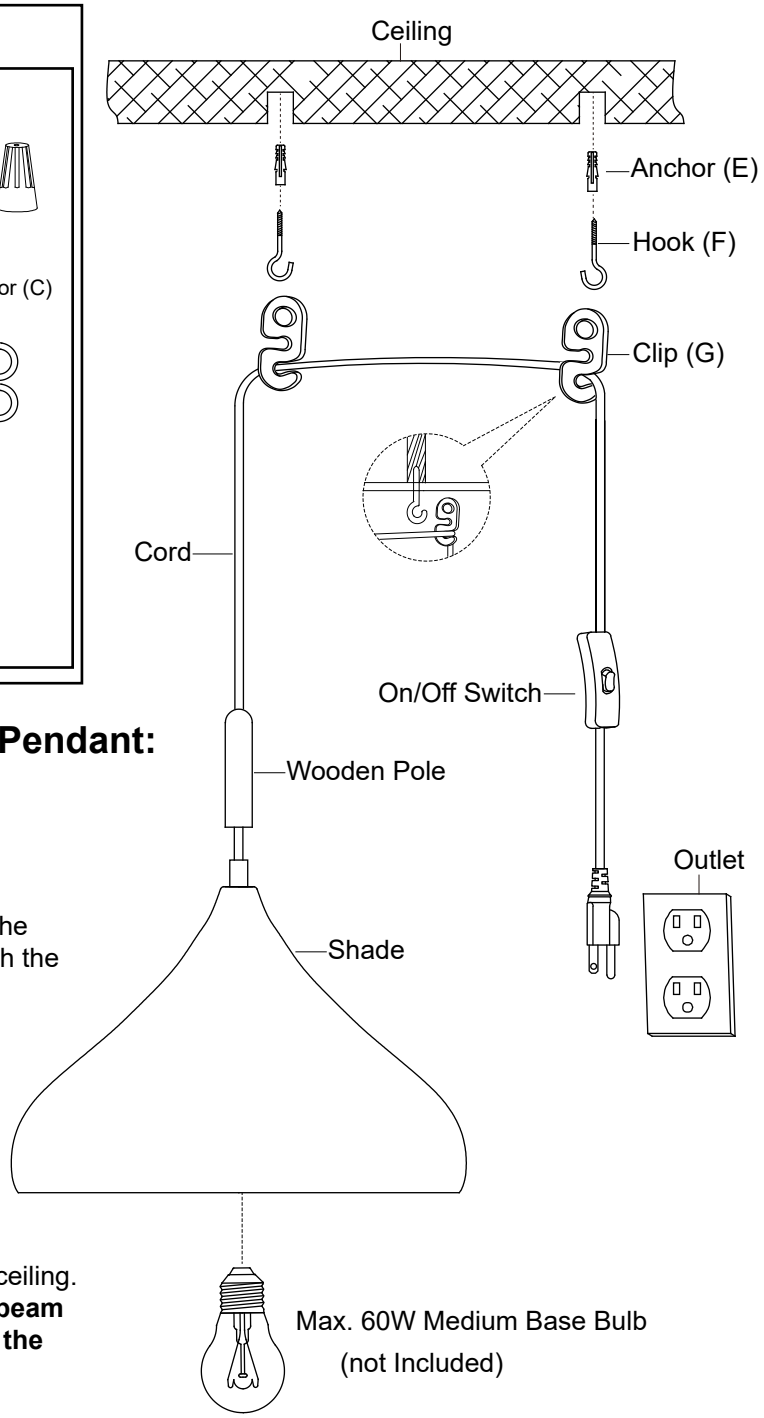
**P0486 / P0487 / P0488 / P0489 / P0490 / P0491**

**WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.**

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.**
**2. Read and save these instructions.**

**Hardware Package (included):**




## Installation Steps for Plug-in Swag Pendant:

Turn off the power at fuse or circuit box

## Important to Know

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Do not alter the plug.
- Unplug fixture before installing or removing bulb.
- Unplug when not in use.

1. Determine where you would like to position the pendant. Install the first anchor (E) into the ceiling.

   Install the first hook (F) into the anchor (E) on the ceiling.
   **NOTE: When installing the pendant into wood beam ceiling, please only screw ceiling hook (F) into the wood beam, wall anchor (E) is not needed.**

   Position the second hook directly above the chosen electrical outlet. Install the second anchor (E) into the ceiling, then install the remaining hook (F) into the wall anchor (E).

2. Attach one the end of clips (G) with hole to the ceiling hooks (F).



VAXCEL
260717

3. Hang the cord on the other end of clips (G).

4. Attach the wooden pole onto the shade.

5. Install 1 x 60W Max. medium base bulb (not included).
**See relamping label at socket area or packaging for maximum wattage allowed.**

6. Insert the plug into an electrical outlet. Turn on the light with the in-line On/Off switch.
**NOTE: a. As a safety feature, this plug will fit in a polarized electrical outlet.**
**b. Do not alter the plug.**
**c. This fixture includes 15' of cord.**

Turn on the power at fuse or circuit box

## Installation Steps for Pendant:

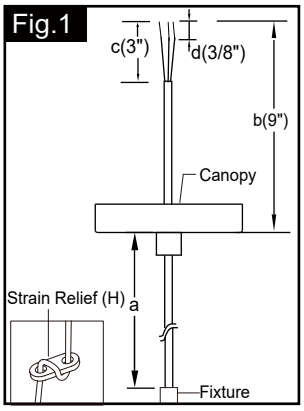
Turn off the power at fuse or circuit box

1. Unscrew the two bolt nuts (D), remove the mounting plate unit (A) from the canopy.

2. Attach the wooden pole onto the shade.

3. Measure the desired length of the cord (a) from the canopy to the top side of the fixture and leave an additional 9" of cord (b) above the canopy (include the canopy), and then cut off the unnecessary cord. Thread the cord through the canopy and two holes of the strain relief (H). Mark the 3" of cord (c) from the top of the cord (b). Use a knife to peel off the insulation of the cord (c) carefully to expose three internal wires.
**Note: Cutting too deep may cut off the internal wires and destroy the insulation surface of the internal wires.**
Peel off the wires from the top about 3/8" long (d) to expose the copper for wiring (See Fig.1).

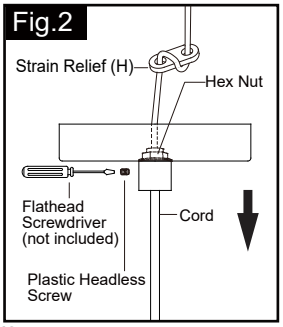
Fig.1




4. Release the cord to desired length by adjusting the strain relief (H).

Fastening cord by screwing the plastic headless screw using the flathead screwdriver (not included) (See Fig.2).

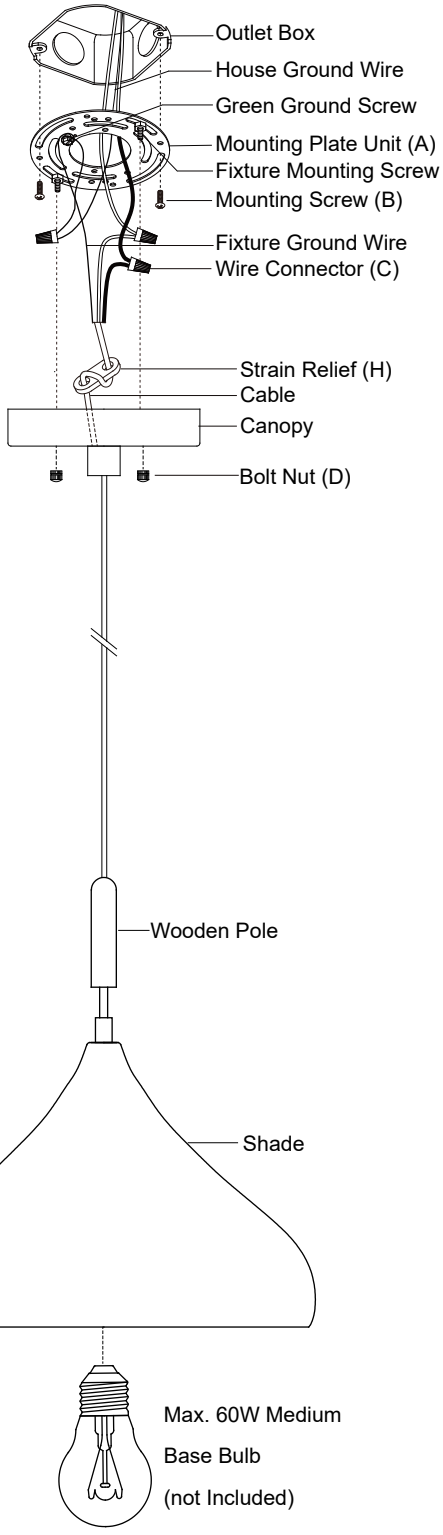
Fig.2




5. Attach mounting plate unit (A) to the outlet box using two mounting screws (B). Adjust the length of the preinstalled fixture mounting screws if necessary.

6. Pull out the source wires from the outlet box.
Make wire connections using wire connectors (C) as follows:
-- Connect the fixture black wire to the house black wire using wire connector (C) provided.
-- Connect the fixture white wire to the house white wire using wire connector (C) provided.
-- Connect the bare ground wire from the canopy to the mounting plate unit (A) by securing it with the preinstalled green ground screw, then connect it to the fixture green ground wire and the house ground wire with wire connector (C).
Tuck all the wires into outlet box.

7. Secure the canopy to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).

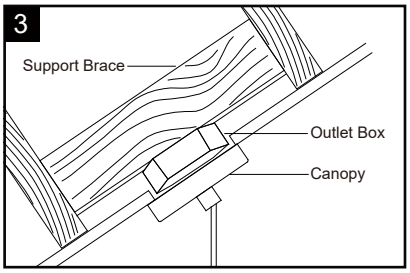





VAXCEL
260717

8. Install 1 x 60W Max. medium base bulb (not included).
**See relamping label at socket area or packaging for maximum wattage allowed.**

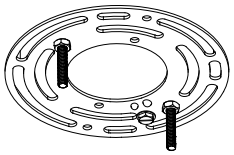
9. Angled mounting recommended for a vaulted or angled ceiling (See Fig.3).






Turn on the power at fuse or circuit box


## The following parts are available for reorder if damaged or missing.


Spare Parts List:



Mounting Plate Unit (A)


Mounting Screw (B)


Wire Connector (C)


Bolt Nut (D)

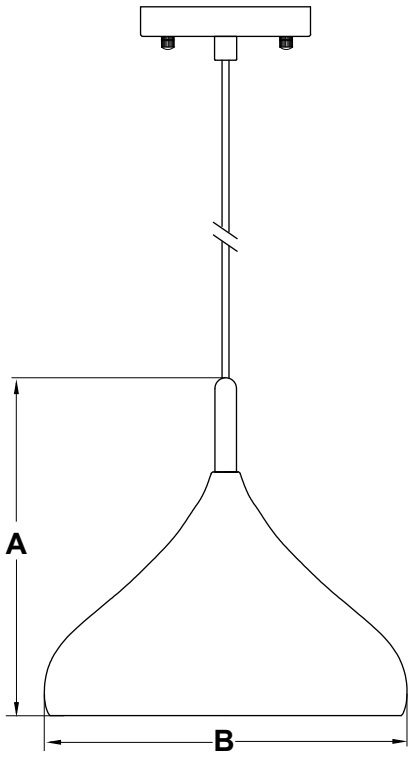

Anchor (E)


Hook (F)


Clip (G)


Strain Relief (H)

**Assembly Kit**
**7274MM (1 SET) for P0486**
**7277MM (1 SET) for P0487**
**7276MM (1 SET) for P0488**
**7275MM (1 SET) for P0489**
**7285MM (1 SET) for P0490**
**7286MM (1 SET) for P0491**




**A: 11-3/4"**

**B: 12-1/2"**



VAXCEL
260717

## 1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

*Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.*

*Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.*

How can warranty service be obtained?
info@vaxcel.com
1-800-482-9235