James
BY SONANCE

NC3 | NC5QT

NATURAL COLLECTION QUICKSTART GUIDE

BOX CONTENTS

(1) Quickstart Guide
(1) NC3 or NC5QT Soundbar, Speaker, or Speaker Bar
(1) Woven Fabric Grille
(1) Z Bracket for Soundbar Models or
(2) 3.25" Z Brackets for Vertical Speaker Models
(1) Hardware Kit
- (2) Grille Pins
- (1) Shim Set
- (1) Euroblock/Terminal Block

INSTALLATION

1. Before mounting, remove the grille from the speaker. The grille is secured with a press-fit retention system along the edges and corners. Starting at one corner, gently pull along each edge to evenly release each connection point, then set the grille aside





Figure 1: Remove Grille

NC Speaker Z Bracket sizes:
- VTL Speakers: 3.25" Z Bracket
- HTL 55" Soundbars: 36" Z Bracket
- HTL 65", 75", 85" Soundbars: 48" Z Bracket

2. Use a stud finder to identify stud locations for the Z Bracket placement on the wall.
3. Level the wall Z Bracket.
4. Secure the Z Bracket to the wall in areas where the corresponding brackets are on the speaker to ensure a tight fit. Use supplied shims as needed.

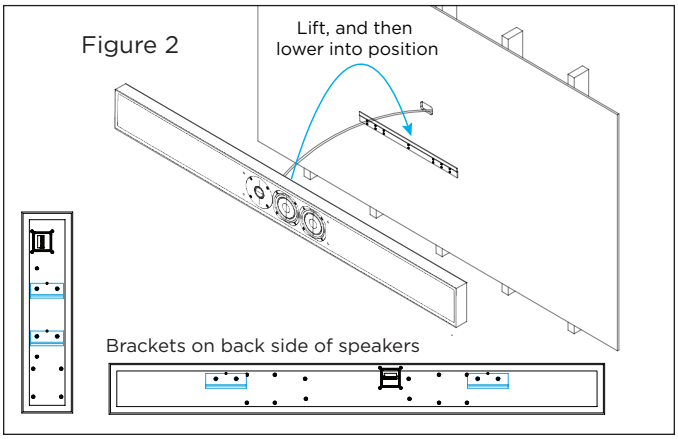

5. Run speaker wire from the amp to the speaker. If running wire within the wall, make the entry cut within the area behind the speaker footprint.

IMPORTANT: Follow all applicable safety codes when running wire within wall cavities. Sonance does not recommend running high-voltage wiring within the wall.

6. Connect the speaker wire to the speaker terminals on the speaker wire block connector, matching polarity of positive to positive and negative to negative.

NOTE: For vertical speakers and 1-CH soundbar models (1-CH), connect to center +/- terminals on block connector (center channel) only. 2-CH: Connect to outer +/- (Left and Right) terminals. 3-CH: Connect to all +/- (Left, Center, and Right) terminals (see Figure 3).

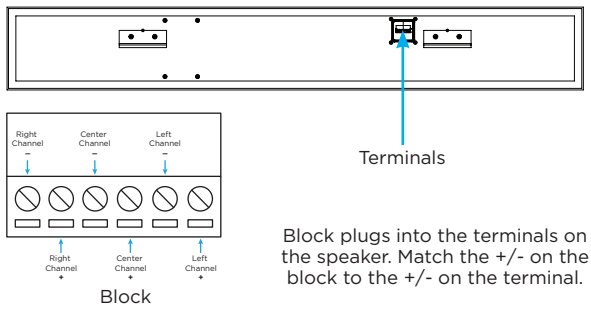


Figure 3: Connect Speaker Wire to Terminal Block

7. Attach the wire block connector to the back of the speaker.
8. Lift the speaker into position, aligning the brackets on the back of the speaker with the Z Brackets on the wall.
9. Lower the speaker into place until the brackets engage and the speaker is fully secured.

IMPORTANT: Do not release the speaker until you have confirmed it is fully engaged on the both wall brackets.

10. If the Z Brackets are not making contact to properly mount, use the provided shim set to adjust the bracket on the wall. Insert the shims behind the BOTTOM of each Z Bracket in the areas that need to be repositioned.
11. Reattach the grille by pressing each node along the corners and edges into place until fully seated.

©2026 Sonance. All rights reserved. Sonance is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest Sonance product specification information visit our website: www.sonance.com • SONANCE • 991 Calle Amanecer • San Clemente, CA 92673 • (949) 492-7777 10.27.2026