Cuisinart®

Electric Wine Opener

CWO-25

THREE YEAR WARRANTY · 3 YEAR · CUISINART

GARANTÍA DE TRES AÑOS



Instruction & Recipe Booklet

ESPAÑOL INCLUIDO

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONTENTS

Important Safeguards....2
Parts....4
Operating Instructions....4
Cleaning and Maintenance....6
After Use....6
Troubleshooting....6
Warranty....7

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Remove all packaging materials and any promotional labels or stickers from the appliance before first use. Do not allow children access to the plastic packaging bags.
3. **Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.**
4. To protect against risk of electric shock, do not put the electric appliance in water or other liquids. This may cause personal injury and/or damage to the product.
5. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
6. Do not use the electric wine opener for other than its intended use.
7. This product is intended for normal domestic household use only.
8. When using or charging the electric wine opener, keep your workspace clean and free from potential hazards.
9. For indoor use only. Do not expose the electric wine opener or charging base to rain or other extreme conditions.
10. Never force the electric wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at its intended speed.
11. Do not touch or adjust the electric wine opener's mechanism or the corkscrew spiral. Hold the electric wine opener by its housing only.
12. Do not attempt to open bottles if the switch is not working correctly.

13. Do not attempt to open the electric wine opener or the charging base. They have no user-serviceable parts. Charge the electric wine opener only by using the charging base and power cord supplied.
14. Never remove the plug from the socket by pulling the power adapter.
15. Use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, injury or damage to the product.
16. Do not use any accessories or attachments with this appliance other than those recommended by Cuisinart. Use only the power adapter supplied with this product.
17. Do not let cord hang over edge of table or counter or touch hot surfaces.
18. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
19. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
20. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
21. Unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the adapter and pull from the outlet. Never pull from the power cord.

CAUTION: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.


SAVE THESE INSTRUCTIONS.

FOR HOUSEHOLD USE ONLY.

Before you use this product for the first time, please take a few moments to read these instructions. Keep them for future reference.

PARTS

1. Wine opener
    a. REMOVE switch – Press to remove the cork from bottle
    b. EJECT switch – Press to eject cork from opener
2. Charge indicator light
3. Charging base
4. Foil cutter
5. Power adapter

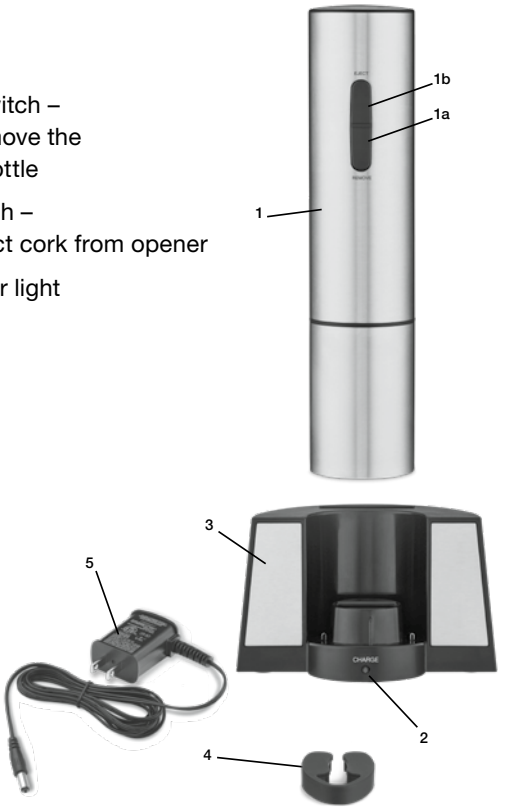

OPERATING INSTRUCTIONS

Connection and Use

This appliance is for 120 volts only and should not be used with a converter.

We recommend that you charge your electric wine opener for at least 12 hours before using for the first time. Please follow the instructions for charging as stated below:

Charging Your Electric Wine Opener

Plug one end of the power adapter into the back of the charging base and the other end into an electrical outlet. Place the electric wine opener into the charging base, making sure that it is firmly in position and that it is fully engaged with the charging connection. The blue indicator light will illuminate. **It will take approximately 12 hours to charge your electric wine opener.** The charging light will remain blue during the charging process, even when fully charged.

Your wine opener can open approximately 50 bottles of wine on a full charge.

Foil Cutter

For your convenience, this unit has a foil cutter, which can be stored in the base of the unit. Before removing the cork, you must remove foil to expose top part of cork surface (see Fig. 1).
Attach foil cutter to the top of the wine bottle. Keep hand on lower part of bottle and turn foil cutter in twisting motion to remove foil. Remove foil to expose top part of cork surface.



(Fig. 1)

CAUTION: Blade on foil cutter is sharp. Please keep fingers away from cutter's sharp edges.

To Operate Your Electric Wine Opener

Press the REMOVE switch to remove the cork from the bottle. After the cork has been removed from the bottle, press the EJECT switch to release the cork from the wine opener (see Fig. 2).



(Fig. 2)

1. Place the wine opener on top of the wine bottle, making sure that it remains as straight/upright as possible at all times. If you hold the electric wine opener at an angle to the bottle it will not remove the cork properly.
2. Hold the wine opener and bottle firmly. Press the REMOVE switch. The corkscrew spiral will turn in a counterclockwise direction and enter the cork, gradually removing it from the bottle. When the mechanism stops, the cork has been fully removed from the bottle (see Fig. 3).
3. Lift the wine opener up and away from the bottle. To eject the cork, press the EJECT switch. The spiral will turn in a clockwise direction and release the cork from the wine opener (see Fig. 4).
4. Always return the wine opener to the charging base when done. This will protect the unit while not in use.



(Fig. 3)



(Fig. 4)

CLEANING, STORAGE AND MAINTENANCE

Always unplug the appliance from the electrical outlet before cleaning.

Make sure all the parts are clean and dry before storing.

To clean housing, wipe with a clean, damp cloth.

Never immerse power adapter, charging base or housing in water or any other liquids.

Never submerge the motor base in water or other liquids, or place in a dishwasher.

Any other servicing should be performed by an authorized service representative.

Fully charge the battery once every 3 months at minimum. This will help avoid deep discharge and preserve battery performance.

AFTER USE

We recommend that you return your appliance to the charging base so that it is fully charged and available for use at any time.

TROUBLESHOOTING

Wine opener doesn't turn on	Your wine opener may need to be charged. Charge it with the original charger for at least 3 hours, then try turning it on again.
Not charging or no charging light?	Make sure the charger is plugged into a working outlet. Then check the charging port, base, and contact points for any dirt or debris. Gently clean them if needed, then reconnect the wine opener. The charging light should turn on.

If your wine opener is still unresponsive after trying the steps above, please contact Customer Service at 1-800-726-0190 for assistance.

LIMITED WARRANTY

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® Electric Wine Opener ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of THREE (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of God or other events beyond Cuisinart's control;
- Damage caused by you or any nonauthorized third party, even though necessary repairs and maintenance might be performed by any company;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated.

It is recommended that you visit the website **https://www.cuisinart.com/register-your-product.html** for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that

you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

HASSLE-FREE WARRANTY

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at **https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/**, or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the Product is still under warranty.

CALIFORNIA RESIDENTS ONLY

The THREE (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS

LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES.

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, LOSS OF GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC

1 Cummings Point Road

Stamford, CT 06902

1-800-726-0190

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: Cuisinart

Model No.: CWO-25XX, CWO-25XXX, CWO-25XXXX, CWO-25XXXXX, CWO-25XXXXXX

Description: Electric Wine Opener

Responsible Party: Conair Corporation - 1 Cummings Point Road - Stamford, CT 06902 - (203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 08/17/2022

ÍNDICE

Medidas de seguridad importantes 11
Piezas 13
Instrucciones de operación 13
Limpieza y mantenimiento 15
Después del uso 15
Solución de problemas 15
Garantía 16

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

1. **LEA TODAS LAS INSTRUCCIONES.**
2. Retire el aparato del material de embalaje y quite las etiquetas promocionales pegadas al cuerpo del aparato antes del primer uso. Mantenga las bolsas de plástico fuera del alcance de los niños.
3. **No utilice este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; llame al servicio de atención al cliente del fabricante para obtener información sobre cómo hacer revisar, reparar o ajustar el aparato.**
4. Para reducir el riesgo de electrocución, no coloque la base del aparato en agua u otro líquido; esto podría causar heridas o dañar el aparato.
5. Para reducir el riesgo de incendio, no haga funcionar el aparato en presencia de gases o vapores explosivos o inflamables.
6. No lo use para ningún otro fin que no sea el indicado.
7. Para uso doméstico solamente.
8. Utilice o recargue el aparato en un lugar limpio, lejos de los peligros.
9. No lo utilice en exteriores. No lo exponga a la lluvia o a la intemperie.
10. No fuerce el sacacorchos sobre la botella ni intente acelerar el mecanismo de descorche. La velocidad está programada para asegurar un funcionamiento óptimo.
11. No toque ni ajuste el mecanismo interno o la barrena. Sostenga el aparato por la carcasa solamente.

12. No utilice el aparato en caso de mal funcionamiento del botón de control.
13. No intente desarmar el aparato o la base de carga; no contienen ninguna pieza que pueda ser reparada/cambiada por el usuario. Utilice solamente la base de carga y el cable provistos para cargar el aparato.
14. Nunca jale el cable para desconectarlo.
15. El uso de accesorios no recomendados o vendidos por Cuisinart presenta un riesgo de incendio, electrocución o heridas.
16. Solamente use los accesorios y aditamentos recomendados por Cuisinart. Utilice únicamente el adaptador sector proporcionado con este aparato.
17. No permita que el cable cuelgue del borde de la encimera o de la mesa, ni que haga contacto con superficies calientes.
18. Los niños o las personas que carezcan de la experiencia o de los conocimientos necesarios para manipular el aparato, o aquellas cuyas capacidades físicas, sensoriales o mentales estén limitadas, no deben utilizar este aparato. Supervise el uso de este aparato cuidadosamente cuando sea usado cerca de niños. No permita que los niños jueguen con este aparato.
19. No coloque el aparato sobre o cerca de un quemador a gas o una hornilla eléctrica caliente, ni en un horno caliente.
20. No haga funcionar el aparato debajo o dentro de un armario/gabinete. **Siempre desconecte el aparato antes de guardarlo en un armario/gabinete.** Dejar el aparato conectado presenta un riesgo de incendio, especialmente si este toca las paredes o la puerta del armario/gabinete cuando se cierra.
21. Desenchufe el aparato cuando no esté en uso, antes de instalar/sacar piezas y antes de limpiarlo. Para desenchufar, agarre el adaptador y jálelo para sacarlo de la toma de corriente. Nunca jale el cable.

PRECAUCIÓN: la barrena es muy filosa; manipúlela con mucho cuidado. Para reducir el riesgo de herida grave o daño al aparato, mantenga las manos y los utensilios alejados durante el funcionamiento.

GUARDE ESTAS INSTRUCCIONES.

PARA USO DOMÉSTICO SOLAMENTE.

Lea atentamente el modo de empleo antes de utilizar este aparato por primera vez. Guarde el modo de empleo para futura referencia.

PIEZAS

1. Sacacorchos
   a. Botón REMOVE (descorchar) – oprima este botón para descorchar la botella
   b. Botón EJECT (liberar) – oprima este botón para liberar el corcho de la barrena
2. Indicador luminoso de carga
3. Base de carga
4. Descapsulador
5. Adaptador



INSTRUCCIONES DE OPERACIÓN

Carga y uso

Conecte el cable a una toma de corriente de 120V solamente; no utilice el aparato con un convertidor de voltaje.

Le aconsejamos que cargue el aparato durante por lo menos 12 horas antes del primer uso, según se describe a continuación.

Instrucciones de carga

Conecte el cable a la base de carga y enchufe el adaptador en una toma de corriente. Coloque el aparato en la base de carga, asegurándose de que esté debidamente puesto. El indicador luminoso azul se encenderá. **Demorará aproximadamente 12 horas para cargar el aparato.**
El indicador luminoso permanecerá encendido incluso cuando el aparato se haya cargado por completo.

Su sacacorchos puede abrir hasta 50 botellas con una carga completa.

Descapsulador

Para su comodidad, su sacacorchos incluye un descapsulador, que se puede guardar en la base. Antes de extraer el corcho, deberá cortar la cápsula de aluminio de la botella (Fig. 1). Sujete el descapsulador al cuello de la botella. Sostenga firmemente la botella y gire el descapsulador para cortar la cápsula. Quite la cápsula.



(Fig. 1)

PRECAUCIÓN: el descapsulador es muy filoso; mantenga los dedos alejados de los filos.

Instrucciones de operación

Presione el botón REMOVE para descorchar la botella. Luego presione EJECT para liberar el corcho (Fig. 2).

1. Coloque el sacacorchos en el gollete de la botella, lo más recto posible. vNota: sostener el sacacorchos en ángulo con respecto a la botella impedirá el buen funcionamiento del aparato.
2. Sostenga el aparato y la botella firmemente y oprima el botón REMOVE. La barrena penetrará en el corcho y lo extraerá poco a poco. El mecanismo se detendrá automáticamente una vez extraído el corcho (Fig. 3).
3. Retire entonces el sacacorchos del gollete de la botella. Luego oprima EJECT y la barrena liberará el corcho (Fig. 4).
4. Vuelva a colocar el sacacorchos en la base de carga después de cada uso; esto lo protegerá cuando no esté en uso.



(Fig. 2)



(Fig. 3)



(Fig. 4)

LIMPIEZA, ALMACENAMIENTO Y MANTENIMIENTO

Siempre desconecte el aparato antes de limpiarlo.

Asegúrese de que todas las piezas estén limpias y secas antes de guardar el aparato.

Limpie el cuerpo del aparato con un paño limpio, ligeramente humedecido.

Nunca sumerja el adaptador, la base de carga o el aparato en agua u otro líquido.

Nunca ponga el bloque-motor en agua u otro líquido, ni en el lavavajillas.

Cualquier otro servicio debe ser realizado por un técnico autorizado.

Carga la batería por completo al menos una vez cada 3 meses. Esto ayudará a evitar una descarga profunda y a preservar el rendimiento de la batería.

DESPUÉS DEL USO

Le aconsejamos que vuelva a colocar el aparato en la base de carga para que esté completamente cargado y disponible en cualquier momento.

SOLUCIÓN DE PROBLEMAS

El abridor de vino no se enciende	Es posible que tu abridor de vino necesite cargarse. Cárgalo con el cargador original durante al menos 3 horas y, después, intenta encenderlo de nuevo.
¿No carga o no se enciende la luz de carga?	Asegúrate de que el cargador esté conectado a una toma de corriente que funcione. Luego, revisa el puerto de carga, la base y los puntos de contacto para ver si hay suciedad o residuos. Límpialos con cuidado si es necesario y, a continuación, vuelve a conectar el abridor de vino. La luz de carga debería encenderse.

Si su abridor de vino sigue sin funcionar después de haber seguido los pasos anteriores, comuníquese con el Servicio de Atención al Cliente al 1-800-726-0190 para obtener ayuda.

GARANTÍA

Sujeto a las exclusiones y limitaciones contenidas en este documento, Conair LLC/Cuisinart (“Cuisinart”) garantiza que la máquina para sacacorchos eléctrico de Cuisinart® estará libre de defectos de materiales y fabricación en condiciones normales de uso doméstico durante un período de TRES (3) años a partir de la fecha de compra del Producto en su embalaje original sellado, a menos que se especifique lo contrario en esta Garantía Limitada. Esta Garantía Limitada es solo para consumidores de Estados Unidos (definidos aquí como compradores al por menor para uso personal, familiar o doméstico) que compren originalmente el Producto a Cuisinart o a un revendedor autorizado de Cuisinart. Si no está seguro de si un minorista u otro punto de venta es un revendedor autorizado de Cuisinart, póngase en contacto con Cuisinart.

Esta Garantía Limitada NO cubre:

- El desgaste normal;
- Cualquier Producto adquirido por compradores comerciales o para usos comerciales o no domésticos;
- Accesorios, piezas o programas añadidos al Producto después de que Cuisinart lo haya enviado;
- Cualquier costo asociado con el reemplazo o reparación del Producto, incluyendo mano de obra, instalación u otros costos incurridos por usted sin previa aprobación de Cuisinart;
- Daños, defectos y fallas debidos a: (1) causas externas, incluyendo el envío, accidentes, problemas con el suministro eléctrico (el Producto está diseñado para su uso exclusivo con enchufes de 120 V), condiciones anormales (como mecánicas o medioambientales); (2) uso no conforme a las instrucciones del Producto; (3) uso indebido, negligencia, alteración no autorizada, reparación no autorizada; y (4) casos fortuitos u otros acontecimientos fuera del control de Cuisinart;
- Daños causados por usted o por terceros no autorizados, aunque cualquier empresa puede realizar las reparaciones y el mantenimiento necesarios;
- Los daños causados por accesorios o repuestos no autorizados específicamente por Cuisinart pueden anular esta Garantía Limitada; y
- Cualquier Producto cuyas marcas de identificación originales (marca comercial o número de serie) hayan sido retiradas, alteradas o borradas del Producto.

Se recomienda llenar el formulario de registro disponible en **https://cuisinart.com/register-your-product.html** a fin de facilitar la verificación de la fecha de compra original de este producto. Sin embargo, no es necesario registrar el producto para recibir servicio bajo esta garantía. En ausencia de prueba de la fecha de compra, el período de garantía será calculado a partir de la fecha de fabricación del producto.

GARANTÍA SIN DIFICULTADES

Si el Producto objeto de esta Garantía Limitada falla durante el período de garantía por razones cubiertas por esta Garantía Limitada, Cuisinart, a su elección, reparará el Producto, sustituirá el Producto por otro idéntico o razonablemente equivalente, o si Conair no puede reparar o sustituir el Producto, reembolsará al consumidor el precio de compra, menos la cantidad directamente atribuible al uso anterior del Producto por parte del consumidor. Para obtener una etiqueta de devolución, contáctenos, visitando **https://www.cuisinart.com/customer-care/product-assistance/product-inquiry//** o llamando a nuestro servicio de atención al cliente, al **1-800-726-0190**, para hablar con un representante.

Tras la recepción del Producto, Cuisinart lo inspeccionará y, si lo requiere esta Garantía Limitada, intentará reparar, reemplazar o reembolsarlo en un plazo de treinta (30) días. No obstante, pueden producirse retrasos fuera del control de Cuisinart, en cuyo caso dicho plazo podrá ampliarse en la medida en que sea razonablemente necesario.

IMPORTANTE: Si debe llevar el producto defectuoso a un centro de servicio no autorizado, por favor informe al personal del centro de servicio que deben llamar al servicio de atención al cliente de Cuisinart, al **1-800-726-0190**, a fin de diagnosticar el problema correctamente, usar las piezas correctas para repararlo y comprobar que el producto aún esté bajo garantía.

RESIDENTES DE CALIFORNIA

El período de Garantía Limitada de TRES (3) años comienza en la fecha de entrega del Producto, que puede ser diferente de la fecha de compra del Producto. Los residentes en California también tienen la opción de obtener los beneficios de esta Garantía Limitada devolviendo el producto defectuoso (A) a la tienda donde lo compraron, o (B) a otra tienda que venda productos Cuisinart® del mismo tipo. La tienda podrá, a su elección, reparar el producto, referir al consumidor a un centro de servicio independiente, sustituir el producto por uno idéntico o razonablemente equivalente, o reembolsar al consumidor el precio de compra menos la cantidad directamente atribuible al uso anterior del producto por el consumidor. Los residentes de California también pueden, si lo desean, enviar el producto defectuoso directamente a Cuisinart para que sea reparado o sustituido por uno idéntico o razonablemente equivalente. Para esto, deben llamar a nuestro servicio de atención al cliente al **1-800-726-0190**. Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

ESTA GARANTÍA LIMITADA LE OTORGA DERECHOS LEGALES ESPECÍFICOS, Y TAMBIÉN PUEDE TENER OTROS DERECHOS QUE VARÍAN DE UN ESTADO A OTRO O EN FUNCIÓN DE LA JURISDICCIÓN. EN CASO DE INCUMPLIMIENTO DE ESTA

GARANTÍA LIMITADA, USTED PUEDE RECLAMAR LA SUSTITUCIÓN, UNA INDEMNIZACIÓN POR DAÑOS Y PERJUICIOS U OTRAS SANCIONES.

LIMITACIONES DE RESPONSABILIDAD/LIMITACIONES Y EXCLUSIONES ADICIONALES

TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS (O JURISDICCIONES) NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. LA RESPONSABILIDAD DE CUISINART BAJO ESTA O CUALQUIER OTRA GARANTÍA, IMPLÍCITA O EXPRESA, SE LIMITA A LA REPARACIÓN, SUSTITUCIÓN O REEMBOLSO, SEGÚN LO ESTABLECIDO ANTERIORMENTE. ESTOS RECURSOS SON LOS ÚNICOS Y EXCLUSIVOS EN CASO DE INCUMPLIMIENTO DE LA GARANTÍA. EN LA MEDIDA MÁXIMA PERMITIDA POR LA LEY, CUISINART NO SE HACE RESPONSABLE DE NINGÚN DAÑO DIRECTO, INDIRECTO, ESPECIAL, INCIDENTAL O CONSECUENTE RESULTANTE DE CUALQUIER INCUMPLIMIENTO DE LA GARANTÍA O BAJO CUALQUIER OTRA TEORÍA LEGAL (INCLUYENDO, PERO NO LIMITADO A, LUCRO CESANTE, TIEMPO DE INACTIVIDAD, PÉRDIDA DEL FONDO DE COMERCIO, DAÑOS O SUSTITUCIÓN DE EQUIPOS Y BIENES, Y CUALQUIER COSTE DE RECUPERACIÓN, REPROGRAMACIÓN O REPRODUCCIÓN DE CUALQUIER PROGRAMA O DATOS ALMACENADOS EN O UTILIZADOS CON UN SISTEMA QUE CONTENGA EL PRODUCTO), INCLUSO SI CUISINAART HA SIDO ADVERTIDO DE LA POSIBILIDAD DE TALES DAÑOS. ALGUNOS ESTADOS (O JURISDICCIONES) NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE DAÑOS ESPECIALES, INCIDENTALES O CONSECUENTES, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS (O JURISDICCIONES) NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED.

Esta Garantía Limitada es emitida por:

Conair LLC

1 Cummings Point Road

Stamford, CT 06902

1-800-726-0190

AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo. Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que pueden causar un funcionamiento no deseado.

NOTA: este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites han sido concebidos para proporcionar una protección razonable contra interferencias perjudiciales en las instalaciones de edificios. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no ha sido instalado o usado conforme a las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo produce alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.
- Conectar el equipo a un circuito distinto al que esté conectado el receptor.
- Consultar con el distribuidor o un técnico especializado en radio/TV.

DECLARACIÓN DE CONFORMIDAD DEL PROVEEDOR

Marca: Cuisinart

Modelo: CWO-25XX, CWO-25XXX, CWO-25XXXX, CWO-25XXXXX, CWO-25XXXXXX

Descripción: Sacacorchos eléctrico

Parte responsable: Conair Corporation - 1 Cummings Point Road - Stamford, CT 06902 - (203) 351-9000

Normas: normas de la FCC, Sección 15, subsección B, ANSI C63.4-2014. Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que pueden causar un funcionamiento no deseado.

FECHA DE PUBLICACIÓN: 08/17/2022

©2026 Cuisinart
a division of Conair LLC
7475 North Glen Harbor Boulevard
Glendale, AZ 85307

15CE016670

IB-14118-ESP-I